



DTB November 12, 2007

Order No.: P-B-42.46/84

Supersedes:

Group: 42

SUBJECT: Model 211.026/065/070/076/265/276, VIN Range A040665 up to A589444

Model 211.082/083/282/283, VIN Range X097815 up to X161341

SBC or Battery State Fault Message Displayed in Instrument Cluster

If you receive customer reports in the above model vehicles that a SBC or battery state fault message appears in the instrument cluster, the cause may be the result of damage to the engine or interior compartment wiring harness in the area of the auxiliary battery (G1/1). To remedy, perform the following.

- 1. Check the engine / interior wiring harness underneath the auxiliary battery area (Figure 1, circle) for damage. Refer to WIS document AR54.10-P-0007T.
- 2. If the engine compartment wiring harness is damaged, replace the harness. Refer to EPC net for specific part number per model.
- 3. If the interior compartment wiring harness is damaged, repair as per the repair method described in WIS document AR00.19-P-0100A.

Note: The interior compartment wiring harness contains the supply line for the auxiliary battery relay.

4. After completing the replacement or repair of the wiring harness, glue felt to the body as shown in the circled area of Figure 1.

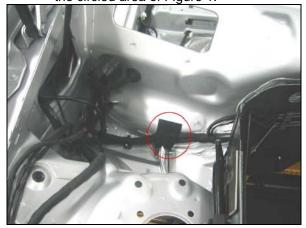


Figure 1 P-B-42.46/84

This bulletin has been created and maintained in accordance with MBUSA-SLP S423QH001, Document and Data Control, and MBUSA-SLP S424HH001, Control of Quality Records.

www.startekinfo.com

Parts Information

Qty.	Part Name	Part Number
1	Felt strip	A001 983 23 10 ¹

¹ Sufficient for 50 cars, Submit as Local Purchase – FTA00008, Qty 1, handling is included

Note: The following allowable labor operations should be used when submitting a warranty claim for this repair. This information has been generated on November 12, 2007. Please refer to Netstar → Star TekInfo → Star Time for the most current labor time allowance.

In Case of Warranty

Operation: Short test, perform (54-1001)

Back-up battery, R&R/replace if required (54-1125)

Electrical line for ... (specify), repair (54-9204)

Damage Code	Operation Number	Time (hrs.)	Model Indicator (s)
59101 74	54 1011	0.3 hrs.	T1, T2, T3, T4, T5, T6, U1,
			U3, U4, U5
	54 1125	0.4 hrs.	T1, T2, T3, T4, T5, T6, U1,
			U3, U4, U5
If necessary	54 9204	0.4 hrs. *	T1, T2, T3, T4, T5, T6, U1,
•			U3, U4, U5

^{*}Separate time punch required