


MODEL 204.3, 207, 212

Shown with code (U60) Pedestrian protection

- 1 Lever
- 2 Engine hood
- 3 Locking lever
- 4 Engine hood hinge
- 5 Lock
(with code (U60) Pedestrian protection)
- 6 Clamping lever
(with code (U60) Pedestrian protection)

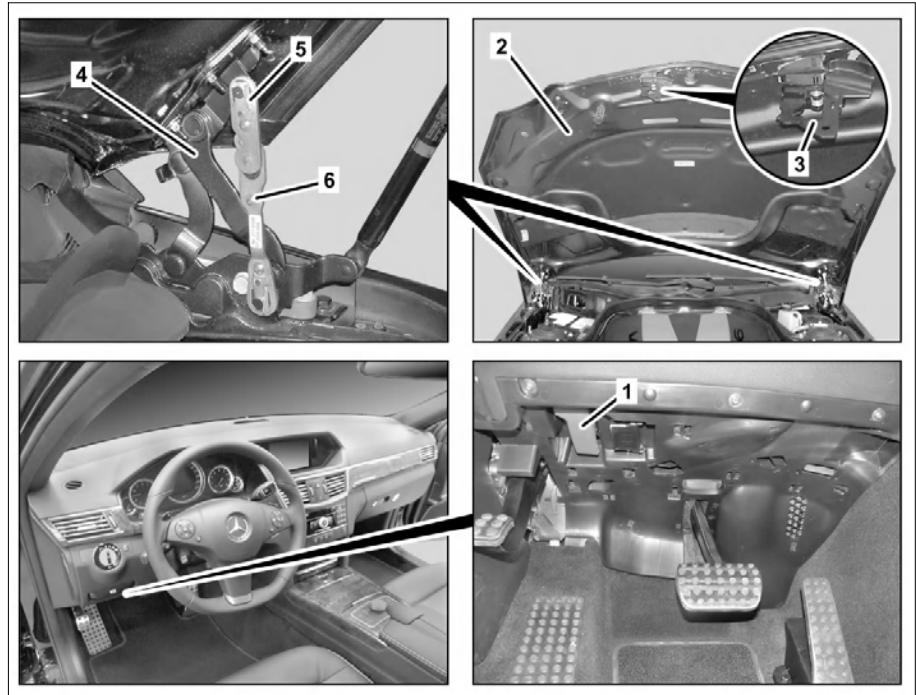

P88.40-2855-06

	Open		
Danger!	Risk of injury caused by fingers being pinched or crushed when removing, installing or aligning hoods, doors, trunk lids, liftgates or sliding roof	Keep body parts and limbs well clear of moving parts.	AS00.00-Z-0011-01A
1	Pull release lever (1) in driver's footwell to release engine hood (2)		
2	Press locking lever (3) upward and open engine hood (2)	Engine hood (2) is held by first stage of gas-filled struts.	
	Move to upright position		
3	Remove left and right clamping lever (6) at top on left and right engine hood hinge (4)	On vehicles with code (U60) Pedestrian protection	AR91.60-P-0920EW
4	Push engine hood (2) upward and position vertically.	Engine hood (2) is held by second stage of gas-filled struts.	
	Close		
5	Install left and right clamping lever (6) at top on left and right engine hood hinge (4)	On vehicles with code (U60) Pedestrian protection Press engine hood (2) down to first stage of gas pressure struts	
6	Close lock (5) on left and right clamping lever (6)	On vehicles with code (U60) Pedestrian protection	
7	Close engine hood (2)		
8	Ensure that engine hood locks (2) properly		