




Model 211.0/2/6

- 1 Driver airbag  
 2 Steering wheel  
 3 Lock tabs  
 4 Electrical connectors  
 R12/13 Driver airbag ignition squib 1  
 R12/14 Driver airbag ignition squib 2

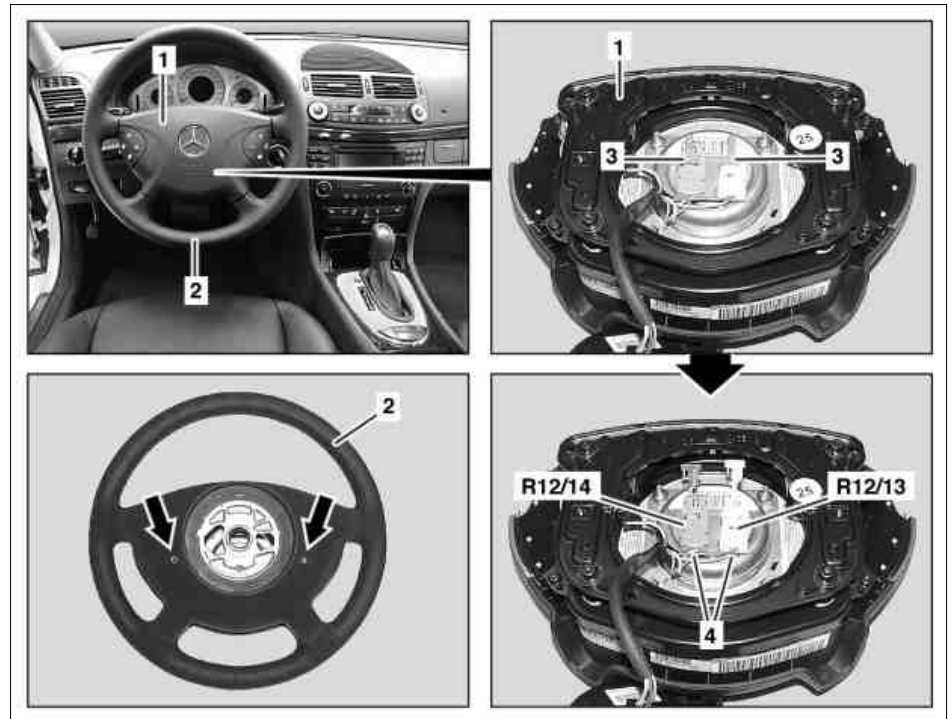

P91.60-2429-06

<b>Danger !</b>	<b>Risk of injury</b> during testing and repair operations related to pyrotechnical components	Do not expose pyrotechnical components to temperatures above 100 °C or 212 °F. Disconnect current supply when working on such components.	AS91.00-Z-0008-01A
	Information on preventing damage to electronic components due to electrostatic discharge		AH54.00-P-0001-01A
	Information, assessment and legal requirements when working with, handling and storing pyrotechnical components		AH91.00-Z-0000-10A
	<b>Remove/install</b>		
1	Move steering column adjustment to rear		
2	Switch on ignition and store transmitter key outside of transmission range (min. 2 m)		
3	Disconnect ground line to battery	Model 211.0/6 Model 211.2	AR54.10-P-0003T AR54.10-P-0003TA
4	Insert screwdriver bit into openings (arrows) at rear on steering wheel (2) and remove screws/bolts from driver airbag (1)	Bolt, airbag to steering wheel  Model 211.0 with code 494 (US version) Model 211.2 with code 494 (US version) Screwdriver bit	*BA91.60-P-1001-01A  *BA91.60-P-1007-01G  *126589001000
5	Lift driver airbag (1) at steering wheel (2)		
6	Unclip lock tabs (3)		
7	Release and disconnect electrical connectors (4) from driver airbag squib 1 (R12/13) and driver airbag squib 2 (R12/14)	Removal lever	*203589043300
8	Release and disconnect electrical connector from multifunction steering wheel		
9	Remove driver airbag (1) from steering wheel (2)		
10	Install in the reverse order		

	<b>Check</b>		
11	Check and erase vehicle fault memory using diagnostic system	When replacing the driver airbag (1).	
			AD00.00-P-2000-04A

 Airbag


Number	Designation		Model 211.0 except code 494 (US version)	Model 211.2 except code 494 (US version)
BA91.60-P-1001-01A	Bolt, airbag to steering wheel	Nm	8	8

 Airbag


Number	Designation		Model 211.6
BA91.60-P-1001-01A	Bolt, airbag to steering wheel	Nm	8

 Airbag

Number	Designation		MODEL 211.0 with CODE 494	MODEL 211.2 with CODE 494
BA91.60-P-1007-01G	Screw/bolt, airbag to steering wheel	Nm	8	8

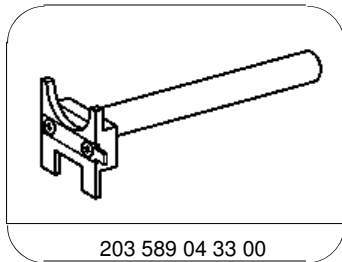

Removal lever

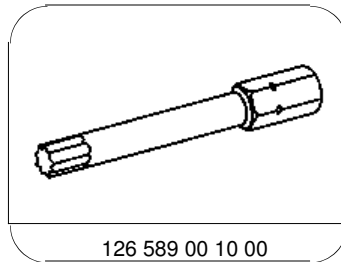

Screwdriver bit