

**Nm** Front axle stabilizer bar

Number	Designation	Model 211.08/09/ 28/29		
BA32.20-P-1002-02B	Self-locking nut of connecting rod to torsion bar	M10	Nm	-
		M10×1.5	Nm	-
		M12×1.5	Nm	95
		M14×1.5	Nm	-

**Removal**


- 1 Unscrew self-locking nut (01) and bolt (02) of link rod (10) at stabilizer bar (11).

**Checking**

- 2 Check rubber mount of link rod (10) for damage and replace link rod (10) if necessary.

**Install**

- 3 Screw on self-locking nut (01) and bolt (02) of link rod (10) on stabilizer bar (11). **Nm**

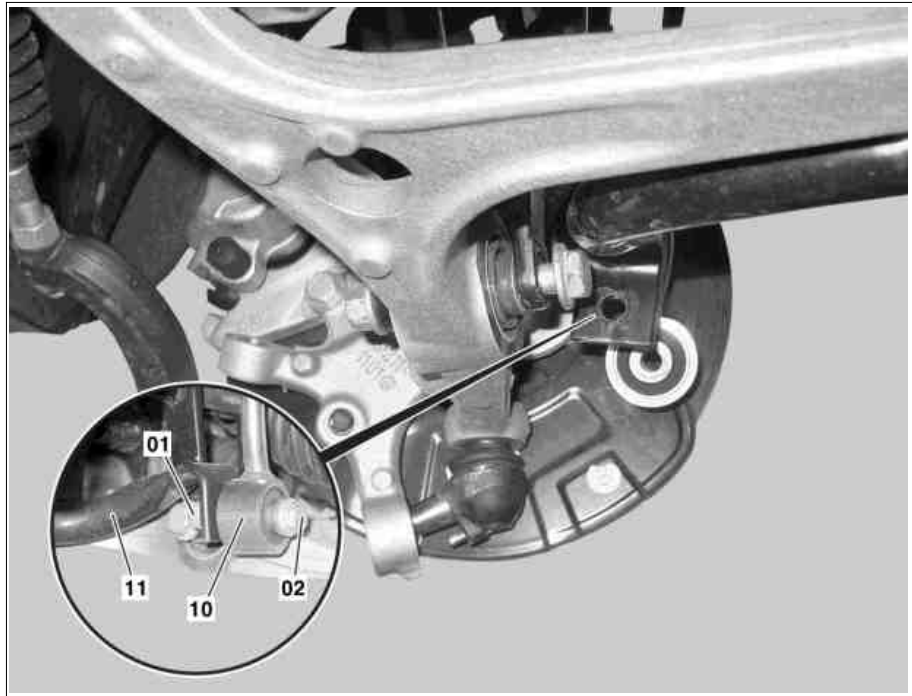

P33.20-2085-06

- i** Replace self-locking nut (01). Only tighten self-locking nut (01) when vehicle is ready to drive, turn steering if necessary.