


Shown: fuse and relay box

f1 to f20 Fuses
 N10/2 Rear SAM control unit with fuse and relay module
 A to C Relays
 E to H Relays
 X Direction of travel

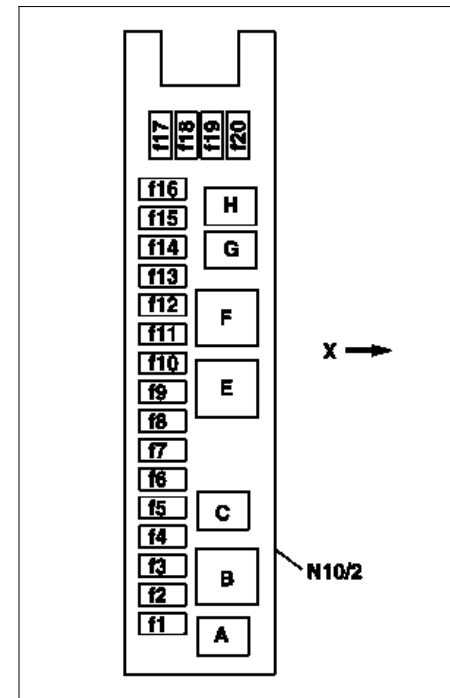

P54.15-2416-03

Fuse	Clamping device	Cable ID (cable fused)	Fused function	Rating in amperes (A)
f1	15R	2.5 BKYE	Valid for partially electric front passenger seat adjustment (standard equipment): <ul style="list-style-type: none"> Front passenger partially-electric seat adjustment switch (S23/1) 	30
	15R	2.5 RDYE	Valid for code (275) electrically adjustable driver seat, steering column and outside mirrors with memory: <ul style="list-style-type: none"> Driver-side front seat adjustment control unit, with memory (N32/1) 	30
f2	15R	2.5 BKYE	Valid for partially electric driver seat adjustment (standard equipment): <ul style="list-style-type: none"> Driver partially-electric seat adjustment switch (S22/1) 	30
	15R	2.5 WHBU	Valid for code (275) electrically adjustable driver seat, steering column and outside mirrors with memory: <ul style="list-style-type: none"> Passenger-side front seat adjustment control unit with memory (N32/2/) 	30
f3	30	0.75 RDVT	Valid for code (475) Tire pressure monitor (Beru): <ul style="list-style-type: none"> TPM [RDK] control unit (N88) 	7.5
	30	0.75 BKRD	Valid for code (220) Parktronic: <ul style="list-style-type: none"> PTS control unit (N62) 	7.5
	30	0.75RDBK	Valid for code (860) TV tuner: <ul style="list-style-type: none"> TV tuner (A2/10) 	7.5
	30	0.75 RDWH	Valid for code (527) COMAND APS (with navigation): <ul style="list-style-type: none"> Navigation processor (N41/1/) 	7.5
f4	30	2.5 RDGN	Valid except engine 113.990 (E 55 AMG): Fused via fuel pump relay (N10/2kA): <ul style="list-style-type: none"> Fuel pump (M3) 	15
	30	0.75 RDWH	Valid for engine 113.990 (E 55 AMG): Fused via charge air cooler circulation pump relay (N10/2kA): <ul style="list-style-type: none"> Charge air cooler circulation pump (M44) 	15
f5	30	-	● Spare relay 2 (N10/2kC)	-
f6	30	4.0 RD	Valid for code (810) sound system: <ul style="list-style-type: none"> Audio gateway control unit (N93/1) 	40
f7	15R	2.5 BKGY	Valid for model 211.2 with code (890) Automatic rear-end door: <ul style="list-style-type: none"> Rear-end door control unit (N111) 	15
f8	30	0.5 BDYE	Valid for code (882) interior monitoring	7.5

f9	30	2.5 RDBK	● Overhead control panel control unit (N70)	25
f10	30	2.5 RDYE	● Heated rear window (R1)	40
f11	30	2.5 RD	Valid for model 211.2 with code (890) Automatic rear-end door: ● Rear-end door control unit (N111)	20
f12	15R	1.5 BKGY	● Cargo area connector box (X58/4)	15
f13	15R	1.5 BKYE	● Interior socket (X58/1)	15
f14	15R	-	-	5
f15	30	0.5 RDYE	Fused via filler cap polarity reverser 1 relay (N10/2KG): ● Fuel filler flap CL [ZV] motor (M14/10)	10
	30	0.5 BN	Fused via filler cap polarity reverser 2 relay (N10/2KH): ● Fuel filler flap CL [ZV] motor (M14/10)	10
f16	30	2.5 RDGN	Valid for code (401) front deluxe seats, incl. seat heating and seat ventilation and/or for code (872) Electrically heated left and right rear seats and/or for code (873) Heated left and right front seats: ● HS [SIH] and seat ventilation control unit (N25/7)	20
f17	30	2.5 RD	Valid for code (550) Trailer hitch: ● Trailer connection unit control unit (N28/1)	20
f18	30	2.5 RD	Valid for code (550) Trailer hitch: ● Trailer connection unit control unit (N28/1)	20
f19	30	2.5 RDGY	Valid for code (404) left multicontour seat and/or code (405) right multicontour seat: ● Multicontour seat pneumatic pump (M40)	20
f20	30	1.0 RD	Valid for code (540) Electric roller blind for rear window: ● Rear window roller blind relay (K74)	7.5