


MODEL 211.0

Left antenna amplifier module

- 1 Nut
- 2 Nut
- 3 Electrical connections
- 4 Wiring connector
- 5 Tie strap
- 6 Headliner wiring harness

A2/64 Left antenna amplifier module

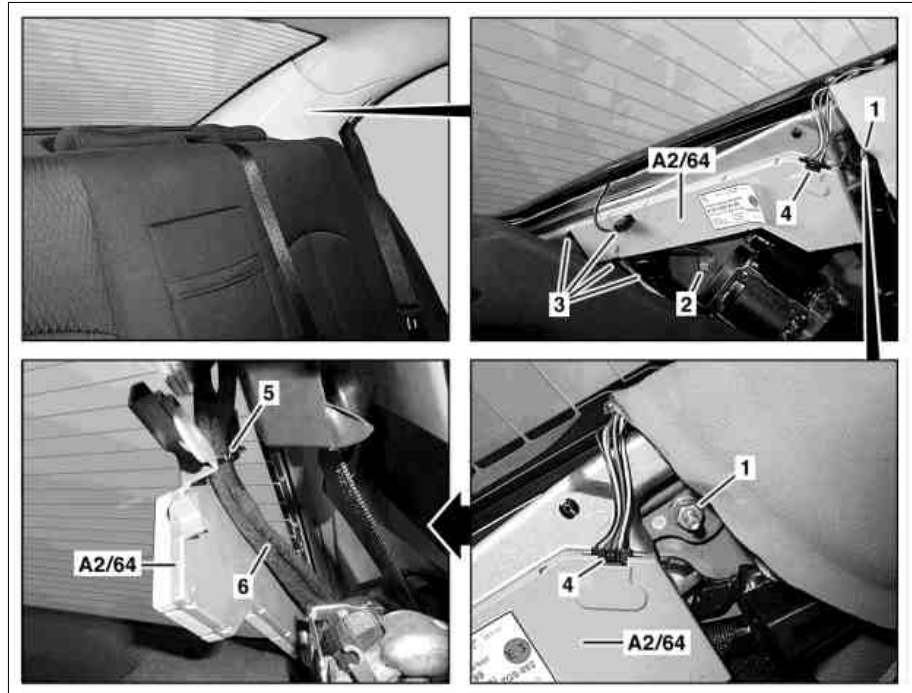

P82.62-2590-06

Modification notes

15.1.04	Disconnect/connect/remove ground lead from battery		
---------	--	--	--

☒ ☒	Remove/Install		
⚠	Notes on avoiding damage to electronic components due to electrostatic discharge		AH54.00-P-0001-01A
1	Remove paneling from left C-pillar		AR68.30-P-4490T
2	Separate electrical connections (3, 4)		
3	Unscrew nuts (1, 2)	i Installation: Pay attention to unobstructed movement of headliner wiring harness (6) behind the left antenna amplifier module (A2/64).	
4	Remove left antenna amplifier module (A2/64) from C-pillar and remove tie strap (5)		
5	Remove left antenna amplifier module (A2/64)		
6	Install in the reverse order		
7	Perform a function test		