






P88.10-2057-09

- 1 Rear section, fender liner
 2 Front section, fender liner
 3 Bolts
 4 Nuts

- 5 Expansion clip
 6 Cable tie
 7 Line bracket
 8 Expansion clip

- 9 Bolts
 10 Nuts
 11  Mounting wedge
 12 Front fender

	Remove/install		
⚠ Danger!	Risk of death caused by vehicle slipping or toppling off of the lifting platform.	Align vehicle between the columns of the lifting platform and position the four support plates at the lifting platform support points specified by the vehicle manufacturer.	AS00.00-Z-0010-01A
1	Raise vehicle with lifting platform		
2	Turn left or right wheel of front axle to full lock		
3.1	Remove rear part piece of lower engine compartment paneling	Vehicles with gasoline engines	AR61.20-P-1105T
3.2	Remove bottom part of rear noise encapsulation	Vehicles with diesel engines	AR94.30-P-5300T
4	Remove bolts (3)		
5	Unscrew nuts (4)		
6	Remove expansion clips (5)		
7	Loosen rear section, fender liner (1) from front fender (12) with assembly wedge (11) and remove	 i Installation: Ensure that fender liner rear section (1) and rubber seal are seated properly.	*110589035900
8	Remove cable tie (6) and line bracket (7).	i Installation: Replace cable ties (6).	
9	Remove expansion clip (8).		
10	Remove bolts (9)		
11	Unscrew nuts (10)		
12	Loosen rear section, fender liner (2) from front fender (12) with assembly wedge (11) and remove	 i Installation: Ensure that front section of fender liner (2), and rubber seal are seated properly.	*110589035900
13	Install in the reverse order		

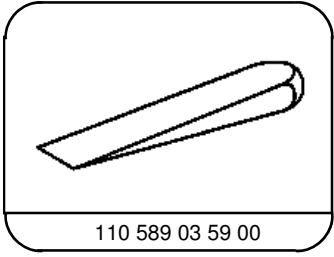

110 589 03 59 00

Assembly wedge