


MODEL 211.0/ 2/ 6

- 1 Covering  
 2 Upper catch hook  
 3 Lower catch hook  
 4 Bolts  
 5 Electrical connector



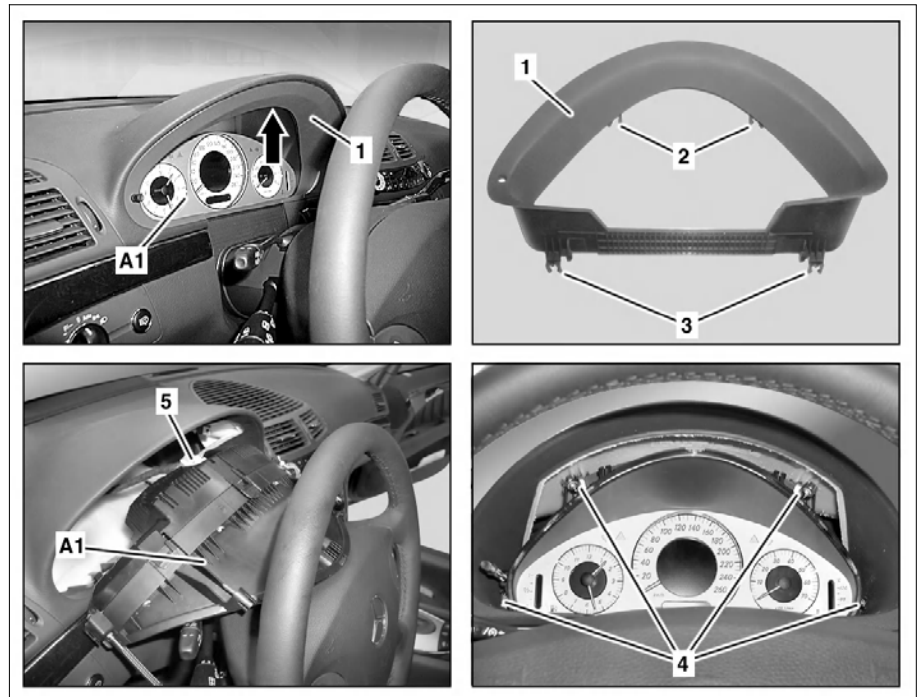






A1 Instrument cluster



P54.30-6803-06

## Modification notes

5.7.06	"Disconnect/connect battery ground line" removed		
--------	--------------------------------------------------	--	--

 	Remove/install		
	Notes on avoiding damage to electronic components due to electrostatic discharge		AH54.00-P-0001-01A
1.1	Connect STAR DIAGNOSIS and buffer the default data from the instrument cluster (A1) in STAR DIAGNOSIS	 Only when replacing the instrument cluster (A1).	
	Connect STAR DIAGNOSIS and read out fault memory	 <b>Installation:</b> Transfer the cached basic data to the new instrument cluster (A1).	AD00.00-P-2000-04A
		STAR DIAGNOSIS diagnosis system	*WH58.30-Z-1048-13A
1	Move steering wheel as far back and low down as possible	 See Operator's Manual	
2	Using fingers, reach into the gap (arrow) between the cover (1) and instrument cluster (A1) and pull the covering (1) gently back until it disengages at the upper detent hook (2)	 Carefully unclip cover (1), otherwise the upper catch hook (2) can break	
3	Unclip covering (1) from lower catch hooks (3) by hand and pull out of instrument panel towards the rear	 Carefully unclip cover (1), otherwise the bottom catch hook (3) can break	
4	Remove bolts (4)		
5	Pull instrument cluster (A1) out of instrument panel until electrical connector (5) is accessible		
6	Unplug electrical connector (5) and remove instrument cluster (A1)		
7	Install in the reverse order		

## Commercially available tools

Number	Designation	
WH58.30-Z-1048-13A	STAR DIAGNOSIS diagnosis system, Compact Passenger Car	6511 1801 00