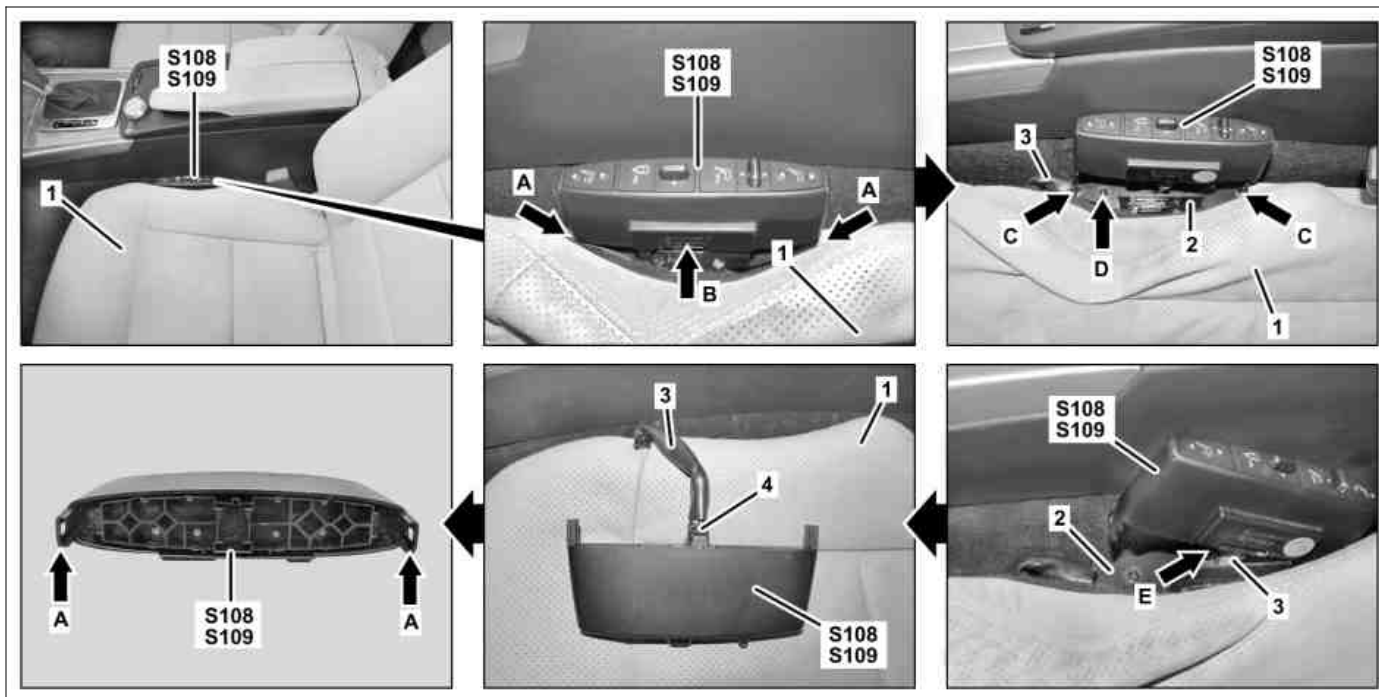


MODEL 212 with CODE (432) Left and right dynamic multicontour seat

MODEL 218 with CODE (432) Active multicontour seat


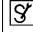



P91.25-2501-09

- 1 Seat cushion
- 2 Bracket
- 3 Wiring harness
- 4 Electrical connector

S108 Front passenger active multicontour seat button group

S109 Driver active multicontour seat button group

	Remove/install		
1	Push left or right seat cushion (1) far enough to one side so as to access the supports (arrows A) of the front passenger dynamic multicontour seat button group (S108) or the driver dynamic multicontour seat button group (S109)		
2	Unclip supports (arrows A) of front passenger dynamic multicontour seat button group (S108) or driver dynamic multicontour seat button group (S109) at the lug catch hooks (arrows C)	<p><b>i</b> <b>Installation:</b> Check that supports (arrows A) are correctly seated in the lugs (arrows C).</p>	
3	Push front passenger dynamic multicontour seat button group (S108) or driver dynamic multicontour seat button group (S109) far enough upwards out of the holder (2) until the electrical wiring harness (3) can be removed from the opening (arrow E) of the holder (2)	<p><b>i</b> <b>Installation:</b> Check that front passenger dynamic multicontour seat button group (S108) or driver dynamic multicontour seat button group (S109) is correctly seated in the lug (arrow B) of the holder (2).</p>	
4	Remove electrical wiring harness (3) from the opening (arrow E) of the holder (2)	<p><b>i</b> <b>Installation:</b> Check that electrical wiring harness (3) is correctly seated.</p>	
5	Unclip fastening (arrow D) of electrical wiring harness (3) from the holder (2)	<p><b>i</b> <b>Installation:</b> Check that fastening (arrow D) is correctly seated in the holder (2).</p> <p> Clip remover</p>	<p><a href="https://www.vauxhall.com/vehicles/new/auxiliary-parts/*452589016300">*452589016300</a></p>
6	Lift front passenger dynamic multicontour seat button group (S108) or driver dynamic multicontour seat button group (S109) far enough until the electrical connector (4) can be detached		
7	Disconnect electrical connector (4)		
8	Remove front passenger dynamic multicontour seat button group (S108) or driver dynamic multicontour seat button group (S109)		
9	Install in the reverse order		

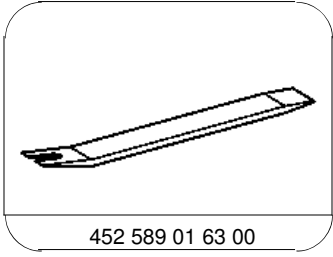

452 589 01 63 00

Snap-release tool