



P83.10-2630-07

**Shown on model 204.0**


- 1 Air vent
- 2 Cover
- 3 Armrest
- 4 Pop rivets
- 5 Catch hook

- 6 Electrical connector
- 7 Electrical connector (with code (581) Comfort automatic air conditioning)


- N22/4 Rear automatic climate control operating unit (with code (581) Comfort automatic air conditioning)


**Shown on model 212.0 with code (279) Electronic gear selector**


- 1 Air vent
- 3 Armrest
- 4 Pop rivets

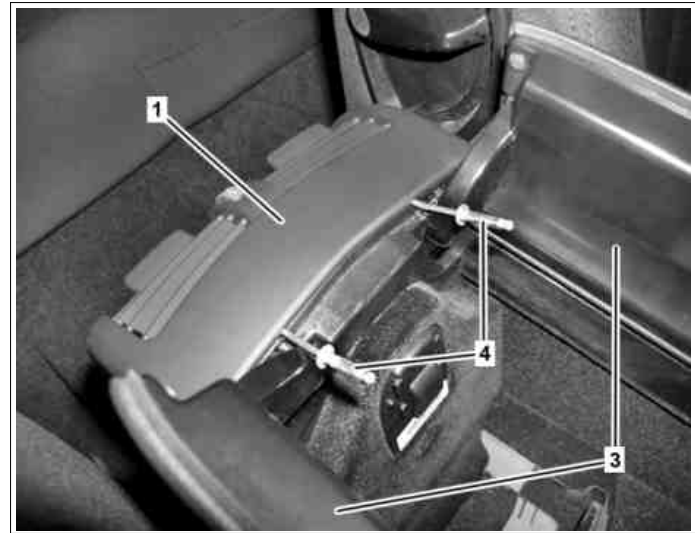

P83.10-2711-11

☒ ☒	Remove/install		
⚠	Information on preventing damage to electronic components due to electrostatic discharge		AH54.00-P-0001-01A
1	Switch off ignition and remove transmitter key (A8/1) or KEYLESS-GO start/stop button (S2/3) from electronic ignition lock control unit (N73)	<ul style="list-style-type: none"> <li><b>i</b> KEYLESS-GO start/stop button only on vehicles with code (889) Keyless-Go.</li> </ul>	
2	Unclip cover (2)	<ul style="list-style-type: none"> <li>Model 204.0/2/3, 212 without code (301) Ashtray package/smoker package or Model 204.9 without code (301) Ashtray package/smoker package and without code (864) Rear entertainment system</li> <li> Long wedge</li> <li><b>i</b> <b>Installation:</b> First attach cover (2) at bottom.</li> </ul>	*115589035900
3	Remove DVD player bracket (A40/4)	For model 204.9 with code (864) Rear entertainment system	AR82.60-P-7506CY
4	Open armrest (3) and release catch hooks (5) at air vent (1)	<ul style="list-style-type: none"> <li><b>i</b> Release of catch hooks (5) with two blind rivets (4) is shown as an example. Other suitable tools or objects with a diameter of approx. 2 mm and a length of approx. 40 mm can be used.</li> </ul>	
5	Remove air vent (1) upwards from center console and disconnect electrical connectors (6)		
6	Disconnect electrical connectors (7) at rear	<ul style="list-style-type: none"> <li><b>i</b> On vehicles with code (581) Comfort</li> </ul>	

7	Remove rear AAC operating unit (N22/4)	 For vehicles with code (581) Comfort automatic air conditioning when replacing air vent.	AR83.40-P-6350ELH
8	Install in the reverse order		

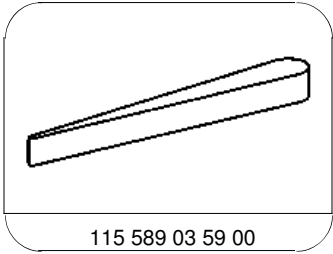

Long wedge