


MODEL 204.0 /2, 212, 218.3 with CODE (581) Comfort automatic air conditioning





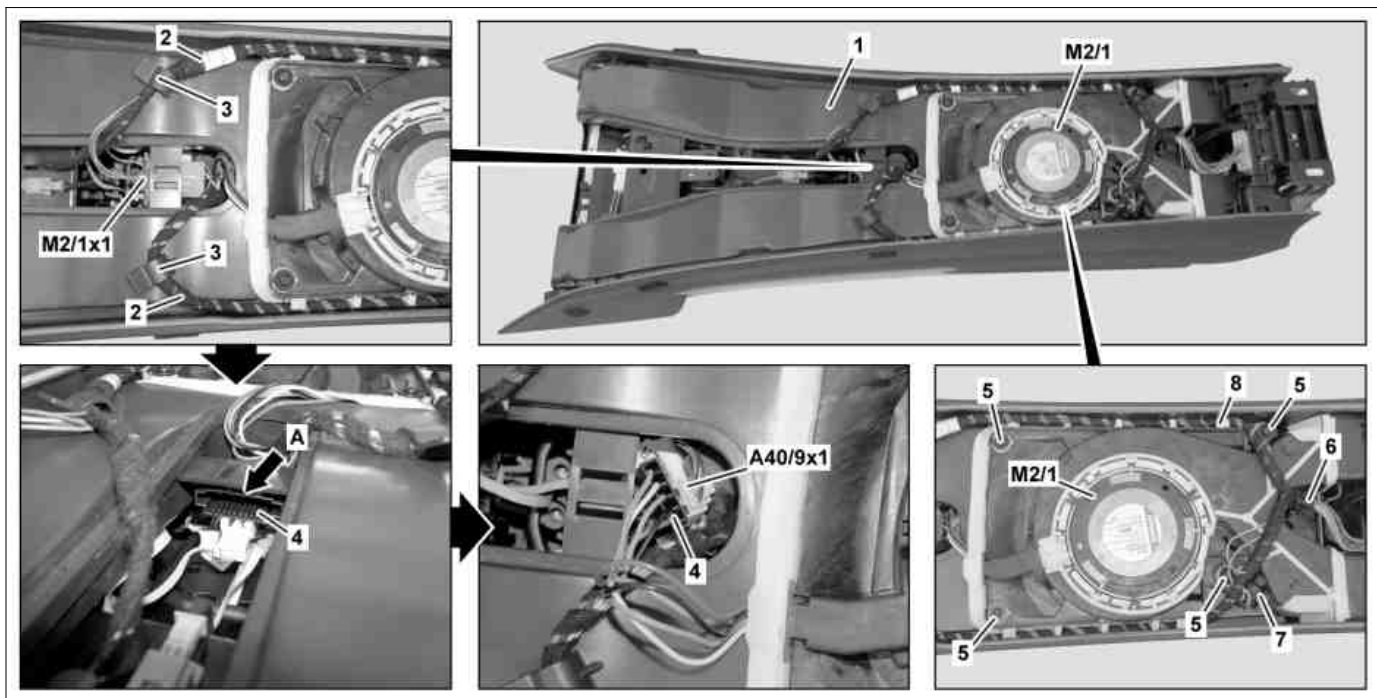

P83.30-4667-09

Shown on model 212 at center console
(1) with code (279) Electronic gear
selector

1 Center console
2 Wiring harness
3 Tab
4 Connector

5 Screw
6 Retaining clamp
7 Electrical connector
8 Tab

A40/9x1 Audio/COMAND control panel
electrical connector
M2/1 Rear blower motor
M2/1x1 Rear blower motor electrical
connector

 	Remove/install		
1	Remove center console (1)	Model 204 Model 212 Model 218.3	AR68.20-P-2000CW AR68.20-P-2000EW AR68.20-P-2000EL
2	Disconnect rear blower motor electrical connector (M2/1x1)		
3	Release catch hook (arrow A) and remove plug (4) of rear blower motor electrical connector (M2/1x1) from bracket at center console (1)		
4	Disconnect Audio/COMAND control panel electrical connector (A40/9x1)	Model 204.0/2, 212	
5	Remove white plug of the Audio/COMAND control panel electrical connector (A40/9x1) from plug (4) of the rear blower motor electrical connector (M2/1x1)	Model 204.0/2, 212	
6	Free wiring harnesses (2) from lugs (3, 8)	 There are 5 lugs (8) each to the right and left at the rear blower motor (M2/1).	
7	Loosen retaining clamp (6)		
8	Disconnect electrical connector (7) at rear footwell vent air outlet temperature sensor	 When replacing the rear blower motor (M2/1), remove the rear footwell vent air outlet temperature sensor.	
9	Remove screws/bolts (5) and remove rear blower motor (M2/1)		
10	Install in the reverse order		