



MODEL 212

- 1 Front door sill molding
- 2 Retaining clips
- 3 Clip
- 4 Lug

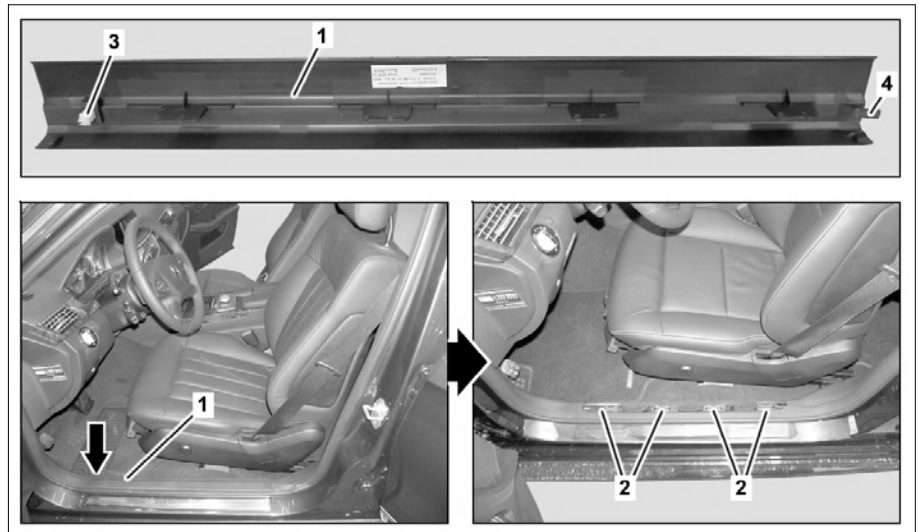

P68.30-3415-05

- 5 Rear door sill molding
- 6 Clip
- 7 Shackles

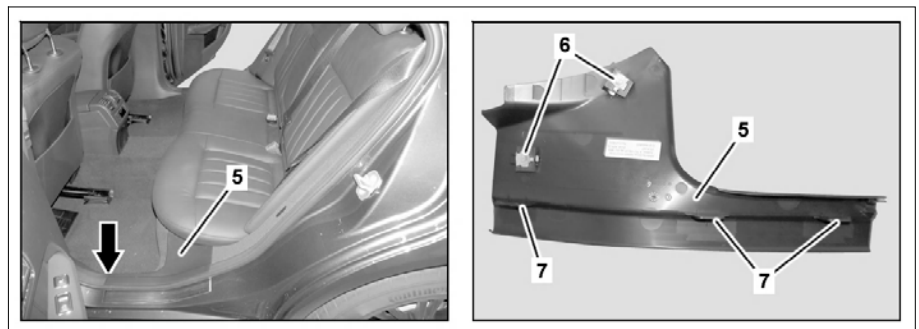

P68.30-3416-04

☒ ☒	Remove/install		
1	Unclip front door sill (1) or rear door sill (5) in front area (arrow) upward	<p>i The front door sill (1) is secured in the front area (arrow) with a clip (3).</p> <p>i Installation: Check clip (3) and replace if necessary.</p>	
2	Loosen front door sill (1) from front toward rear from retaining clips (2)	<p>When removing front door sill (1).</p> <p>! Do not lift front door sill (1) upward in rear area to prevent damaging lug (4).</p>	
3	Pull front door sill (1) toward front out of B-pillar paneling at bottom and remove	<p>When removing front door sill (1).</p> <p>i Pull front door sill (1) out of B-pillar paneling at bottom until lug (4) is exposed.</p>	
4	Loosen lugs (7) from rear door sill (5) from front toward rear from retaining clips, unclip clips (6) and remove rear door sill (5).	<p>When removing rear door sill (5).</p> <p>i Installation: Check clips (6) and replace, if necessary.</p>	
5	Install in the reverse order		