



**Model** 212.0 (except 212.074/077), 212.1, 212.2 (except 212.274/277)  
with code 279 (Electronic gear selector)

**Shown up to model year 2014**

- 1 Stowage compartment
- 2 Screw
- 3 Cup holder (with code 309 (Cup holder))
- 4 Electrical connector
- R3x1 Electrical connector for front cigarette lighter with ashtray illumination (with code (301) Ashtray/smoker package)
- X58/17x1 Front vehicle interior socket electrical connector (except code 301 (Ashtray package/ smoker package))

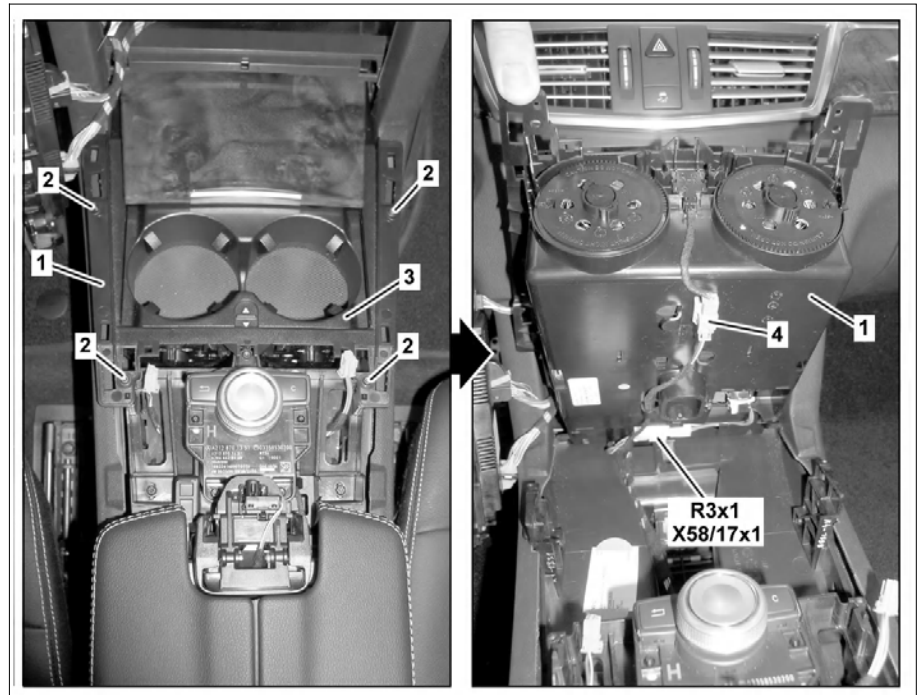

P68.20-4088-06

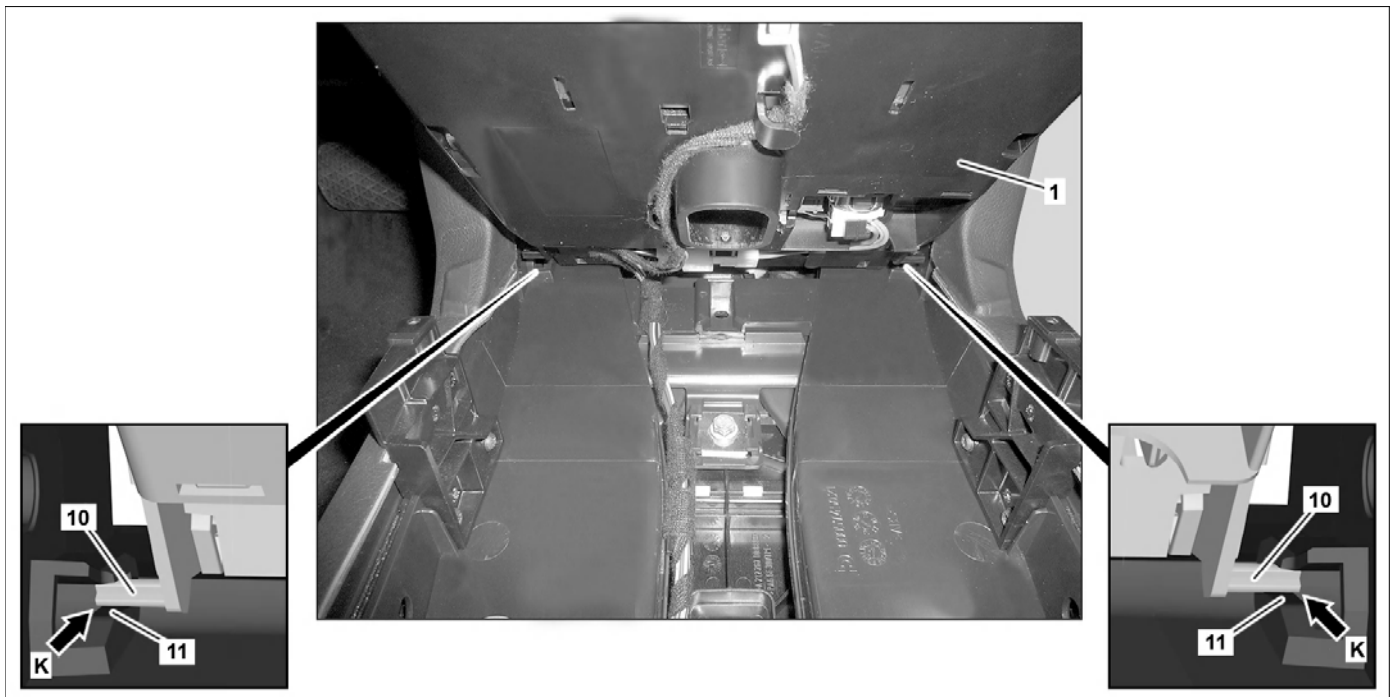


P68.20-4799-09

- 1 Stowage compartment
- 10 Pin




- 11 Guides





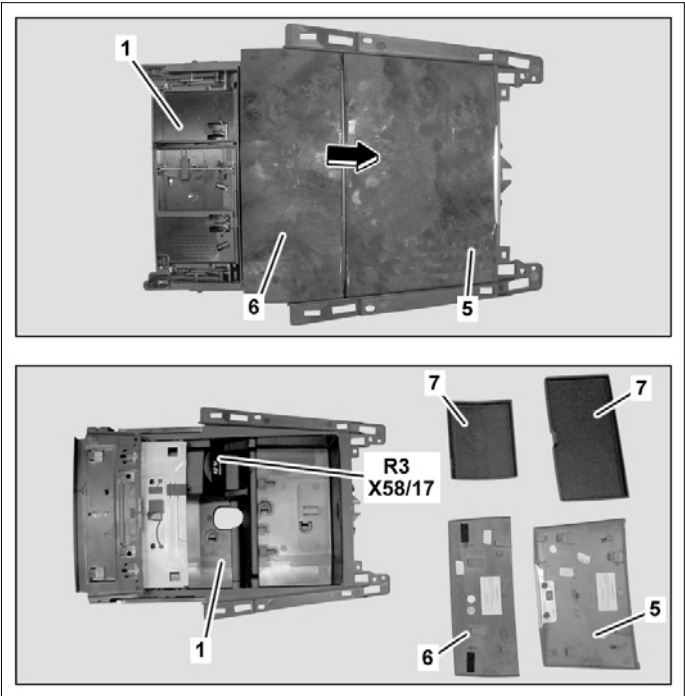




**Shown except code 301 (Ashtray/smoker package)**

- 1 Stowage compartment
- 5 Cover
- 6 Cover
- 7 Rubber inset (except code 301 (Ashtray/smoker package))
- R3 Cigarette lighter with front ashtray illumination (with code 301 (Ashtray package/smoker package))
- X58/17 Front vehicle interior socket electrical connector (except code 301 (Ashtray package/smoker package))



P68.20-4089-12

	Remove		
1	Remove cover on center console		AR68.20-P-2350EW
2	Remove automatic air conditioning control and operating unit		AR83.40-P-6350EW
3	Remove screws (2)		
4	Lift stowage compartment (1) until electrical connectors on cigarette lighter with front ashtray illumination (R3x1) or electrical connector on front interior compartment socket connector (X5817x1) are accessible		
5	Disconnect electrical connector on cigarette lighter with front ashtray illumination (R3x1) or electrical connector on front interior compartment socket connector (X5817x1)		
6	Disconnect electrical connection (4)		
7	Remove stowage compartment (1)		
	Disassemble		
8.1	Remove rubber inserts (7)	Model 212.0 (except 212.074/077), 212.1, 212.2 (except 212.274/277) with code 279 (Electronic gear selector) except code 301 (Package SMOKER)	
8.2	Remove ashtray insert	Model 212.0 (except 212.074/077), 212.1, 212.2 (except 212.274/277) with code 279 (Electronic gear selector) with code 301 (Package SMOKER)	
9	Remove cupholder (3)	Model 212.0 (except 212.074/077), 212.1, 212.2 (except 212.274/277) with code 279 (Electronic gear selector) with code 309 (Cup holder)	
10.1	Remove cigarette lighter with front ashtray housing (R3) from stowage compartment (1)	Model 212.0 (except 212.074/077), 212.1, 212.2 (except 212.274/277) with code 279 (Electronic gear selector) with code 301 (Package SMOKER)	AR54.10-P-0030EW
10.2	Remove front vehicle interior socket (X58/17) from ashtray housing (1)	Model 212.0 (except 212.074/077), 212.1, 212.2 (except 212.274/277) with code 279 (Electronic gear selector) except code 301 (Package SMOKER)	AR54.10-P-1003EW
11	Open cover (5) on stowage compartment (1) by carefully pressing at front of decorative cover		
12	Carefully push decorative cover (6) toward rear in direction of arrow and hold carrier as well as side guide arm of stowage compartment (1)	 Do not press from top into decorative cover. Otherwise the joining elements of the decorative cover as well as the carrier of the stowage compartment (1) can be damaged.	

		 <p>Carefully detach decorative cover and hold side guide arms of carrier on stowage compartment (1). Otherwise the carriers on stowage compartment (1) can bend and the decorative cover is no longer seated safely.</p>	
13	Open cover (5) on stowage compartment (1) by carefully pressing at rear of decorative cover		
14	Carefully push decorative cover of cover (5) toward rear in direction of arrow and hold carrier as well as side guide arms of stowage compartment (1)	 <p>Do not press decorative cover from top. Otherwise the joining elements of the decorative cover as well as the carrier of the stowage compartment (1) can be damaged.</p>  <p>Carefully detach decorative cover and hold side guide arms of carrier on stowage compartment (1). Otherwise the carriers on the stowage compartment (1) can bend and the decorative cover is no longer seated safely.</p>	
	<b>Assemble</b>		
15	Completely open stowage compartment (1) by pushing at rear cover carrier		
16	Install decorative cover on cover (6) and carefully push toward front opposite to direction of arrow, hold carrier as well as side guide arms of stowage compartment (1)	 <p>Do not press decorative cover from top. Otherwise the joining elements of the decorative cover as well as the carrier of the stowage compartment (1) can be damaged.</p>  <p>Carefully lock decorative cover and hold side guide arms of carrier on stowage compartment (1). Otherwise the carriers on the stowage compartment (1) can bend and the decorative cover is no longer seated safely.</p>	
17	Install decorative cover of cover (5) and completely open stowage compartment (1) by pushing on rear cover carrier		
18	Push decorative cover on cover (5) toward front in opposite to direction of arrow, hold carrier as well as side guide arms of stowage compartment (1)	 <p>Do not press from top into decorative cover. Otherwise the joining elements of the decorative cover as well as the carrier of the stowage compartment (1) can be damaged.</p>  <p>Carefully lock decorative cover and hold side guide arms of carrier on stowage compartment (1). Otherwise the carriers on the stowage compartment (1) can bend and the decorative cover is no longer seated safely.</p>	
19.1	Install cigarette lighter with front ashtray housing (R3) in stowage compartment (1)	Model 212.0 (except 212.074/077), 212.1, 212.2 (except 212.274/277) with code 279 (Electronic gear selector) with code 301 (Package SMOKER)	AR54.10-P-0030EW
19.2	Install front vehicle interior socket (X58/17) in stowage compartment (1)	Model 212.0 (except 212.074/077), 212.1, 212.2 (except 212.274/277) with code 279 (Electronic gear selector) except code 301 (Package SMOKER)	AR54.10-P-1003EW
20	Insert cup holder (3)	Model 212.0 (except 212.074/077), 212.1, 212.2 (except 212.274/277) with code 279 (Electronic gear selector) with code 309 (Cup holder)	
21.1	Insert ashtray insert	Model 212.0 (except 212.074/077), 212.1, 212.2 (except 212.274/277) with code 279 (Electronic gear selector) with code 301 (Package SMOKER)	
21.2	Insert rubber insert (7)	Model 212.0 (except 212.074/077), 212.1, 212.2 (except 212.274/277) with code 279 (Electronic gear selector) except code 301 (Package SMOKER)	
	<b>Install</b>		
22	Position stowage compartment (1) and connect electrical connector (4)		

23	Disconnect electrical connector on cigarette lighter with front ashtray illumination (R3x1) or electrical connector on front interior compartment socket connector (X5817x1) and remove stowage compartment (1)	<b>i</b> Ensure that pins (10) reach into the stowage compartment (1) at the front into the guides (11) on the center console (arrows K).	
24	Screw in bolts (2)		
25	Remove automatic air conditioning control and operating unit		AR83.40-P-6350EW
26	Install cover on center console		AR68.20-P-2350EW