AR91.25-P-1710CW Remove/install multicontour seat control valve 22.2.12

MODEL 204.0 /2 /3 (except 204.077 /277) with CODE (409) Left/right front multicontour seats

MODEL 207, 212, 218 with CODE (409) Left/right front multicontour seats

MODEL 463.222 /270 /271 /303 /340 /341

with CODE (SM7) Left front multicontour seat

with CODE (SM8) Front passenger multicontour seat

as of model year 2010

MODEL 463.306 /336

with CODE (SM7) Left front multicontour seat

with CODE (SM8) Front passenger multicontour seat

MODEL 463.202 /236 /237

with CODE (SM7) Left front multicontour seat

with CODE (SM8) Front passenger multicontour seat

up to model year 2013 as of model year 2010,

/model refinement package 2012


MODEL 463.346


with CODE (SM7) Left front multicontour seat


with CODE (SM8) Front passenger multicontour seat

up to model year 2013

/model refinement package 2012

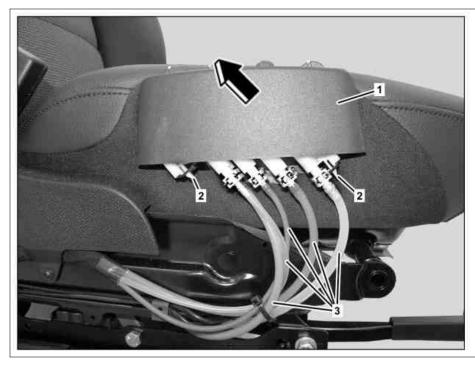

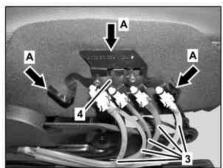

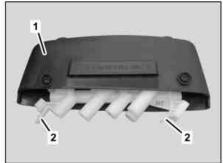

P91.25-2419-09

Shown on model 204, on removed left front seat

1 Control valve 3 Pneumatic lines 4 Bracket

2 Catch hook

XX	Remove/install		
1	Push both catch hooks (2) inwards, while at the same time pulling the control valve (1), as shown, upwards at an angle out of the holder (4) and the pneumatic lines (3) and remove	i Installation: Check sealing rings of pneumatic lines (3) for damage, replace if necessary. Ensure that control valve (1) is correctly seated in the guides (arrows A) of the bracket (4).	
2	Install in the reverse order		