


**MODEL 204 with ENGINE 156, 271, 272, 274, 276**  
with CODE 494 (US version)

**MODEL 207 with ENGINE 272, 273, 276, 278**  
with CODE 494 (US version)

**MODEL 212 with ENGINE 156, 157, 272, 273, 276, 278**  
with CODE 494 (US version)

**Shown on model 212**

77 Activated charcoal canister  
77a Retaining wedge  
Y58/4 Activated charcoal filter shutoff valve  
A Activated charcoal canister dashpot line  
D Activated charcoal canister purge control valve line

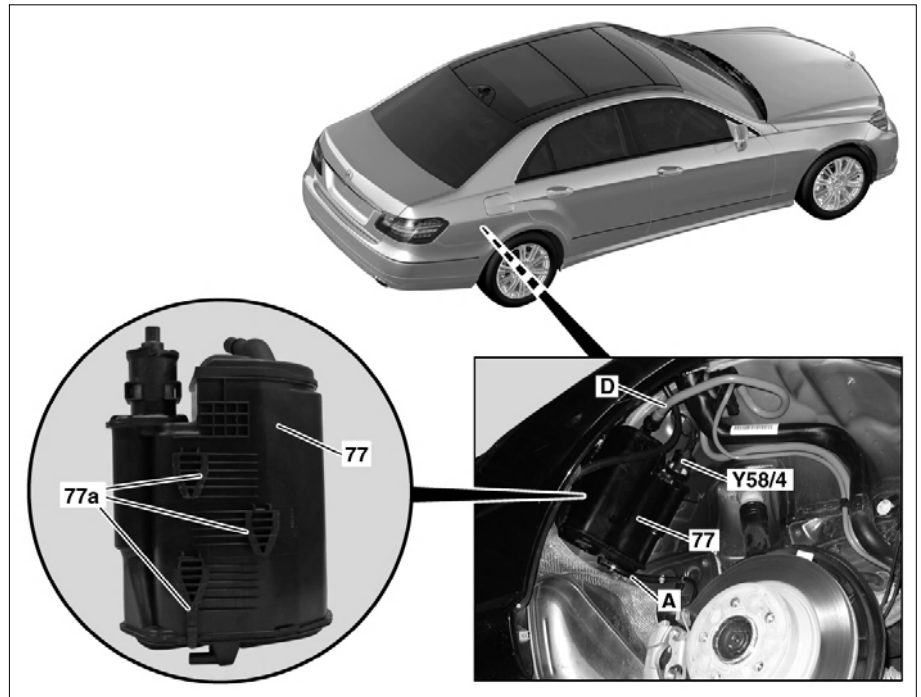

P47.30-2205-06

	<b>Remove/install</b>		
<b>Danger!</b>	<b>Risk of death</b> caused by vehicle slipping or toppling off of the lifting platform.	Align vehicle between vehicle lift columns and position the four support plates at the vehicle lift support points specified by vehicle manufacturer.	AS00.00-Z-0010-01A
<b>Danger!</b>	<b>Risk of explosion</b> caused by fuel igniting, risk of poisoning caused by inhaling and swallowing fuel as well as risk of injury to eyes and skin caused by contact with fuel.	No fires, sparks, open flames or smoking. Pour fuels into suitable and appropriately marked containers only. Wear protective clothing when handling fuel.	AS47.00-Z-0001-01A
1 AP	Remove right rear wheel	MODEL 204 with ENGINE 156, 271, 272, 274, 276 with CODE 494 (US version) MODEL 207 with ENGINE 272, 273, 276, 278 with CODE 494 (US version) MODEL 212 with ENGINE 156, 157, 272, 273, 276, 278 with CODE 494 (US version)	AP40.10-P-4050CW  AP40.10-P-4050EW
2	Remove fender liner in right rear fender		
3	Disconnect electrical connector on activated charcoal canister shutoff valve (Y58/4)		
4	Detach activated charcoal canister switchover valve purging line (D) from activated charcoal canister (77)	Press both retainers on the connector for the activated charcoal canister switchover valve purging line (D) at the same time.	
5	Pull retainer on the lower retaining wedge (77a) and push out activated charcoal canister (77) from above	<b>Installation:</b> Introduce all three retaining wedges (77a) into mounts on wheel arch.	
6	Remove clamp for activated charcoal canister dashpot line (A) on activated charcoal canister (77)		
7	Detach activated charcoal canister dashpot line (A) from activated charcoal canister (77)		
8	Remove activated charcoal canister (77)		
9	Install in the reverse order		