


MODEL 207, 212

- 1 Slide
- 1a Clamp
- 2 Combination filter
- 3 AC housing

- A32m1 Blower motor

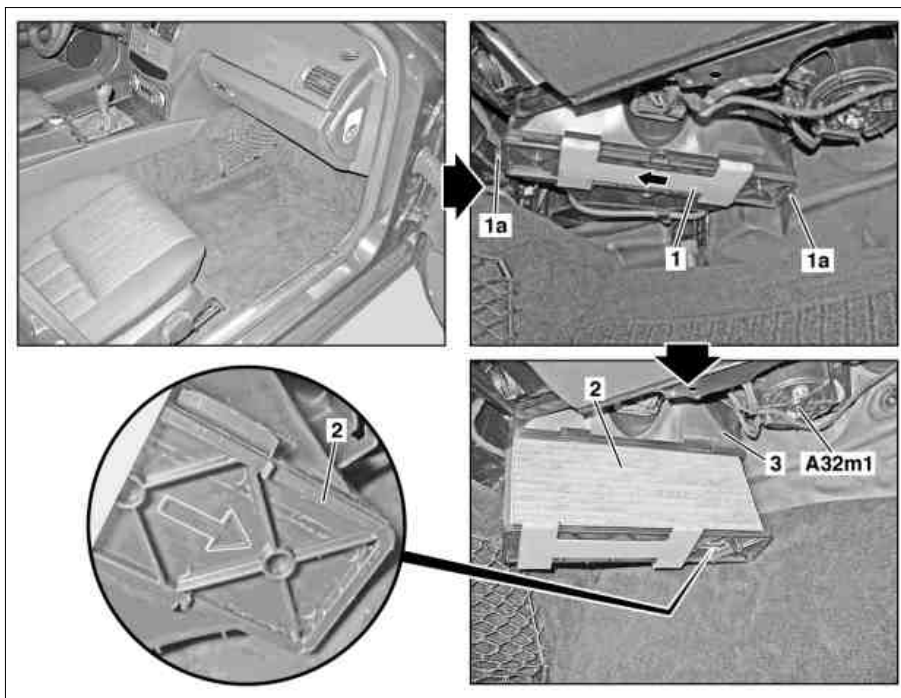

P83.00-2268-06

	<p>Remove/install</p>		
<p>1</p>	<p>Switch off ignition</p>		
<p>2</p>	<p>Remove right cover below instrument panel Remove/install cover below instrument panel (right)</p>		<p>AR68.10-P-1520CW</p>
<p>3</p>	<p>Lever up and remove clips (1a)</p>		
<p>4</p>	<p>Unlock slide (1) in the direction of the arrow and remove combination filter (2) downwards out of the air conditioner housing (3)</p>	<p>i Replace combination filter (2), do not clean</p> <p>i Installation: Observe installation position! The arrow marked on the combination filter (2) must point towards the blower motor (A32m1).</p>	
<p>5</p>	<p>Install in the reverse order</p>		