AR68.30-P-4580EW		Remove/install and disassemble rear shelf
MODEL	212.0 /1	

1.1 3 3 2 5 2


## Shown with code (540) Electric rear window roller blind

- Rear shelf 1
- 1.1 Rear shelf rear section (with code (540) Electric roller blind for rear window)
- 2 Center seat belt

- Roller sun blind (with code (540) З
- Electric roller blind for rear window )
- 4 Clip
- 5 Expansion clip

P68.30-3419-09

- 6 Screw 7
  - Guide Frame
- 8

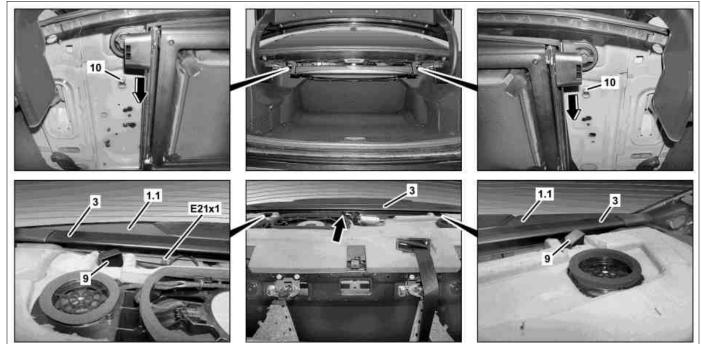


## With code (540) Electric rear window roller blind

- 1.1 Rear shelf rear section (with code (540) Electric roller blind for rear window)
- Roller blind (with code (540) Electric roller blind for rear window ) 3

9 Guide P68.30-3420-09

E21x1 Center brake lamp electrical connector

10 Screw

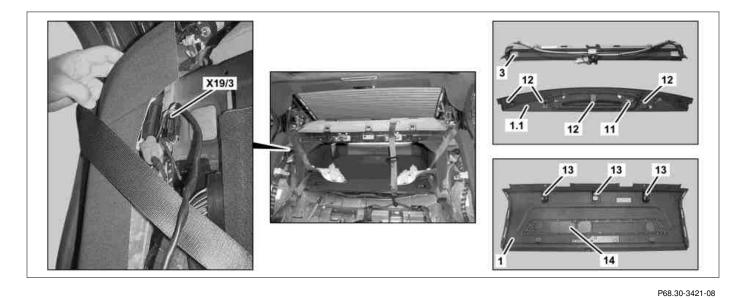

## Shown with code (540) Electric rear window roller blind

- 1 Rear shelf
- 1.1 Rear shelf rear section (with code (540) Electric roller blind for rear window )
- 3 Roller blind (with code (540) Electric roller blind for rear window )
- 11 Center brake lamp cover
- 12 Supports
- 13 Top Tether cover

- 14 Speaker cover
- X19/3 Rear window roller sun blind motor electrical connector

XX	Remove/install		
1.1	Remove rear seat backrest	On vehicles without code (287) Through- loading feature and without code (224) Design individual rear seat system	AR91.12-P-1620CW
1.2	Remove rear seat backrest	On vehicles with code (224) Design individual rear seat system	AR91.12-P-1620EW
1.3	Remove side upholstery	For vehicles with code (287) Through-loading feature	AR91.12-P-1710CW
2	Unscrew bolt (6) and remove belt end fitting from center seat belt (2)		
3	Loosen paneling on left and right C-pillar and lay down to side with seat belts installed	i Do not remove belt end fitting	AR68.30-P-4490EW
4	Remove rubber from left and right expansion clip (5) and remove expansion clips (5)		
5	Remove clips (4)	On vehicles with code (540) Electric roller blind for rear window	
6.1	Pull rear shelf (1) toward front out of guides (7)	On vehicles without code (540) Electric rear window roller blind	
6.2	Pull rear shelf (1) toward front out of guides (9) and guide (arrow)	On vehicles with code (540) Electric roller blind for rear window	
7	Lift rear shelf (1) and disconnect electrical connector on center brake lamp (E21x1)	On vehicles without code (540) Electric rear window roller blind	
8	Unclip frame (8) from rear shelf (1), guide center seat belt (2) through opening in rear shelf (1) and remove rear shelf (1)		
9	Turn guides (9) 45° counterclockwise and remove	On vehicles with code (540) Electric roller blind for rear window	
10	Loosen bolts (10) in trunk, push roller sun blind (3) in direction of arrow and guide bolts (10) out of holes	On vehicles with code (540) Electric roller blind for rear window	
11	Disconnect electrical connector on rear window roller sun blind motor (X19/3) and remove rear shelf rear section (1.1) with roller sun blind (3) until center brake lamp electrical connector (E21x1) is accessible	On vehicles with code (540) Electric roller blind for rear window	
12	Disconnect center brake lamp electrical connector (E21x1) and remove rear shelf rear section (1.1) with roller sun blind (3)	On vehicles with code (540) Electric roller blind for rear window	
13	Install in the reverse order		
<b>*</b>	Disassemble/assemble		
14	Remove roller sun blind (3) from rear shelf	i Installation: Ensure that roller sun blind	

15	Unclip center brake lamp cover (11) from rear shelf rear section (1.1) or rear shelf (1) and remove	<b>i</b> Depending on vehicle configuration.	
16	Unclip loudspeaker cover (14) and top tether cover (13) from rear shelf (1) and remove		
17	Assemble in the reverse order		