


Document title Overview of system components for overall network (GVN)

Document number gf0019p9997fg

Model 213

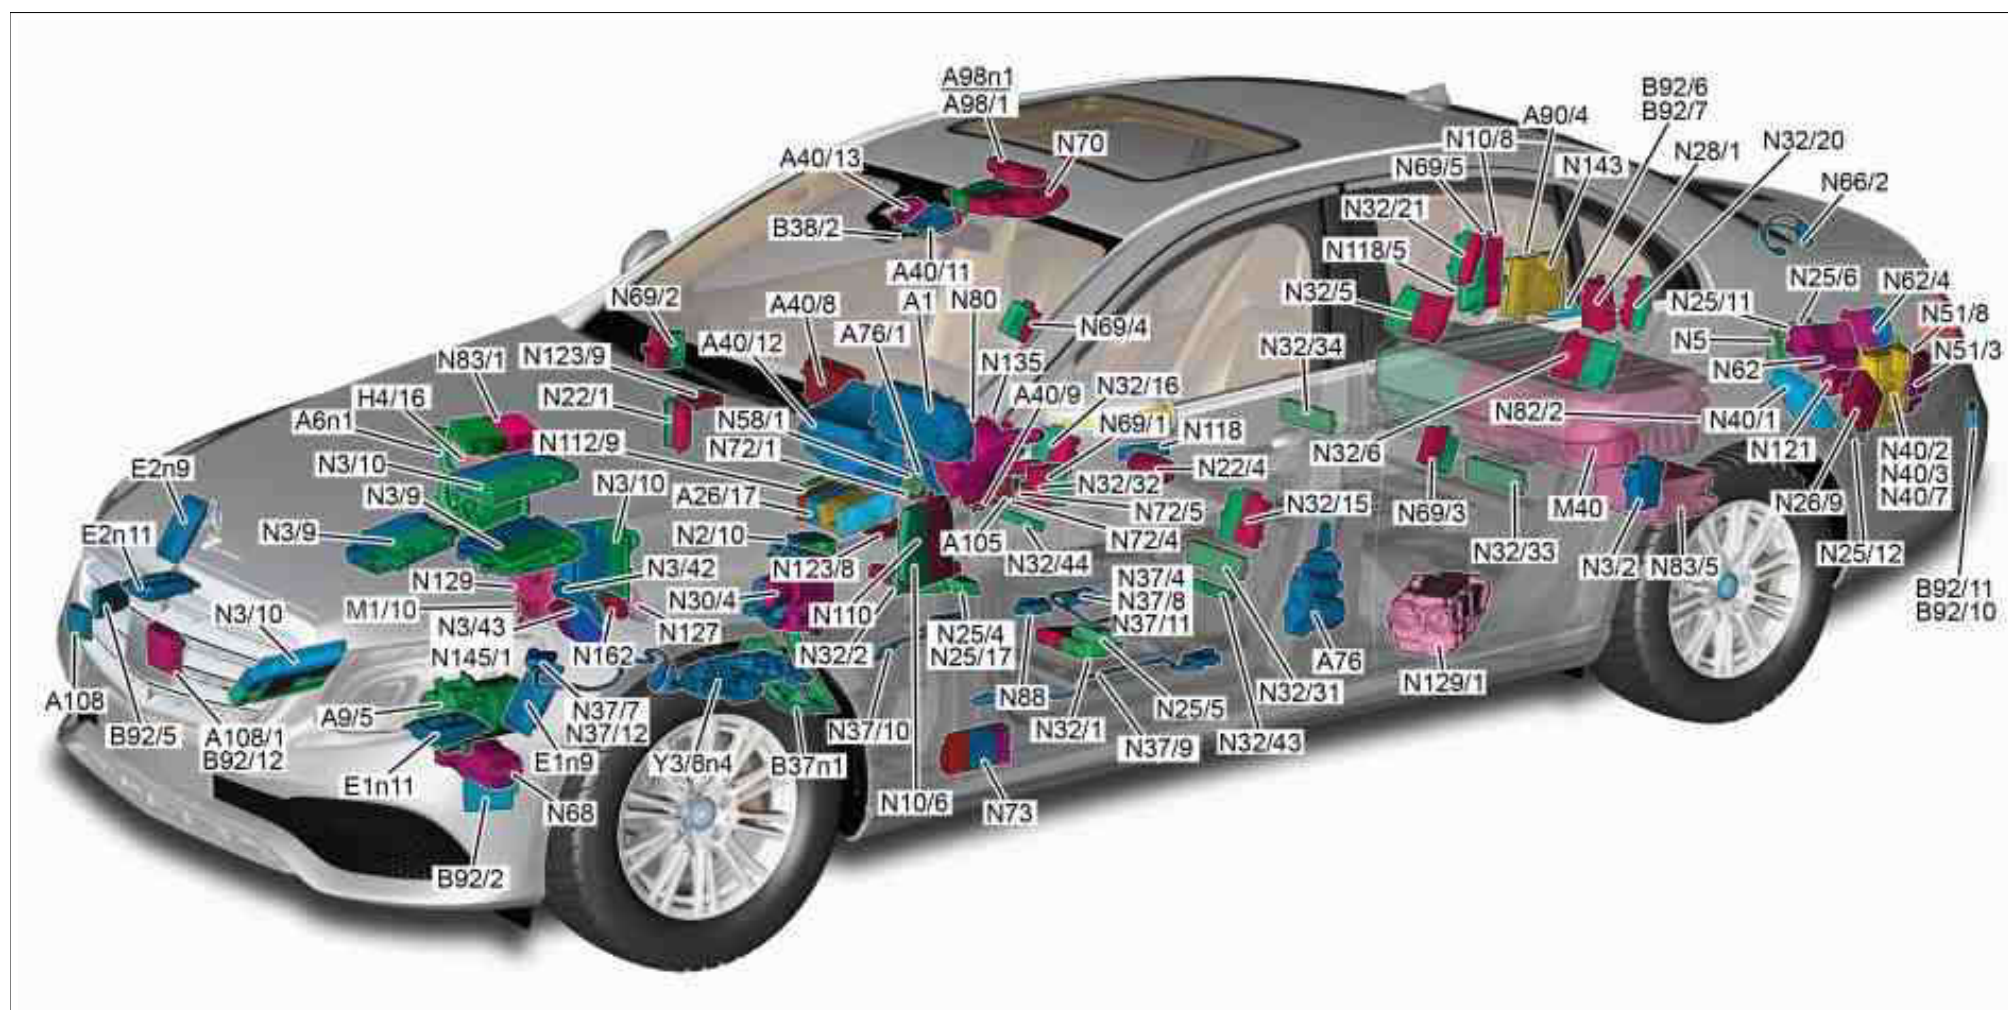

P00.19-A045-79


Model 213.0/1

A1	Instrument cluster	N32/16	Right front multicontour seat control unit (with code 432 (Left and right dynamic multicontour seat))
A6n1	Stationary heater control unit (with code 228 (Stationary heater))	N32/20	Left rear multicontour seat control unit (model 213.1 with code 406 (Rear multicontour seats))
A9/5	Electric refrigerant compressor (model 213.016/050/053/054 or with code B01 (48V technology))	N32/21	Right rear multicontour seat control unit (model 213.1 with code 406 (Rear multicontour seats))
A26/17	Head unit	N32/31	Left front backrest massage function control unit (with code 432 (Left and right dynamic multicontour seat))
A40/8	Audio/COMAND display	N32/32	Right front backrest massage function control unit (with code 432 (Left and right dynamic multicontour seat))
A40/9	Audio/COMAND control panel (except code 446 (Touchpad only))	N32/33	Left rear backrest massage function control unit (model 213.1 with code 406 (Rear multicontour seats))
A40/11	Mono multifunction camera (with code 513 (Traffic Sign Assist) or code 22P (Lane package) or code P35 (Light package) and except code 23P (Driving Assistance package) and except code P20 (Driving Assistance package Plus))	N32/34	Right rear backrest massage function control unit (model 213.1 with code 406 (Rear multicontour seats))
A40/12	Head-up-display (with code 463 (Head-up display))	N32/43	Left front seat cushion massage function control unit (with code 432 (Left and right dynamic multicontour seat))
A40/13	Stereo multifunction camera (with code 23P (Driving assistance package) or code P20 (Driving assistance package Plus))	N32/44	Right front seat cushion massage function control unit (with code 432 (Left and right dynamic multicontour seat))
A76	Left front reversible emergency tensioning retractor	N37/4	NOx sensor control unit (model 213 (except 213.050/053/054) with engine 274 with code 920 (Gasoline direct injection with stratified charge))
A76/1	Right front reversible emergency tensioning retractor	N37/7	NOx sensor control unit downstream of diesel particulate filter (engine 642 with code U77 (BLUETEC (SCR) diesel exhaust treatment))
A90/4	Tuner unit (with CODE 536 (SIRIUS satellite radio) or CODE 537 (Digital radio (DAB)))	N37/8	NOx sensor control unit downstream of SCR catalytic converter (engine 642 with code U77 (BLUETEC (SCR) diesel exhaust gas cleaning), engine 654 except in model 213.016 with code U79 (BLUETEC (SCR) Generation 3 diesel exhaust gas cleaning), engine 654 in model 213.016, engine 656)
A98n1	Panoramic sliding sunroof control unit (with code 413 (Panoramic sliding sunroof))	N37/9	Left NOx sensor control unit upstream of NOx storage catalytic converter (engine 276.8 with code 920 (Gasoline direct injection with stratified charge))
A98/1	Sliding roof control module (with CODE 414 (Sliding roof))	N37/10	Right NOx sensor control unit upstream of NOx storage catalytic converter (engine 276.8 with code 920 (Gasoline direct injection with stratified charge))
A105	Touchpad (with code 446 (Touchpad only) or code 448 (Touchpad))	N37/11	NOx sensor control unit downstream of NOx storage catalytic converter (engine 276.8 with code 920 (Gasoline direct injection with stratified charge))

A108	Active Brake Assist controller unit (with code 258 (COLLISION PREVENTION ASSIST))	N37/12	NOx sensor control unit upstream of diesel oxidation catalytic converter (engine 654 with code U79 (BLUETEC (SCR) Generation 3 diesel exhaust gas cleaning), engine 656)
A108/1	Distance Pilot DISTRONIC controller unit (with code 239 (Active Distance Assist DISTRONIC))	N40/1	Engine sound control unit (engine 177, 256, 276.823 except code 810 (Sound system), except code 811 (Advanced Sound System) and except code B63 (Sporty engine sound) up to 31.05.2018 or vehicles with code B63 (Sporty engine sound), except code 810 (Sound system) and except code 811 (Advanced Sound System))
B37n1	Accelerator pedal module control unit (model 213.050/053/054)	N40/2	Midline sound system amplifier control unit (as of 01.06.2018, engine 177 except code 810 (Sound system) and except code 811 (Advanced Sound System) or engine 256 with code M016 (Engine, boosted high performance) except code 810 (Sound system) and except code 811 (Advanced Sound System))
B38/2	Rain/light sensor with additional functions	N40/3	Sound system amplifier control unit (with code 810 (Sound system))
B92/2	Left outer front bumper radar sensor (with code 292 (Lateral PRE-SAFE® pulse))	N40/7	Advanced sound system amplifier control unit (model 213.0 with code 811 (Advanced Sound System))
B92/5	Right outer front bumper radar sensor (with code 292 (Lateral PRE-SAFE® pulse))	N51/3	AIR BODY CONTROL control unit (with code 489 (AIR BODY CONTROL))
B92/6	Right outer rear bumper integrated radar sensor (with CODE22P (Lane package))	N51/8	AIR BODY CONTROL Plus control unit (with code 489 (AIR BODY CONTROL))
B92/7	Right outer rear bumper radar sensor (with code 23P (Driving Assistance package) or code P20 (Driving Assistance package Plus))	N58/1	Climate control operating unit
B92/10	Left outer rear bumper radar sensor (with code 23P (Driving Assistance package) or code P20 (Driving Assistance package Plus))	N62	Parking system control unit (with code 235 (Parking Pilot with PARKTRONIC) or code P44 (Parking Package))
B92/11	Left outer rear bumper integrated radar sensor (with CODE 22P(Lane package))	N62/4	Mercedes-Benz Intelligent Drive control unit (with code 23P (Driving Assistance package) or code P20 (Driving Assistance package Plus))
B92/12	Short and long-range radar sensor (with code 23P (Driving Assistance package) or code P20 (Driving Assistance package Plus))	N66/2	Reversing camera control unit (with code 218 (Reversing camera) and except code 235 (Parking Pilot with PARKTRONIC) and except code P44 (Parking Package))
E1n9	Left headlamp control unit (with code 631 (Static left-hand traffic LED headlamp) or code 632 (Static right-hand traffic LED headlamp) or code P35 (Light package))	N68	Electrical power steering control unit
E1n11	Left front lamp unit LED matrix control unit (with code P35 (Light package))	N69/1	Left front door control unit
E2n9	Right headlamp control unit (with code 631 (Static left-hand traffic LED headlamp) or code 632 (Static right-hand traffic LED headlamp) or code P35 (Light package))	N69/2	Right front door control unit
E2n11	Right front lamp unit LED matrix control unit (with code P35 (Light package))	N69/3	Left rear door control unit
H4/16	Sound generator (model 213.050 with code B53 (Acoustic presence indicator), model 213.016/053/054)	N69/4	Right rear door control unit
M1/10	Starter alternator (engine 264 with code B01 (48V technology))	N69/5	KEYLESS-GO control unit
M40	Multicontour seat pneumatic pump (with code 432 (Left and right dynamic multicontour seat) or model 213.1 with code 406 (Rear multicontour seats))	N70	Overhead control panel control unit
N2/10	Supplemental restraint system control unit	N72/1	Upper control panel control unit
N3/2	Electric differential lock control unit (with code 467 (Electronic locking differential))	N72/4	Left lower control panel
N3/9	CDI control unit (diesel engine, with engine 654, 656 located at left, with engine 642 located in center)	N72/5	Right lower control panel
N3/10	ME-SFI [ME] control unit (gasoline engine, with engine 177 located at front center, with engine 256 located at top left, with engine 264, 274 located at left, with engine 276 located at the top center)	N73	Electronic ignition switch control unit
N3/42	Active engine mount control unit (engine 177.9 and code 466 (Active engine mount))	N80	Steering column module control unit
N3/43	AMG sports suspension control unit (with transmission 725.092 up to model year 2018 with code 466 (Active engine mount) or with code 467 (Electronic locking differential))	N82/2	Battery management system control unit (model 213.016/050/053/054)
N5	Armrest heating control unit (with code 906 (Front armrest heater) or model 213.1 code 907 (Rear armrest heater))	N83/1	DC/DC converter control unit (with code B01 (48V technology))
N10/6	Front SAM control unit	N83/5	Charger (model 213.016/050/053/054)
N10/8	Rear SAM control unit	N88	Tire pressure monitor control unit (with CODE 475 (Tire pressure monitor))
N22/1	Climate control control unit	N110	Weight sensing system (WSS) control unit (with code U10 (Automatic front passenger airbag shutoff))
N22/4	Rear air conditioning operating unit (with code 581 (Automatic air conditioning))	N112/9	HERMES control unit (with code 360 (HERMES UMTS) or code 362 (HERMES LTE))
N25/4	Front passenger seat heater control unit (with code 902 (Seat heater plus for driver and front passenger))	N118	Fuel pump control unit
N25/5	Driver seat heater control unit (with code 902 (Seat heater plus for driver and front passenger))	N118/5	AdBlue® control unit (engine 642, engine 654 except in model 213.016 with code U79 (BlueTEC (SCR) diesel exhaust gas cleaning, generation 3), engine 654 in model 213.016, engine 656)
N25/6	Rear seat heater control unit (with code 872 (Seat heater in rear) and except code 223 (Electrically adjustable rear bench seat))	N121	Trunk lid control (KDS) control unit (with CODE 881 (Remote trunk closing))

N25/11	Left rear seat seat heater control unit (model 213.1 with code 903 (Seat heater plus for rear outer seats))	N123/8	Mobile phone cradle control unit (with code 896 (Vehicle access and drive authorization via mobile phone) or code 897 (Wireless mobile phone charging) or code 899 (Multifunction telephony))
N25/12	Right rear seat seat heater control unit (model 213.1 with code 903 (Seat heater plus for rear outer seats))	N123/9	Telephone control unit (with code 380 (Car telephony package))
N25/17	Front seat heater/seat ventilation control unit (with code 401 (Seat climate control for driver and front passenger) or code 873 (Seat heater for driver and front passenger), except code 221 (Electrically adjustable left driver's seat) and except code 222 (Electrically adjustable right front seat) and except code 275 (Memory package))	N127	Drivetrain control unit
N26/9	Special-purpose vehicle multifunction control unit (model 213.0 with code 965 (Taxi/rental vehicle pre-installation))	N129	Starter-alternator control unit (engine 256 with code B01 (48V technology))
N28/1	Trailer recognition control unit (with code 550 (Trailer hitch))	N129/1	Power electronics control unit (model 213.016/050/053/054)
N30/4	Electronic Stability Program control unit	N135	Steering wheel electronics (as of 01.06.2018)
N32/1	Driver's seat control unit (with CODE 221 (Electrically adjustable left driver's seat) or CODE 275 (Memory package))	N143	TV tuner control unit (with code 531 (COMAND APS) and code 865 (TV tuner))
N32/2	Front passenger seat control unit (with code 222 (Electrically adjustable right front seat) or code 275 (Memory package))	N145/1	Drive Unit control unit (transmission 725.092 up to model year 2018 except code 466 (Active engine mount) and except code 467 (Electronic locking differential), transmission 725.092 as of model year 2018, model 213.064 with transmission 725.0)
N32/5	Right rear seat control unit (model 213.1 with code 223 (Electrically adjustable rear bench seat))	N162	Ambiance illumination control unit (with code 877 (Ambiance illumination))
N32/6	Left rear seat control unit (model 213.1 with code 223 (Electrically adjustable rear bench seat))	Y3/8n4	Fully integrated transmission control unit (transmission 725)
N32/15	Left front multicontour seat control unit (with code 432 (Left and right dynamic multicontour seat))		

i Model 213.0 with transmission 725.092
The all-wheel drive control unit (N45) is not shown here.

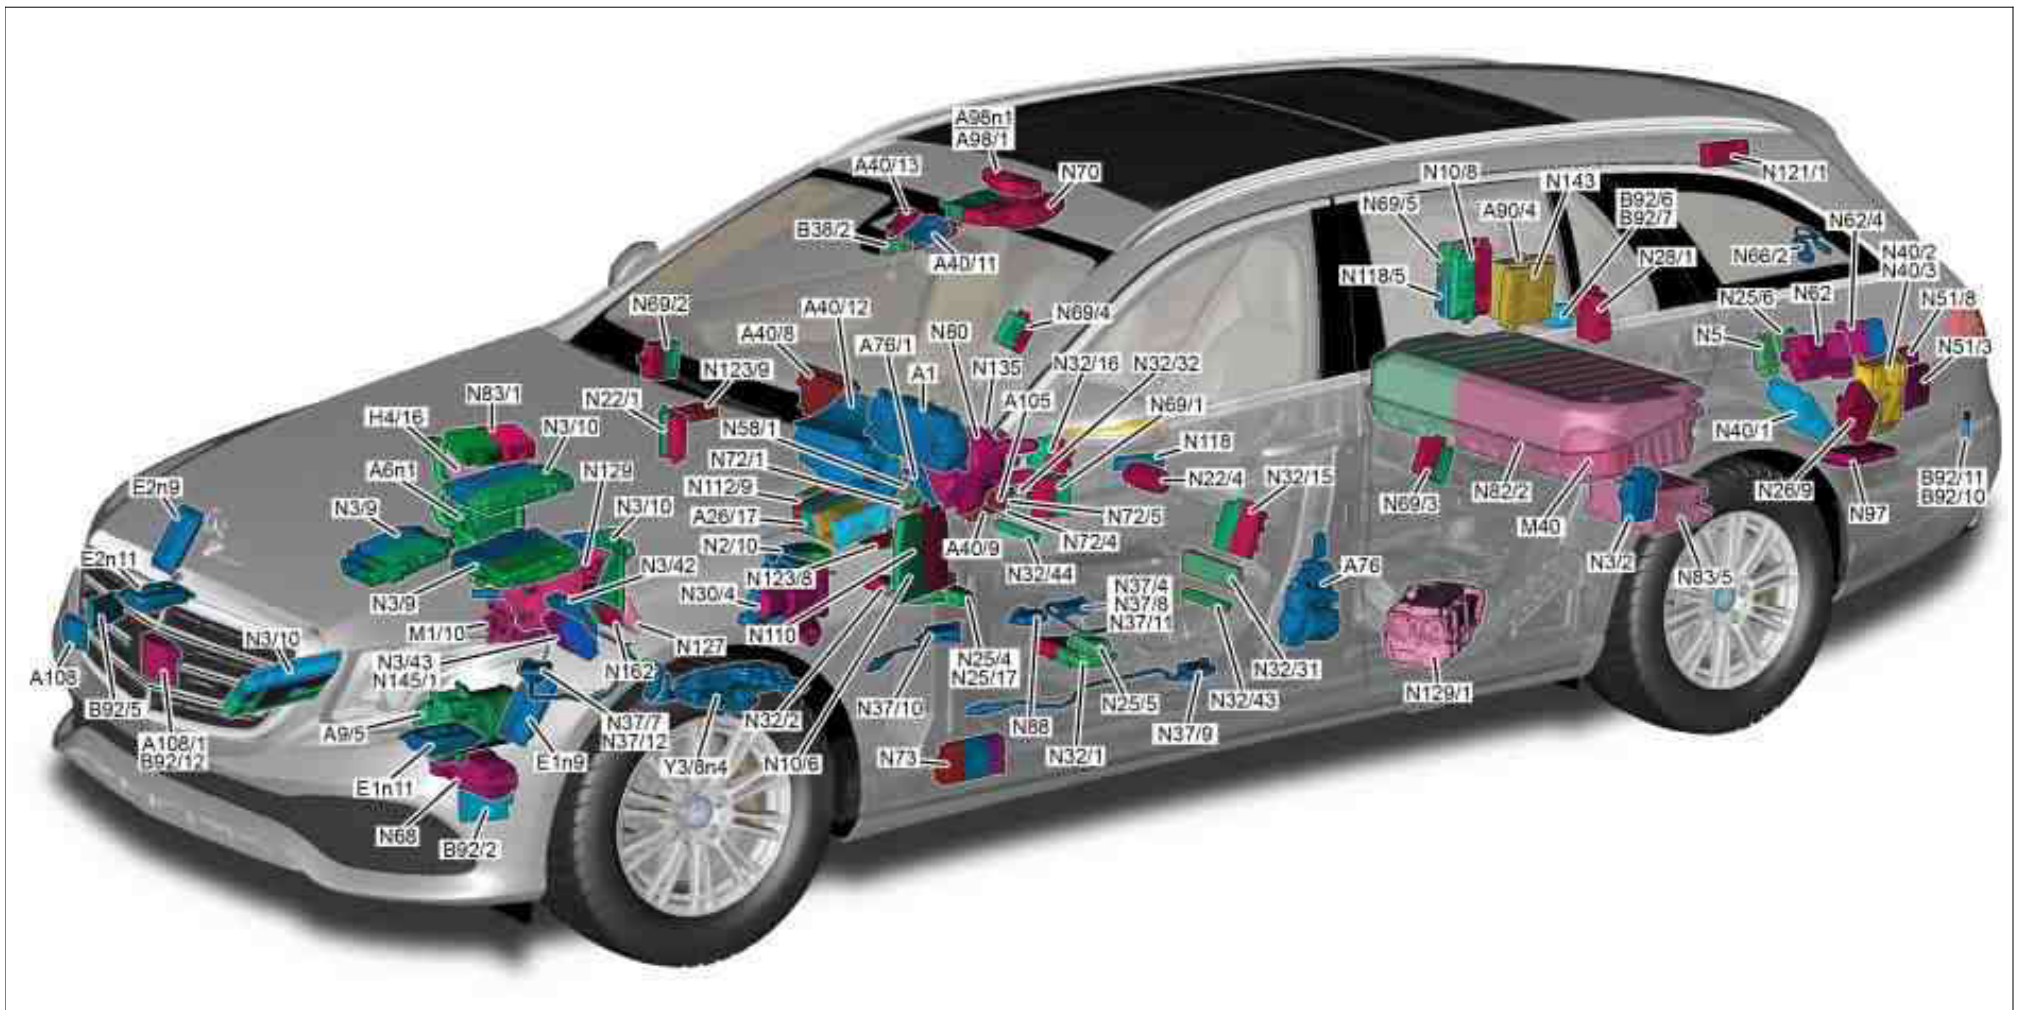

P00.19-A046-79

Model 213.2

A1	Instrument cluster	N32/16	Right front multicontour seat control unit (with code 432 (Left and right dynamic multicontour seat))
A6n1	Stationary heater control unit (with code 228 (Stationary heater))	N32/31	Left front backrest massage function control unit (with code 432 (Left and right dynamic multicontour seat))
A9/5	Electric refrigerant compressor (model 213.216 or with code B01 (48V technology))	N32/32	Right front backrest massage function control unit (with code 432 (Left and right dynamic multicontour seat))
A26/17	Head unit	N32/43	Left front seat cushion massage function control unit (with code 432 (Left and right dynamic multicontour seat))
A40/8	Audio/COMAND display	N32/44	Right front seat cushion massage function control unit (with code 432 (Left and right dynamic multicontour seat))
A40/9	Audio/COMAND control panel (except code 446 (Touchpad only))	N37/4	NOx sensor control unit (engine 274 with code 920 (Gasoline direct injection with stratified charge))

A40/11	Mono multifunction camera (with code 513 (Traffic Sign Assist) or code 22P (Lane package) or code P35 (Light package) and except code 23P (Driving Assistance package) and except code P20 (Driving Assistance package Plus))	N37/7	NOx sensor control unit downstream of diesel particulate filter (engine 642 with code U77 (BLUETEC (SCR) diesel exhaust treatment))
A40/12	Head-up-display (with code 463 (Head-up display))	N37/8	NOx sensor control unit downstream of SCR catalytic converter (engine 642 with code U77 (BLUETEC (SCR) diesel exhaust gas cleaning), engine 654 except in model 213.216 with code U79 (BLUETEC (SCR) Generation 3 diesel exhaust gas cleaning), engine 654 in model 213.216, engine 656)
A40/13	Stereo multifunction camera (with code 23P (Driving assistance package) or code P20 (Driving assistance package Plus))	N37/9	Left NOx sensor control unit upstream of NOx storage catalytic converter (engine 276.8 with code 920 (Gasoline direct injection with stratified charge))
A76	Left front reversible emergency tensioning retractor	N37/10	Right NOx sensor control unit upstream of NOx storage catalytic converter (engine 276.8 with code 920 (Gasoline direct injection with stratified charge))
A76/1	Right front reversible emergency tensioning retractor	N37/11	NOx sensor control unit downstream of NOx storage catalytic converter (engine 276.8 with code 920 (Gasoline direct injection with stratified charge))
A90/4	Tuner unit (with CODE 536 (SIRIUS satellite radio) or CODE 537 (Digital radio (DAB)))	N37/12	NOx sensor control unit upstream of diesel oxidation catalytic converter (engine 654 with code U79 (BLUETEC (SCR) Generation 3 diesel exhaust gas cleaning), engine 656)
A98n1	Panoramic sliding sunroof control unit (with code 413 (Panoramic sliding sunroof))	N40/1	Engine sound control unit (engine 177, 256, 276.823 except code 810 (Sound system), except code 811 (Advanced Sound System) and except code B63 (Sporty engine sound) up to 31.05.2018 or vehicles with code B63 (Sporty engine sound), except code 810 (Sound system) and except code 811 (Advanced Sound System))
A98/1	Sliding roof control module (with CODE 414 (Sliding roof))	N40/2	Midline sound system amplifier control unit (as of 01.06.2018, engine 177 except code 810 (Sound system) and except code 811 (Advanced Sound System) or engine 256 with code M016 (Engine, boosted high performance) except code 810 (Sound system) and except code 811 (Advanced Sound System))
A105	Touchpad (with code 446 (Touchpad only) or code 448 (Touchpad))	N40/3	Sound system amplifier control unit (with code 810 (Sound system))
A108	Active Brake Assist controller unit (with code 258 (COLLISION PREVENTION ASSIST))	N51/3	AIR BODY CONTROL control unit (with code 489 (AIR BODY CONTROL))
A108/1	Distance Pilot DISTRONIC controller unit (with code 239 (Active Distance Assist DISTRONIC))	N51/8	AIR BODY CONTROL Plus control unit (with code 489 (AIR BODY CONTROL))
B38/2	Rain/light sensor with additional functions	N58/1	Climate control operating unit
B92/2	Left outer front bumper radar sensor (with code 292 (Lateral PRE-SAFE® pulse))	N62	Parking system control unit (with code 235 (Parking Pilot with PARKTRONIC) or code P44 (Parking Package))
B92/5	Right outer front bumper radar sensor (with code 292 (Lateral PRE-SAFE® pulse))	N62/4	Mercedes-Benz Intelligent Drive control unit (with code 23P (Driving Assistance package) or code P20 (Driving Assistance package Plus))
B92/6	Right outer rear bumper integrated radar sensor (with CODE22P (Lane package))	N66/2	Reversing camera control unit (with code 218 (Reversing camera) and except code 235 (Parking Pilot with PARKTRONIC) and except code P44 (Parking Package))
B92/7	Right outer rear bumper radar sensor (with code 23P (Driving Assistance package) or code P20 (Driving Assistance package Plus))	N68	Electrical power steering control unit
B92/10	Left outer rear bumper radar sensor (with code 23P (Driving Assistance package) or code P20 (Driving Assistance package Plus))	N69/1	Left front door control unit
B92/11	Left outer rear bumper integrated radar sensor (with CODE 22P(Lane package))	N69/2	Right front door control unit
B92/12	Short and long-range radar sensor (with code 23P (Driving Assistance package) or code P20 (Driving Assistance package Plus))	N69/3	Left rear door control unit
E1n9	Left headlamp control unit (with code 631 (Static left-hand traffic LED headlamp) or code 632 (Static right-hand traffic LED headlamp) or code P35 (Light package))	N69/4	Right rear door control unit
E1n11	Left front lamp unit LED matrix control unit (with code P35 (Light package))	N69/5	KEYLESS-GO control unit
E2n9	Right headlamp control unit (with code 631 (Static left-hand traffic LED headlamp) or code 632 (Static right-hand traffic LED headlamp) or code P35 (Light package))	N70	Overhead control panel control unit
E2n11	Right front lamp unit LED matrix control unit (with code P35 (Light package))	N72/1	Upper control panel control unit
H4/16	Sound generator (model 213.216)	N72/4	Left lower control panel
M1/10	Starter alternator (engine 264 with code B01 (48V technology))	N72/5	Right lower control panel
M40	Pneumatic pump for multicontour seat (with CODE 432 (Left and right dynamic multicontour seat))	N73	Electronic ignition switch control unit
N2/10	Supplemental restraint system control unit	N80	Steering column module control unit
N3/2	Electric differential lock control unit (with code 467 (Electronic locking differential))	N82/2	Battery management system control unit (model 213.216)
N3/9	CDI control unit (diesel engine, with engine 654, 656 located at left, with engine 642 located in center)	N83/1	DC/DC converter control unit (with code B01 (48V technology))
N3/10	ME-SFI [ME] control unit (gasoline engine, with engine 177 located at front center, with engine 256 located at top left, with engine 274 located at left, with engine 276 located at the top center)	N83/5	Charger (model 213.216)

N3/42	Active engine mount control unit (engine 177.9 and code 466 (Active engine mount))	N88	Tire pressure monitor control unit (with CODE 475 (Tire pressure monitor))
N3/43	AMG sports suspension control unit (with transmission 725.092 up to model year 2018 with code 466 (Active engine mount) or with code 467 (Electronic locking differential))	N97	Electronic rear axle level control system control unit (except code 459 (Steel suspension with adjustable dampening) and except code 489 (AIR BODY CONTROL))
N5	Armrest heater control unit (with code 906 (Front armrest heater))	N110	Weight sensing system (WSS) control unit (with code U10 (Automatic front passenger airbag shutoff))
N10/6	Front SAM control unit	N112/9	HERMES control unit (with code 360 (HERMES UMTS) or code 362 (HERMES LTE))
N10/8	Rear SAM control unit	N118	Fuel pump control unit
N22/1	Climate control control unit	N118/5	AdBlue® control unit (engine 642, engine 654 with code U79 (BLUETEC (SCR) Generation 3 diesel exhaust gas cleaning), engine 656)
N22/4	Rear air conditioning operating unit (with code 581 (Automatic air conditioning))	N121/1	Liftgate control unit (with CODE 890 (EASY-PACK liftgate))
N25/4	Front passenger seat heater control unit (with code 902 (Seat heater plus for driver and front passenger))	N123/8	Mobile phone cradle control unit (with code 896 (Vehicle access and drive authorization via mobile phone) or code 897 (Wireless mobile phone charging) or code 899 (Multifunction telephony))
N25/5	Driver seat heater control unit (with code 902 (Seat heater plus for driver and front passenger))	N123/9	Telephone control unit (with code 380 (Car telephony package))
N25/6	Rear seat heater control unit (with code 872 (Seat heater in rear))	N127	Drivetrain control unit
N25/17	Front seat heater/seat ventilation control unit (with code 401 (Seat climate control for driver and front passenger) or code 873 (Seat heater for driver and front passenger), except code 221 (Electrically adjustable left driver's seat) and except code 222 (Electrically adjustable right front seat) and except code 275 (Memory package))	N129	Starter-alternator control unit (engine 256 with code B01 (48V technology))
N26/9	Special-purpose vehicle multifunction control unit (with CODE 965 (Taxi / rental vehicle pre-installation))	N129/1	Power electronics control unit (model 213.216)
N28/1	Trailer recognition control unit (with code 550 (Trailer hitch))	N135	Steering wheel electronics (as of 01.06.2018)
N30/4	Electronic Stability Program control unit	N143	TV tuner control unit (with code 531 (COMAND APS) and code 865 (TV tuner))
N32/1	Driver's seat control unit (with CODE 221 (Electrically adjustable left driver's seat) or CODE 275 (Memory package))	N145/1	Drive Unit control unit (transmission 725.092 up to model year 2018 except code 466 (Active engine mount) and except code 467 (Electronic locking differential), transmission 725.092 as of model year 2018, model 213.264 with transmission 725.0)
N32/2	Front passenger seat control unit (with code 222 (Electrically adjustable right front seat) or code 275 (Memory package))	N162	Ambiance illumination control unit (with code 877 (Ambiance illumination))
N32/15	Left front multicontour seat control unit (with code 432 (Left and right dynamic multicontour seat))	Y3/8n4	Fully integrated transmission control unit (transmission 725)

i Model 213.2 with transmission 725.092
The all-wheel drive control unit (N45) is not shown here.

	Component description for instrument cluster	A1	GF54.30-P-6000FG
	Stationary heater control unit, component description	Model 213 with code 228 (Auxiliary heater) A6n1	GF83.70-P-4066FG
	Component description for electric refrigerant compressor	Model 213 (except 213.016/050/053/054/216) with code B01 (48V technology) Model 213.016/050/053/054/216 A9/5	GF83.55-P-2110FG
	Head unit, component description	Model 213 with code 520 (Audio 20 USB) except code 506 (Audio 20 NTG 5.5 radio) except code 522 (Audio 20 radio) except code 531 (COMAND APS) A26/17 Model 213 with code 522 (Audio 20 radio) except code 506 (Audio 20 NTG 5.5 radio) except code 520 (Audio 20 USB) except code 531 (COMAND APS) A26/17 Model 213 with code 506 (Audio 20 NTG 5.5 radio) Model 213 with code 531 (COMAND APS) A26/17	GF82.85-P-3140FG GF82.85-P-3140FGA GF82.85-P-3140FGB
	Component description for Audio/COMAND display	A40/8	GF54.30-P-6150FG
	Component description for Audio/COMAND control panel	Model 213 except code 446 (Touchpad only) A40/9	GF54.21-P-4501FG

Component description for multifunction camera	Model 213 with code 22P (Lane tracking package) Model 213 with code 23P (Driving Assistance package) Model 213 with code 513 (Traffic Sign Assist) Model 213 with code P20 (Driving Assistance package Plus) Model 213 with code P35 (Light Package) A40/11, A40/13	GF54.21-P-3300FG
Head-up display, component description	Model 213 with code 463 (Head-up display) A40/12	GF54.30-P-6140FG
Component description for front reversible emergency tensioning retractors	A76, A76/1	GF91.40-P-4020FG
Tuner unit, component description	Model 213 with code 522 (Audio 20 radio) with code 536 (SIRIUS satellite radio) Model 213 with code 522 (Audio 20 radio) with code 537 (Digital radio (DAB)) A90/4	GF82.60-P-5015FG
Component description for panoramic sliding roof control module	Model 213 with code 413 (Automatic panoramic sliding sunroof) A98n1	GF77.20-P-4106FG
Component description for sliding roof control module	Model 213 with code 414 (Sliding sunroof) A98/1	GF77.20-P-4108FG
Touchpad, component description	Model 213 with code 446 (Touchpad only) Model 213 with code 448 (Touchpad) A105	GF54.21-P-4511FG
Active Brake Assist controller unit, component description	Model 213 with code 258 (COLLISION PREVENTION ASSIST) A108	GF30.30-P-3222FG
DISTRONIC Distance-Pilot controller unit, component description	Model 213 with code 239 (Active Distance Assist DISTRONIC) A108/1	GF30.30-P-3218FG
Accelerator pedal module control unit, component description	Model 213.050/053 with engine 274.9 B37n1	GF07.08-P-2000MRP
Rain/light sensor with additional functions, component description	B38/2	GF54.21-P-6005FG
Component description for bumper radar sensors	Model 213 with code 22P (Lane tracking package) Model 213 with code 23P (Driving Assistance package) Model 213 with code P20 (Driving Assistance package Plus) B92/2, B92/5, B92/6, B92/7, B92/10, B92/11	GF30.30-P-3302FG
Short and long-range radar sensor, component description	Model 213 with code 23P (Driving Assistance package) Model 213 with code P20 (Driving Assistance package Plus) B92/12	GF30.30-P-3126FG
Headlamp control unit, component description	Model 213 with code 631 (Static LED headlamps, left-hand traffic) Model 213 with code 632 (Headlamps, LED, static, right-side traffic) Model 213 with code P35 (Light Package) E1n9, E2n9	GF82.10-P-2020FG
Front LED matrix lamp unit control unit, component description	Model 213 with code P35 (Light Package) E1n11, E2n11	GF82.10-P-2025FG
Component description for starter-alternator	Model 213 with engine 264 with code B01 (48V technology) M1/10	GF15.40-P-2103FG
Multicontour seat pneumatic pump (MCS), component description	Model 213.1 with code 406 (Rear multicontour seat) Model 213 with code 432 (Left and right dynamic multicontour seat) M40	GF91.25-P-5205FG
Supplemental restraint system control unit, component description	N2/10	GF91.60-P-4080FG

	Electric differential lock control unit, component description	Model 213 with code 467 (Electronic locking differential) N3/2	GF35.40-P-2000FG
	Component description for CDI control unit	Model 213 with engine 642.8 N3/9 Model 213 (except 213.016/216) with engine 654.9 N3/9 Model 213.016/216 with engine 654.9 N3/9 Model 213 with engine 656.9 N3/9	GF07.16-P-6000OGW GF07.16-P-6000ORC GF07.16-P-6000ORE GF07.16-P-6000OIA
	Component description for ME-SFI (ME) control unit	Model 213 with engine 256.9 N3/10 Model 213 with engine 264.9 N3/10 Model 213 with engine 177.9 N3/10 Model 213 (except 213.050/053) with engine 274.9 N3/10 Model 213.050/053 with engine 274.9 N3/10 Model 213 with engine 276.8 N3/10	GF07.61-P-6000MRT GF07.61-P-6000MRG GF07.61-P-6000MNA GF07.61-P-6000MRD GF07.61-P-6000MRP GF07.61-P-6000MND
	Active engine mount control unit, component description	Model 213 with engine 177.9 with code 466 (Active engine mount) N3/42	GF22.10-P-2001MNA
	AMG sports suspension control unit, component description	Model 213 with transmission 725.092 up to model year 2018 with code 466 (Active engine mount) with code 467 (Electronic locking differential) N3/43	GF54.21-P-1002FG
	Armrest heater control unit, component description	Model 213.1 with code 907 (Rear armrest heater) Model 213 with code 906 (Front armrest heater) N5	GF68.20-P-2000FG
	Component description for front SAM control unit	N10/6	GF54.21-P-7010FG
	Component description for rear SAM control unit	N10/8	GF54.21-P-7030FG
	Climate control control unit, component description	N22/1	GF83.40-P-2250FG
	Rear climate control operating unit, component description	Model 213 with code 581 (Automatic air conditioning) N22/4	GF83.40-P-3050FG
	Seat heater control unit, component description	Model 213 with code 902 (Seat heater Plus for driver and front passenger) except code 401 (Climatised front seats) except code 872 (Heated rear seats) except code 873 (Seat heaters for driver and front passenger) except code 903 (Seat heater Plus for rear outer seats) N25/4, N25/5 Model 213 with code 872 (Heated rear seats) except code 223 (Electrically adjustable rear bench seat) except code 401 (Climatised front seats) except code 873 (Seat heaters for driver and front passenger) except code 902 (Seat heater Plus for driver and front passenger) except code 903 (Seat heater Plus for rear outer seats) N25/6 Model 213.1 with code 903 (Seat heater Plus for rear outer seats) N25/11, N25/12	GF91.30-P-5214FG GF91.30-P-5214FGA GF91.30-P-5214FGB

		<p>Model 213 with code 401 (Climatised front seats) except code 221 (Electrically adjustable left driver seat) except code 222 (Electrically adjustable right front seat) except code 275 (Memory package) except code 872 (Heated rear seats) except code 873 (Seat heaters for driver and front passenger) except code 902 (Seat heater Plus for driver and front passenger) except code 903 (Seat heater Plus for rear outer seats)</p> <p>Model 213 with code 873 (Seat heaters for driver and front passenger) except code 221 (Electrically adjustable left driver seat) except code 222 (Electrically adjustable right front seat) except code 275 (Memory package) except code 401 (Climatised front seats) except code 872 (Heated rear seats) except code 902 (Seat heater Plus for driver and front passenger) except code 903 (Seat heater Plus for rear outer seats)</p> <p>N25/17</p>	GF91.30-P-5214FGC
	Special vehicle multifunction control unit (SVMCU (MSS)), component description	<p>Model 213 with code 965 (Preinstallation for hire car)</p> <p>N26/9</p>	GF54.21-P-4010FG
	Component description for trailer recognition control unit	<p>Model 213 with code 550 (Trailer coupling)</p> <p>N28/1</p>	GF31.19-P-4050FG
	Component description for Electronic Stability Program control unit	<p>Model 213 (except 213.016/050/053/153/216) N30/4</p> <p>Model 213.016/050/053/153/216 N30/4</p>	<p>GF42.45-P-5119FG</p> <p>GF42.45-P-5119FGH</p>
	Component description for driver seat control unit	<p>Model 213 with code 221 (Electrically adjustable left driver seat)</p> <p>Model 213 with code 275 (Memory package)</p> <p>N32/1</p>	GF91.29-P-5231FG
	Component description for front passenger seat control unit	<p>Model 213 with code 222 (Electrically adjustable right front seat)</p> <p>Model 213 with code 275 (Memory package)</p> <p>N32/2</p>	GF91.29-P-5241FG
	Right rear seat control unit, component description	<p>Model 213.1 with code 223 (Electrically adjustable rear bench seat)</p> <p>N32/5</p>	GF91.29-P-5290FG
	Left rear seat control unit, component description	<p>Model 213.1 with code 223 (Electrically adjustable rear bench seat)</p> <p>N32/6</p>	GF91.29-P-5285FG
	Multicontour seat control unit (MCS), component description	<p>Model 213.1 with code 406 (Rear multicontour seat)</p> <p>Model 213 with code 432 (Left and right dynamic multicontour seat)</p> <p>N32/15, N32/16, N32/20, N32/21</p>	GF91.25-P-5201FG
	Component description for massage function control unit	<p>Model 213.1 with code 406 (Rear multicontour seat)</p> <p>Model 213 with code 432 (Left and right dynamic multicontour seat)</p> <p>N32/31, N32/32, N32/33, N32/34, N32/43, N32/44</p>	GF91.25-P-5212FG
	Component description for NOx sensor control unit	<p>Model 213 (except 213.050/053/153) with engine 274.9 with code 920 (Direct petrol injection with stratified charging)</p> <p>N37/4</p> <p>Model 213 with engine 642.8 with code U77 (Diesel Emission control BLUETEC (SCR))</p> <p>N37/7, N37/8</p> <p>Model 213 with engine 654.9 with code U79 (BLUETEC (SCR) diesel exhaust treatment, generation 3)</p> <p>N37/8, N37/12</p>	<p>GF14.40-P-3024MRD</p> <p>GF14.40-P-3024OGW</p> <p>GF14.40-P-3024ORC</p>

		Model 213 with engine 276.8 with code 920 (Direct petrol injection with stratified charging) N37/9, N37/10, N37/11 Model 213 with engine 656.9 N37/8, N37/12	GF14.40-P-3024MND GF14.40-P-3024OIA
	Engine sound control unit, component description	Model 213 with engine 177 up to model year 2019 except code 810 (Sound system) except code 811 (Advanced sound system) except code B63 (Sporty engine sound) Model 213 with engine 256 up to model year 2019 except code 810 (Sound system) except code 811 (Advanced sound system) except code B63 (Sporty engine sound) Model 213 with engine 276.823 up to model year 2019 except code 810 (Sound system) except code 811 (Advanced sound system) except code B63 (Sporty engine sound) Model 213 with code B63 (Sporty engine sound) except code 810 (Sound system) except code 811 (Advanced sound system) N40/1	GF54.21-P-0019FG
	Component description for sound system amplifier control unit	Model 213 with engine 177 as of model year 2019 except code 810 (Sound system) except code 811 (Advanced sound system) Model 213 with engine 256 as of model year 2019 with code M016 (Uprated engine) except code 810 (Sound system) except code 811 (Advanced sound system) N40/2 Model 213 with code 810 (Sound system) except code 811 (Advanced sound system) N40/3 Model 213 with code 811 (Advanced sound system) N40/7	GF82.62-P-5010FGB GF82.62-P-5010FG GF82.62-P-5010FGA
	All-wheel drive control unit, component description	Model 213 with transmission 725.092 N45	GF28.19-P-3211AVL
	AIR BODY CONTROL control unit, component description	Model 213 with code 489 (AIR BODY CONTROL) N51/3, N51/8	GF32.22-P-5111FG
	Front climate control operating unit, component description	N58/1	GF83.40-P-2260FG
	Parking system control unit, component description	Model 213 with code 235 (Parking Pilot with PARKTRONIC) Model 213 with code P44 (Parking package) N62	GF54.65-P-5004FG
	Mercedes-Benz Intelligent Drive control unit, component description	Model 213 with code 23P (Driving Assistance package) Model 213 with code P20 (Driving Assistance package Plus) N62/4	GF30.30-P-3312FG
	Component description for reversing camera control unit	Model 213 with code 218 (Rear view camera) except code 235 (Parking Pilot with PARKTRONIC) except code P44 (Parking package) N66/2	GF54.65-P-5030FG
	Electrical power steering control unit (ES), component description	N68	GF46.35-P-7010FG
	Component description for left front door control unit	N69/1	GF72.29-P-6001FG
	Component description for right front door control unit	N69/2	GF72.29-P-6009FG
	Component description for rear door control unit	N69/3, N69/4	GF72.29-P-6021FG
	Component description for KEYLESS-GO control unit	N69/5	GF80.61-P-4204FG
	Component description for overhead control panel control unit	N70	GF82.20-P-5216FG
	Upper control panel control unit, component description	N72/1	GF54.21-P-6040FG
	Lower control panel, component description	N72/4, N72/5	GF54.25-P-4270FG
	Component description for the electronic ignition lock control unit	N73	GF80.57-P-6001FG

Component description for steering column tube module control unit	Model 213 as of model year 2019 N80 Model 213 up to model year 2019 N80	GF54.21-P-6051FGA GF54.21-P-6051FG
Component description for battery management system control unit	Model 213.016/216 with engine 654.920 Model 213.050 with engine 274.9 Model 213.053 with engine 274.920 N82/2	GF54.10-P-3012FGH
Component description for DC/DC converter control unit	Model 213 with code B01 (48V technology) N83/1	GF54.10-P-3006FG
High-voltage charger control unit, component description	Model 213.016/216 with engine 654.920 Model 213.050 with engine 274.9 Model 213.053 with engine 274.920 N83/5	GF08.20-P-2000FGH
Component description for tire pressure monitor control unit	Model 213 with code 475 (Tyre pressure monitoring system) N88	GF40.15-P-5124FG
Rear axle electronic level control control unit	Model 213.2 except code 459 (Steel suspension with adjustable damping) except code 489 (AIR BODY CONTROL) N97	GF32.33-P-3405FG
Component description for Weight Sensing System (WSS) control unit	Model 213 with code U10 (Automatic seat occupancy recognition and child seat recognition) N110	GF91.60-P-4069FG
HERMES control unit, component description	Model 213 with code 360 (HERMES UMTS) Model 213 with code 362 (HERMES LTE) N112/9	GF82.85-P-0221FG
Component description for fuel pump control unit	Model 213 with engine 177.9 N118 Model 213 with engine 256.9, 264.9, 274.9, 276.8 N118 Model 213 (except 213.016/216) with engine 654.9 Model 213 with engine 642.8 N118 Model 213.016/216 with engine 654.9 N118 Model 213 with engine 656.9 N118	GF47.40-P-2001MNA GF47.40-P-2001MRD GF47.40-P-2001ORC GF47.40-P-2001ORE GF47.40-P-2001OGS
Component description for exhaust aftertreatment control unit	Model 213 with engine 642.8 with code U77 (Diesel Emission control BLUETEC (SCR)) N118/5 Model 213 with engine 654.9 with code U79 (BLUETEC (SCR) diesel exhaust treatment, generation 3) N118/5 Model 213 with engine 656.9 N118/5	GF14.40-P-3030OGW GF14.40-P-3030ORC GF14.40-P-3030OIA
Trunk lid/liftgate control control unit, component description	Model 213.0/1 with code 881 (Remote boot lid closing) Model 213.2 with code 890 (EASY-PACK-tailgate) N121, N121/1	GF80.20-P-6092FG
Mobile phone cradle control unit component description	Model 213 with code 896 (Vehicle access and drive authorization via mobile phone) Model 213 with code 897 (Wireless mobile phone charging) Model 213 with code 899 (Multifunction telephony) N123/8	GF82.70-P-0201FG
Telephone control unit, component description	Model 213 with code 380 (Car telephony package) N123/9	GF82.70-P-4153FG
Drivetrain control unit, component description	Model 213 with engine 177.9 N127 Model 213 with engine 256.9 N127 Model 213 with engine 264.9, 274.9, 276.8 N127 Model 213 (except 213.016/216) with engine 654.9 Model 213 with engine 642.8 N127	GF54.21-P-2141MNA GF54.21-P-2141LF GF54.21-P-2141MRP GF54.21-P-2141ORC

		Model 213.016/216 with engine 654.9 N127 Model 213 with engine 656.9 N127	GF54.21-P-2141ORE GF54.21-P-2141OGS
	Starter-alternator control unit component description	Model 213 with engine 256 with code B01 (48V technology) N129	GF54.21-P-4191FG
	Component description for power electronics control unit	Model 213.016/216 with engine 654.920 Model 213.050 with engine 274.9 Model 213.053 with engine 274.920 N129/1	GF08.20-P-1001FGH
	Steering wheel electronics control unit, component description	Model 213 as of model year 2019 N135	GF82.90-P-4006FG
	Digital TV tuner, component description	Model 213 with code 531 (COMAND APS) with code 865 (TV tuner) N143	GF82.60-P-3118FG
	Drive unit control unit component description	Model 213 with transmission 725.092 as of model year 2018 Model 213 with transmission 725.092 up to model year 2018 except code 466 (Active engine mount) except code 467 (Electronic locking differential) Model 213.064/264 with transmission 725.0 N145/1	GF27.60-P-5168FG
	Ambiance illumination control unit, component description	Model 213 with code 877 (ambient lighting) N162	GF82.20-P-5161FG
	Component description for fully integrated transmission control unit	Model 213 with transmission 725.0 (except 725.007/017/092/096) Y38n4 Model 213 with transmission 725.007/017 Y38n4 Model 213 with transmission 725.092 Y38n4	GF27.60-P-5165ANL GF27.60-P-5165AHU GF27.60-P-5165ANO
	Overall network (GVN) function description table of contents		GF00.19-P-0999FG