



MODEL 204.0 /2 /3, 207, 212, 218

Shown on model 204.0

- 1 Washing water reservoir
- 2 Expansion clip
- 3 Cover
- 4 Screw
- 5 Bracket

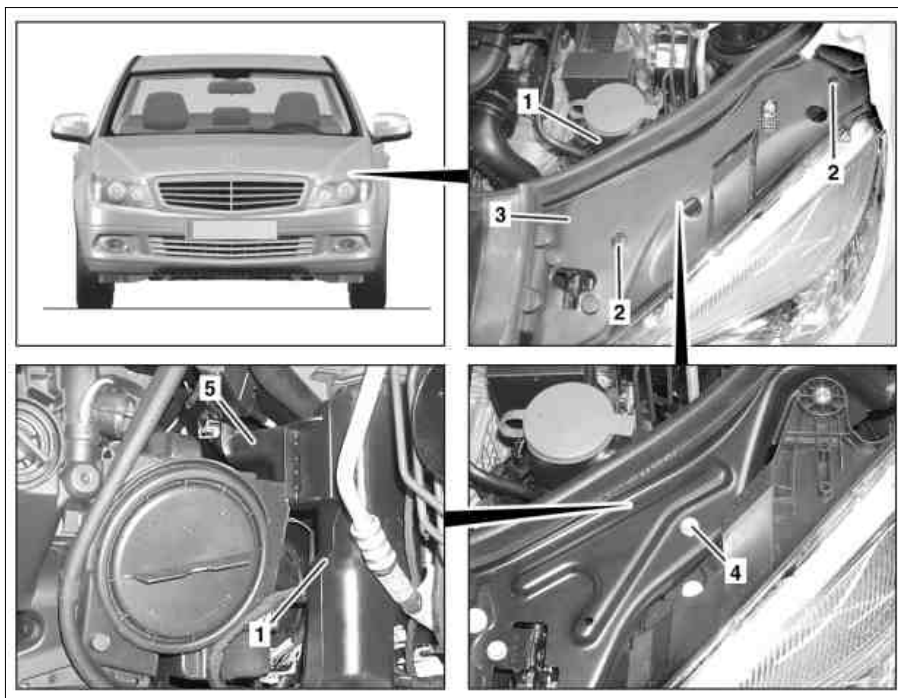

P82.35-2502-06

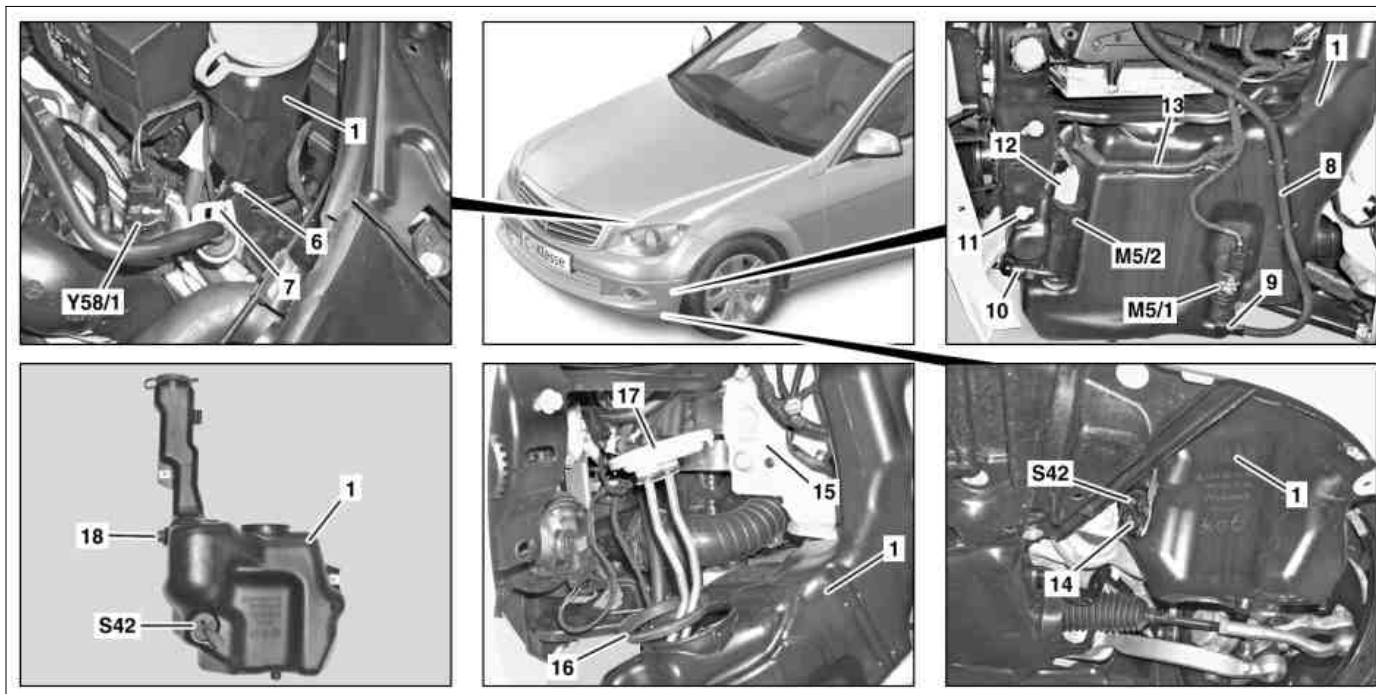


P82.35-2503-09

Shown on model 204.0 with gasoline engine and with code (600) Headlamp cleaning system and with code (875) Heated windshield washer system

- | | | | |
|----|--|-------|---|
| 1 | Washing water reservoir | 14 | Electrical connector |
| 6 | Screw | 15 | Bracket |
| 7 | Bracket (for gasoline engine only) | 16 | Seal |
| 8 | Washer fluid hose | | (with code (875) Heated windshield washer system) |
| 9 | Hose connector | 17 | Heat exchanger |
| 10 | Hose coupling | | (with code (875) Heated windshield washer system) |
| 11 | Screw | 18 | Pin |
| 12 | Electrical connector | M5/1 | Windshield washer system pump |
| | (with code (600) Headlamp cleaning system) | M5/2 | Headlamp cleaning system pump |
| 13 | Wiring harness | | (with code (600) Headlamp cleaning system) |
| | (with code (600) Headlamp cleaning system) | S42 | Windshield washer system fluid level switch |
| | | Y58/1 | Purge control valve (gasoline engine only) |

☒ ☒	Remove/install		
1	Remove expansion clip (2) and remove cover (3)	Only in model 204.0/2/3, 212	
2	Remove screw/bolt (4) and unclip bracket (5) at washer fluid reservoir (1)		
3	Unhook purge control valve (Y58/1) from bracket (7)	Only in model 204, 207, 212 with gasoline engine	
4	Remove bolt (6)		
⚠ Danger!	Risk of death caused by vehicle slipping or toppling off of the lifting platform.	Align vehicle between columns of vehicle lift and position four support plates at vehicle lift support points specified by vehicle manufacturer.	AS00.00-Z-0010-01A
5	Lift vehicle on lifting platform.		
6	Remove fender liner front section		
7	Unclip washer fluid hose (8) from washer fluid reservoir (1)		
8	Unclip windshield washer system pump (M5/1) and place to one side with lines connected	<p>ⓘ Collect washer fluid which flows out.</p> <p>ⓘ Installation: Inspect gasket, install new part if necessary.</p> <p>🔧 Mounting wedge</p>	*110589035900
9	Detach hose coupling (10)	For vehicles with code (600) Headlamp cleaning system	
10	Detach electrical connector (12) and expose wiring harness (13)	For vehicles with code (600) Headlamp cleaning system	
11	Unclip and remove headlamp cleaning system pump (M5/2)	<p>For vehicles with code (600) Headlamp cleaning system</p> <p>ⓘ Installation: Inspect gasket, install new part if necessary.</p> <p>🔧 Mounting wedge</p>	*110589035900
12	Remove bolt (11)		
13	Lower washer fluid reservoir (1)	ⓘ Installation: Insert pin (18) of washer fluid reservoir (1) into bracket (15).	
14	Detach electrical connector (14) from windshield washer system fluid level switch (S42)		
15	Unclip heat exchanger (17) from washer fluid reservoir (1) and guide heat exchanger (17) out of washer fluid reservoir (1)	<p>In vehicles with code (875) heated windshield washer system</p> <p>ⓘ Installation: Check gasket (16) and replace if necessary. Ensure that seal (16) is seated correctly.</p> <p>🔧 Mounting wedge</p>	*110589035900
16	Take off washer fluid reservoir (1)		
17	Remove windshield washer system fluid level switch (S42)	<p>ⓘ When replacing the washer fluid reservoir (1).</p> <p>🔧 Mounting wedge</p>	*110589035900
18	Install in the reverse order		
19	Fill washer fluid reservoir (1)	Model 204 Model 207, 212, 218	AP82.35-P-8210CW AP82.35-P-8210EW

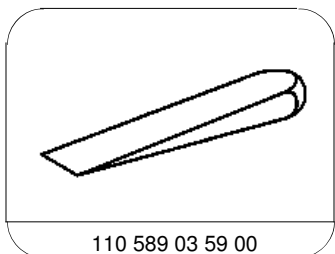

110 589 03 59 00

Mounting wedge