


Model 212.0/1
 up to model year 2014
 with code 810 (Premium sound system)

Model 218
 with code 810 (Premium sound system)

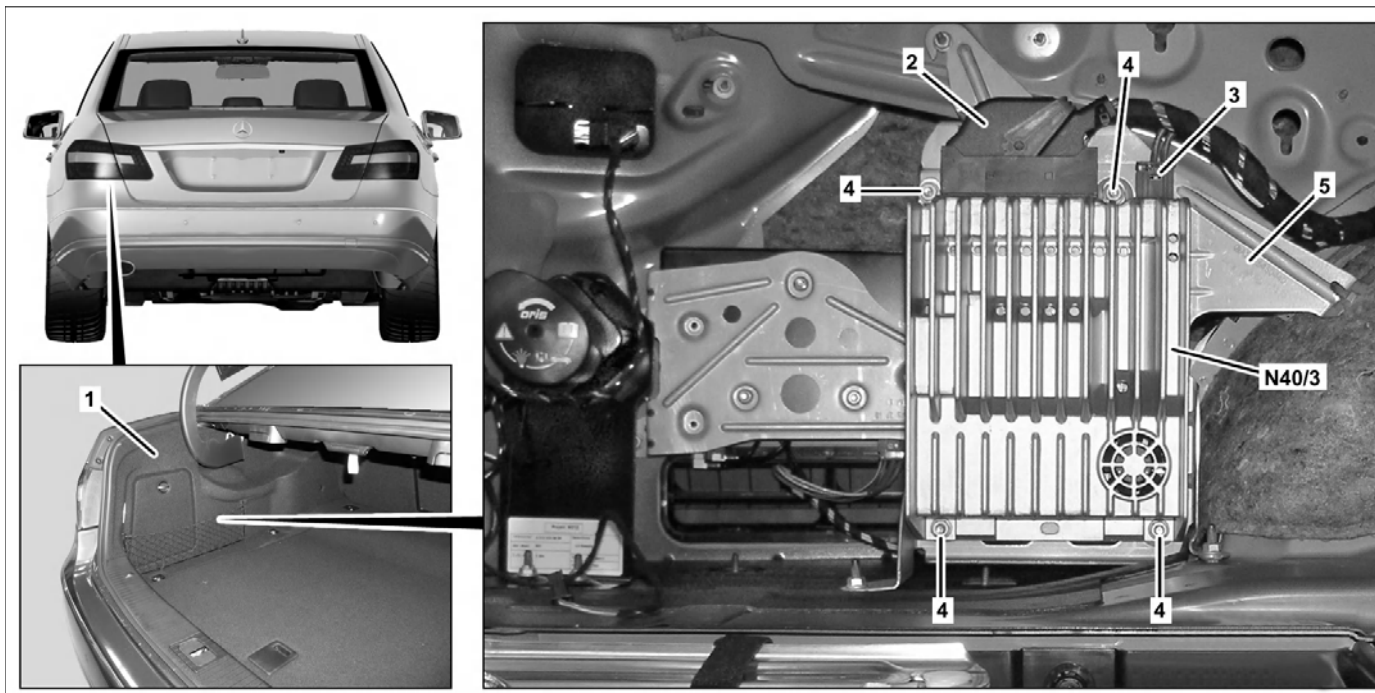


P82.62-3490-09

Shown on model 212.0

- | | | | | | |
|---|----------------------|---|--|-------|-------------------------------------|
| 1 | Left side paneling | 3 | Electrical connection with fiber optic cable | 5 | Bracket |
| 2 | Electrical connector | 4 | Nut | N40/3 | Sound system amplifier control unit |

MODEL 218.9

- 7 Cover
 8 Left rear side lining

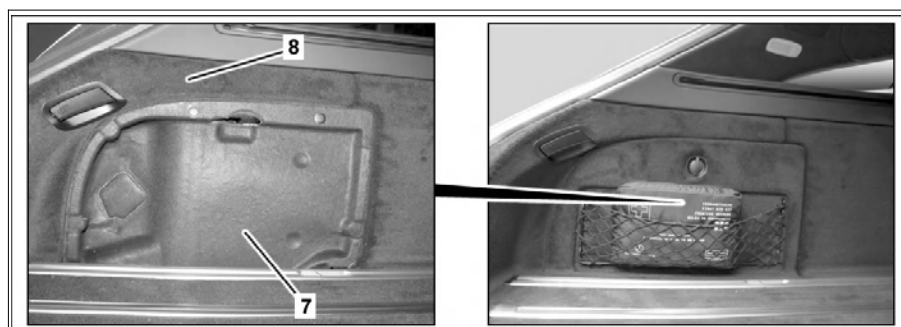

P82.62-4227-04

	Information on preventing damage to electronic components due to electrostatic discharge		AH54.00-P-0001-01A
	Notes on avoiding damage to optical fibers during repair work		AH82.60-P-0001-05AK
	Remove/install		
1	Connect diagnostic system and perform initial startup of sound system amplifier control unit (N40/3)	When replacing sound system amplifier control unit (N40/3). i Installation: Transfer buffered basic data to new sound system amplifier control unit (N40/3).	AD00.00-P-2000-04A

2.1	Switch off ignition and remove transmitter key from electronic ignition lock control unit	Model 212.0/1 up to model year 2014 with code 810 (Premium sound system) except code 889 (Keyless Go) Model 218 with code 810 (Premium sound system) except code 889 (Keyless Go)	
2.2	Switch off ignition and remove transmitter key or KEYLESS-GO start/stop button from electronic ignition lock control unit	Model 212.0/1 up to model year 2014 with code 810 (Premium sound system) with code 889 (Keyless Go) Model 218 with code 810 (Premium sound system) with code 889 (Keyless Go)	
3.1	Remove left side paneling (1)	Model 212.0/1 up to model year 2014 with code 810 (Premium sound system) Model 218.3 with code 810 (Premium sound system) Model 212.0/1 up to model year 2014 with code 810 (Premium sound system) Model 218.3 with code 810 (Premium sound system)	AR68.30-P-4600EW AR68.30-P-4600EL
3.2	Remove cover (7) from left rear side lining (8)	Model 218.9 with code 810 (Premium sound system)	AR68.30-P-1180ELX
4	Disconnect electrical connection (2)		
5	Disconnect electrical connector with optical fiber (3) and cover equipment connection at sound system amplifier control unit (N40/3)		
6	Unscrew nuts (4)		
7	Remove sound system amplifier control unit (N40/3) from bracket (5)		
8	Install in the reverse order		