Document title Notes on sealant path for timing case cover


Document number ah0140p100001mma

ENGINE 276

i The sealant may only be applied to the prescribed surfaces in the form of a bead with a height and width of

1 3 mm (\pm 0,2 mm). **i** The sealing surfaces must be cleaned.

The sealant bead must not be spread. Use only the sealant indicated in the repair materials. Mount timing case cover within 10 minutes after application of the sealant.

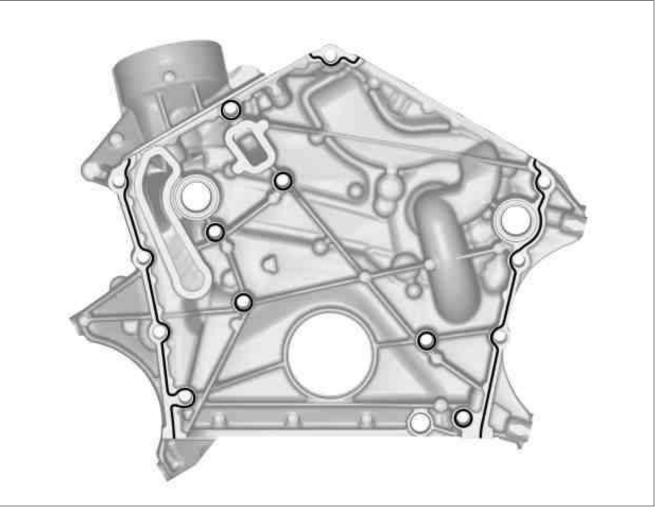

i

P01.40-2267-06