



Code:	Designation:	Position:
A0	Color code key	96L
Code 581	Automatic air conditioning	696
Code U42	BLUETEC diesel exhaust treatment	60J
Code U77	BLUETEC (SOR) diesel exhaust treatment	60J
K40/10	HYBRID fuse and relay module	48L
N10/1	Front SAM control unit with fuse and relay module	20A
N10/1	Front SAM control unit with fuse and relay module	37A
N10/1	Front SAM control unit with fuse and relay module	44A
N10/1	Front SAM control unit with fuse and relay module	69A
N10/1	Front SAM control unit with fuse and relay module	76A
N10/1	Front SAM control unit with fuse and relay module	85A
N10/1	Front SAM control unit with fuse and relay module	53A
N10/1	Front SAM control unit with fuse and relay module	61A
N10/1	Front SAM control unit with fuse and relay module	29A
N10/1	Front SAM control unit with fuse and relay module	91A
N10/1f1	Fuse 1	69A
N10/1f14	Fuse 14	66A
N10/1f2	Fuse 2	84A
N10/1f20	Fuse 20	67A
N10/1f25	Fuse 25	46A
N10/1f3	Fuse 3	77A
N10/1f6	Fuse 6	15A
N10/1f7	Fuse 7	17A
N10/1f9	Fuse 9	90A
N10/1KM	Starter circuit 50 relay	18A
N18/2	OM6 control unit	3L
N3/10	ME-SFI [ME] control unit	7L
N3/10	ME-SFI [ME] control unit	11L
N3/10	ME-SFI [ME] control unit	31L
N3/10	ME-SFI [ME] control unit	15L
N3/9	ME-SFI [ME] control unit	19L
N3/9	CDI control unit	26L
N3/9	CDI control unit	26L
N30/4	Electronic Stability Program control unit	67L
N30/4	Electronic Stability Program control unit	67L
N30/7	Premium Electronic Stability Program control unit	66L
N30/7	Premium Electronic Stability Program control unit	68L
N69/1	Left front door control unit	82L
N69/2	Right front door control unit	74L
N69/3	Left rear door control unit	86L

Code:	Designation:	Position:
M69/4	Right rear door control unit	78L
U1018	Valid for gasoline engine 276	42J
U1018	Valid for gasoline engine 276	56J
U1018	Valid for gasoline engine 276	136
U1027	Valid for gasoline engine 271 continuous fuel injection system (electronic)	16
U1027	Valid for gasoline engine 271 continuous fuel injection system (electronic)	356
U1027	Valid for gasoline engine 271 continuous fuel injection system (electronic)	40J
U1032	Valid for engine 278 and 157	42J
U1032	Valid for engine 278 and 157	57J
U1032	Valid for engine 278 and 157	136
U107	Valid for socket in glove compartment	886
U113	Valid for 2-zone THERMATIC	696
U12	Valid for left-hand drive vehicles	666
U12	Valid for left-hand drive vehicles	736
U12	Valid for left-hand drive vehicles	766
U12	Valid for left-hand drive vehicles	806
U127	Valid for left-hand drive vehicles	90J
U127	Valid for combustion engines 272 and 273 KE	16
U127	Valid for combustion engines 272 and 273 KE	336
U127	Valid for combustion engines 272 and 273 KE	39J
U127	Valid for combustion engines 272 and 273 KE	53J
U13	Valid for right-hand drive vehicles	696
U13	Valid for right-hand drive vehicles	736
U13	Valid for right-hand drive vehicles	806
U13	Valid for right-hand drive vehicles	846
U13	Valid for right-hand drive vehicles	90K
U152	Valid for gasoline engine 156	16
U152	Valid for gasoline engine 156	336
U152	Valid for gasoline engine 156	39J
U152	Valid for gasoline engine 156	53J
U152	Valid for gasoline engine 156	456
U157	Valid for combustion engine 272 DE	96
U157	Valid for combustion engine 272 DE	336
U157	Valid for combustion engine 272 DE	40J
U157	Valid for combustion engine 272 DE	54J
U243	Valid for diesel engine 651 with all-wheel drive	51J
U244	Valid for BlueTEC	226
U249	Valid for BlueTEC	226
U249	Valid for diesel engine 651 without all-wheel drive	51J

Code:	Designation:	Position:
U252	Valid for ECO start/stop function	20H
U561	Valid for Delphi system	22G
U562	Valid for Bosch system	22G
U739	Valid for gasoline engine 271 DE	296
U739	Valid for gasoline engine 271 DE	39J
U739	Valid for gasoline engine 271 DE	54J
U880	Valid for diesel engine 642	35G
U880	Valid for diesel engine 642	36J
U880	Valid for diesel engine 642	50J
U880	Valid for diesel engine 642	17G
U880	Valid for diesel engine 642	63G
U938	Valid for ESP Basic	62G
U938	Valid for ESP Basic	63G
U939	Valid for ESP Premium	63G
U948	Valid for ESP Premium	35G
U948	Valid for diesel engine 651	36J
U948	Valid for diesel engine 651	51J
U948	Valid for diesel engine 651	17G
U948	Valid for diesel engine 651	21G
U948	Valid for diesel engine 651	21G
U968	Valid for mild hybrid drive	46G
W15/5	Left front footwell ground point	91L
X18	Right front footwell ground point	91L
X26	Vehicle interior and harness for tail lamp electrical connector	89H
X35/3	Left rear door electrical connector	45J
X35/4	Right rear door electrical connector	86J
X58/31	Glove box socket	78J
Z321	Intl. 15 connector sleeve	89L
Z7/3521	Circuit 87 Me connector sleeve	23L
Z7/9823	Circuit 87 Me connector sleeve	35L
		46L

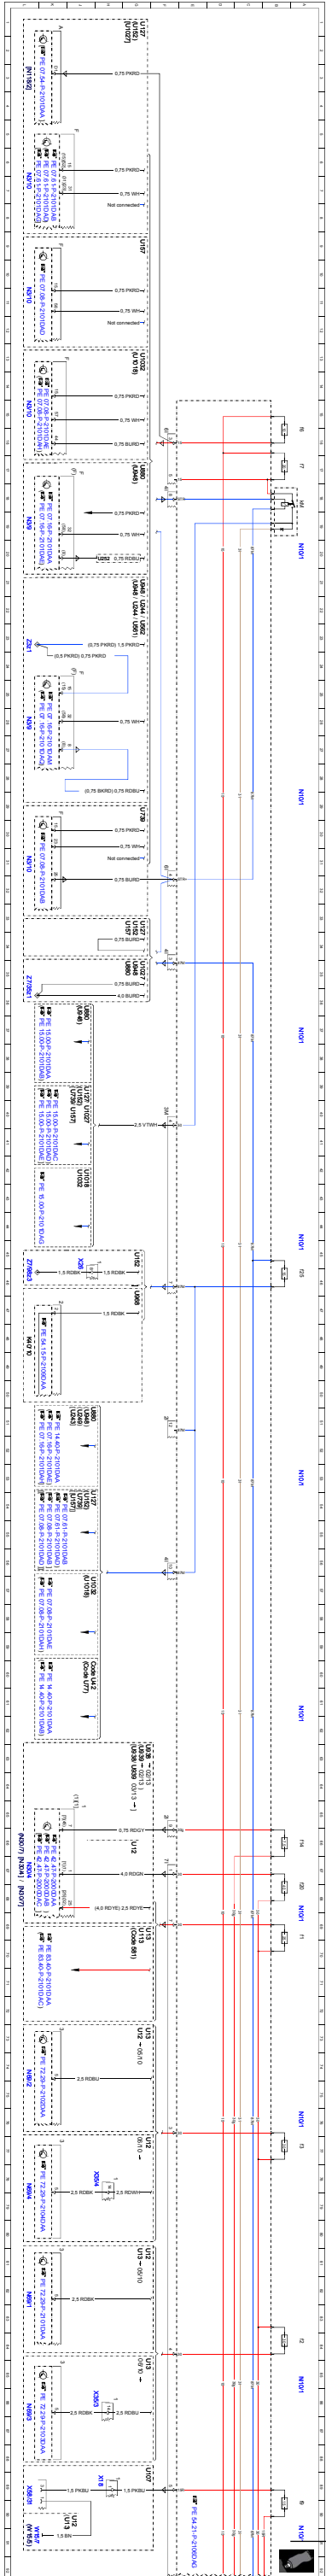

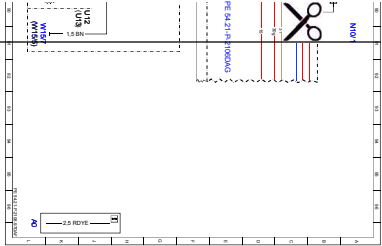

Cut here