


Model 213

- 2 "Back" button
 3 Finger navigation pad
 4 Multifunction display

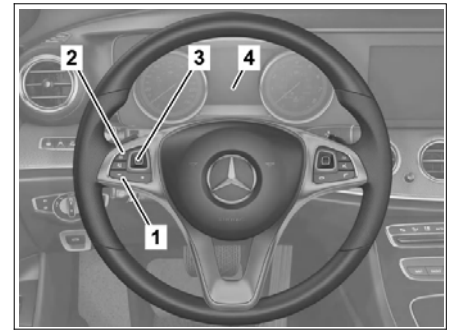

P00.20-2891-01

| | | | |
|---|--|---|--|
| | Preparatory activity | | |
| 1 | Close engine hood, doors and trunk lid or liftgate | | |
| 2 | Switch electronic ignition lock control unit to position "1" (circuit 15R) | i There may be no fault messages in the multifunction display (4). | |
| | Open workshop level | | |
| 3 | Use swipe movements on the finger navigation pad (3) to select the "Trip" menu item in the multifunction display (4) | | |
| 4 | Use swipe movements on the finger navigation pad (3) in the "Trip" menu to select the standard "Total distance" display in the multifunction display (4) | | |
| 5 | Press and hold the "Back" button (2) for 1.5 s and press on the finger navigation pad (3) | i The workshop menu with the following tabs is shown on the multifunction display (4): "Vehicle data", "Dynamometer test", "Lining change mode", "ASSYST PLUS", "Head-up-display" (depending on equipment installed). | |
| | Close workshop level | | |
| 6 | Press "Back" button (2) again until the workshop entry menu is shown on the multifunction display (4) | | |
| 7 | Use swipe movements on the finger navigation pad (3) to select and confirm the "Trip" menu item | | |
| | Finishing activity | | |
| 8 | Switch electronic ignition lock control unit to position "0" | | |