Model 213, 253




P83.00-2437-08

Shown on model 253

Floor covering

2 Trim Panels

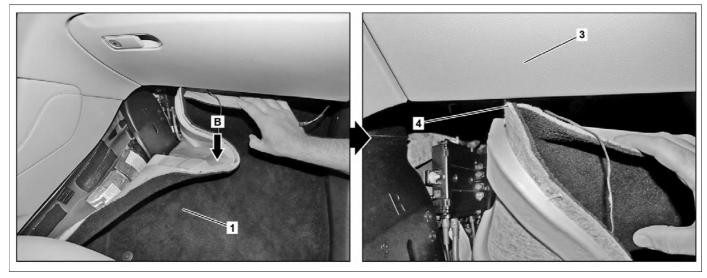


P83.00-2438-08

Shown on model 253

- Floor covering
- 3 Glove compartment


4 Edge of floor covering

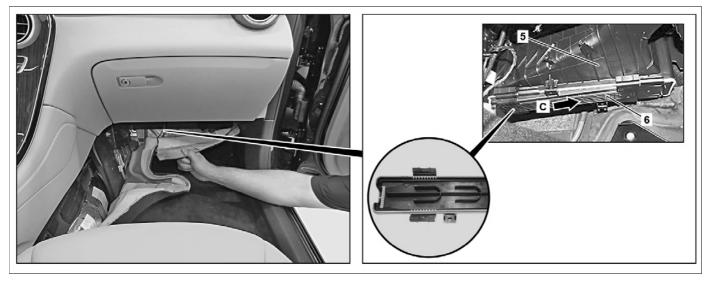

P83.00-2439-08

Shown on model 253

5 AC housing

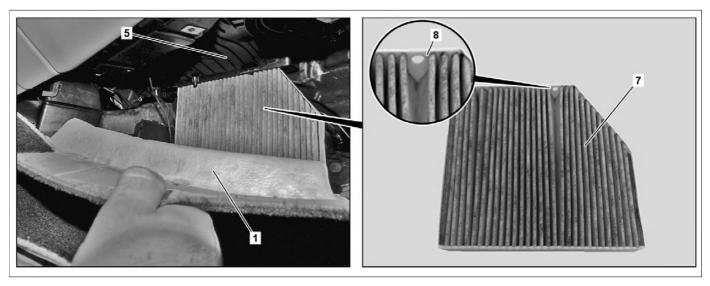

Slide

P83.00-2440-08

Shown on model 253

- 1 Floor covering
- 5 AC housing

- 7 Activated charcoal dust filter
- 8 Guide

X	Remove		
1.1	Remove bottom paneling for instrument panel on passenger side	Model 213	
₽ AR			AR68.10-P-1502LWE
1.2	Remove cover below dashboard on passenger side	Model 253	
i≆ AR			AR68.10-P-1520LW
2		()>	
		Fold over the floor covering (1) carefully.	
		Otherwise, damage may occur!	
3	Fold in floor covering (1) in direction of arrow (B) until edge of floor covering (4) appears underneath glove box (3), and then fold over	(3)	
		Carefully push in and fold over floor covering (1).	
		Otherwise, damage may occur!	

4	Unlock slide (6) opposite direction of arrow (C)		
	and remove air conditioner housing cover downward from air conditioner housing (5)		
5	Remove activated charcoal dust filter (7) from air conditioner housing (5) in downward direction		
X	Install		
6	Insert new activated charcoal dust filter (7) into air conditioner housing (5)	Make sure that the new activated charcoal dust filter (7) is positioned correctly. The guide (8) must be pushed onto the guide pins in the air conditioner housing (5). Otherwise, damage may occur!	
7	Seal air conditioner housing (5) with air conditioner housing cover and lock slide (6) in direction of arrow (C)		
8	Fold back floor covering (1)		
9	Push floor covering (1) behind trim (2) and align	Make sure that the floor covering (1) is positioned correctly. Otherwise, damage may occur!	
10.1	Install bottom paneling for instrument panel on passenger side	-	
⊯ AR			AR68.10-P-1502LWE
10.2	Install passenger-side cover below instrument panel	Model 253	
F AR			AR68.10-P-1520LW