


Model 213


Model 238

Shown with CODE 522 (Audio 20 radio)

1 Display module
 A1 Instrument cluster
 A40/8 Audio/COMAND display

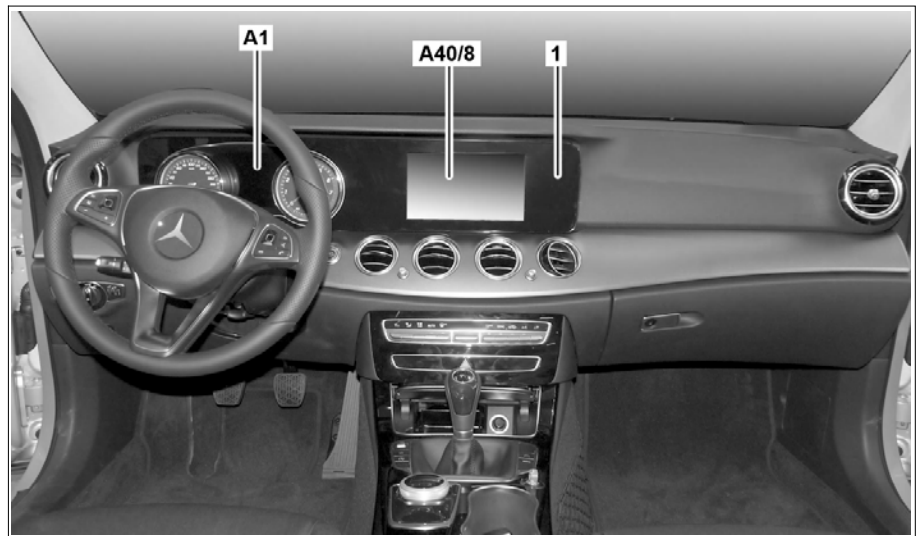

P54.33-5069-05

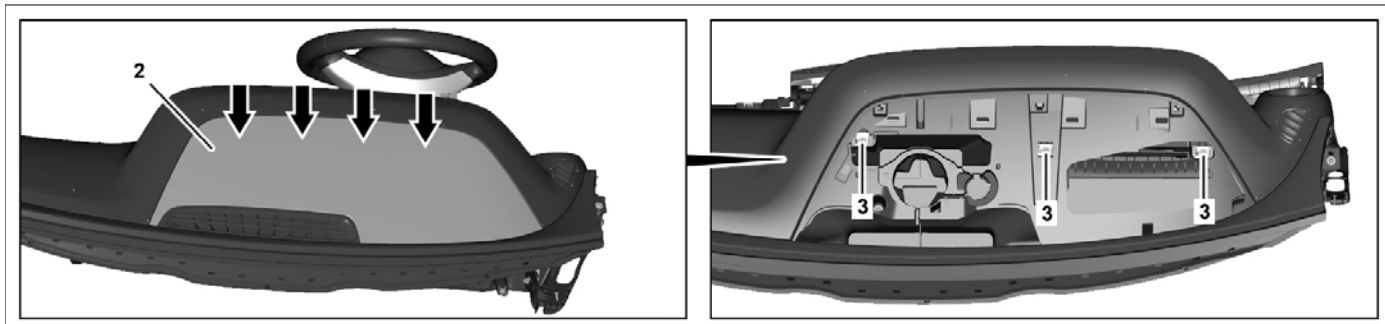


P54.33-5070-07

2 Cover

3 Screw

Topical note	Information on preventing damage to electronic components due to electrostatic discharge		AH54.00-P-0001-01A
	Remove/install		
1	Switch off ignition and store transmitter key outside of transmission range (min. 2 m)		
2	Move steering wheel all way down and to rear		
3	Slide clip remover between instrument panel and cover (2) (arrows), unclip and remove cover (2)	Clip remover	*452589016300
4	Remove bolts (3)	Installation: Push display module (1) forwards and tighten bolts (3).	
5	Lift up the retaining tabs of the bolts (3) slightly using a suitable tool and tilt display module (1) as far as possible out of the instrument panel to gain access to the electrical connectors	Do not apply too much force when lifting up the retaining tabs of the bolts (3). Otherwise, the display module (1) may be damaged.	
6	Disconnect electrical connections	The number of electrical connectors may vary depending on the equipment.	
7	Remove display module (1)		
8	Install in the reverse order		

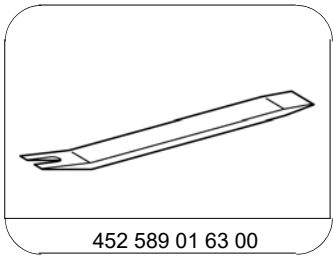

452 589 01 63 00

Clip remover