


Model 205.0/1/2

Model 213

Model 253

Model 293

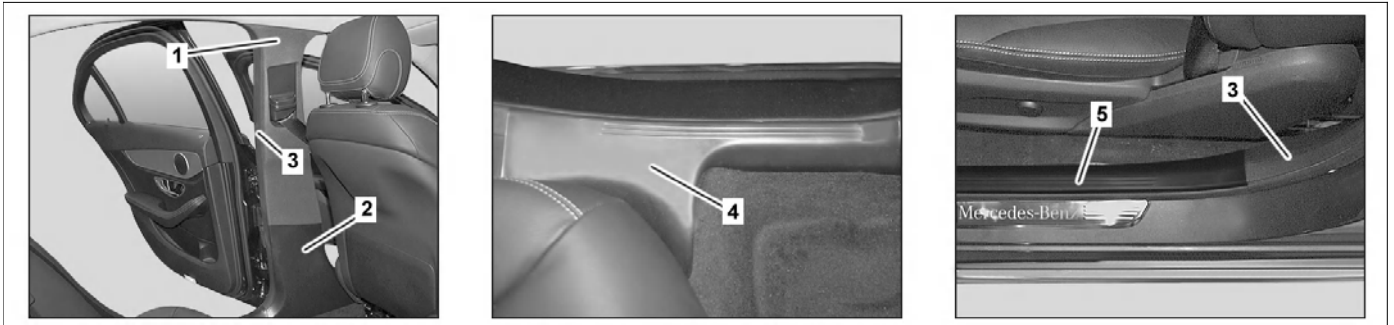

P68.30-3734-07

**Shown on model 205.0**


1 Upper B-pillar paneling

2 Lower B-pillar paneling

3 Edge guard

4 Rear door sill molding


5 Front door sill molding

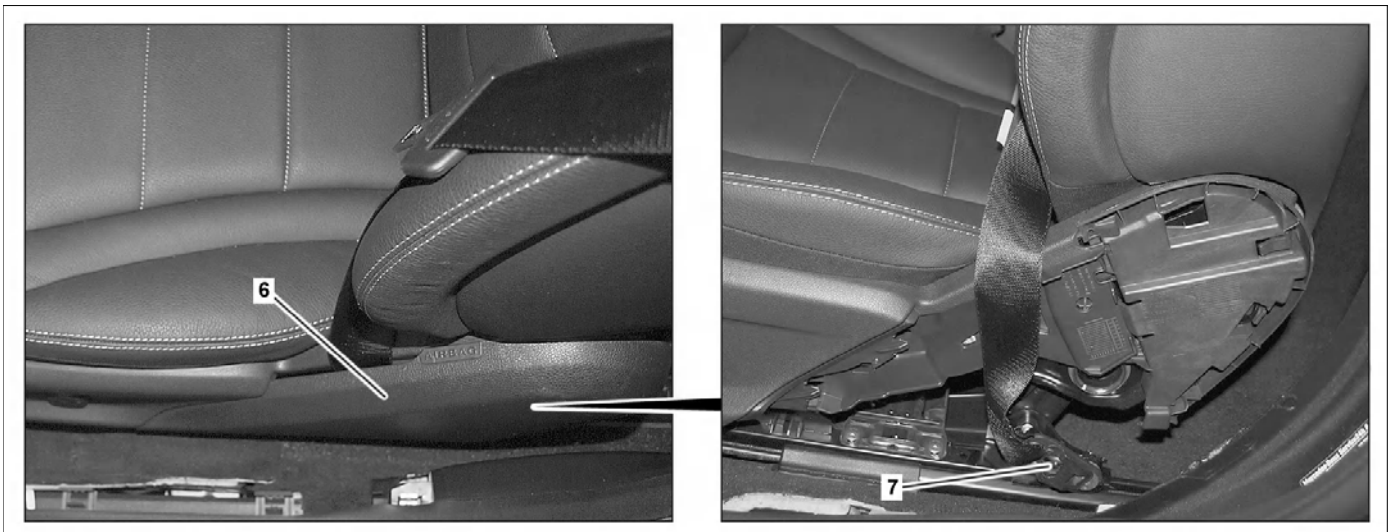

P68.30-3735-08

6 Cover

7 Belt end fitting

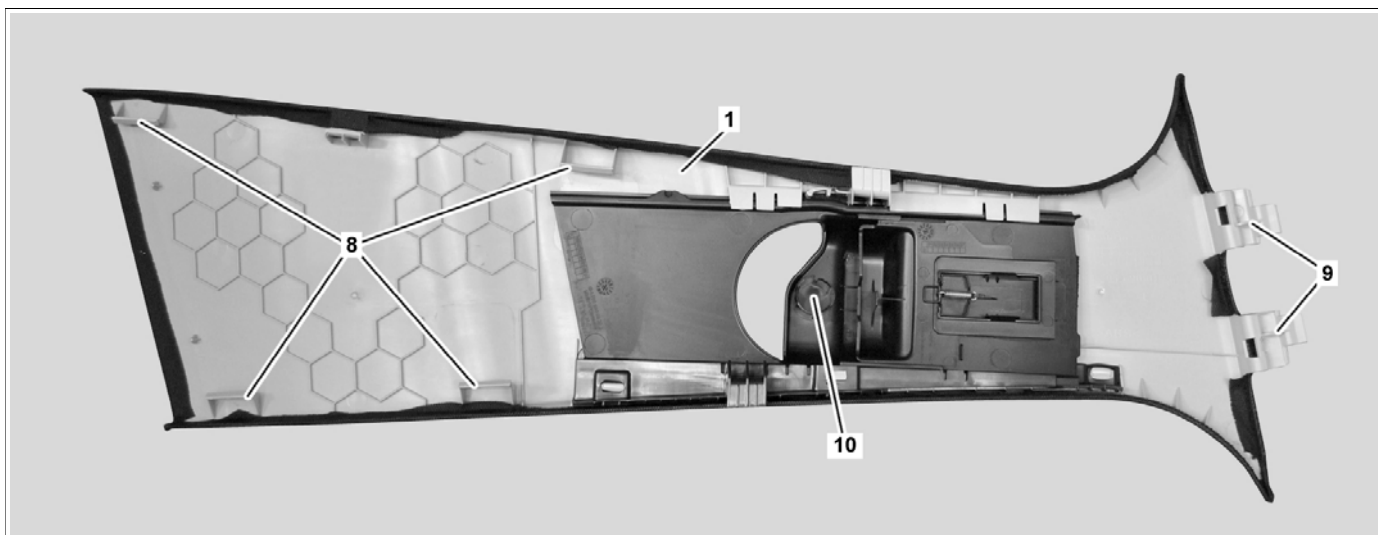

P68.30-3736-08

- 1 Upper B-pillar paneling
- 8 Retaining tabs

- 9 Guides
- 10 Mount

	Notes on safety-relevant components		AH00.00-Z-0019-01A
	<b>Remove/install</b>		
1	Move front seat toward the front to end position.		
2	Unclip rear door sill (4) and unclip front door sill (5).	When removing bottom B-pillar paneling (2).	
3	Remove trim (6).	Model 205.0/1/2, 213, 253, 293 with code P65 (Seat comfort package) with code U22 (4-way lumbar support) Model 205.0/1/2, 213, 253 with code 555 (AMG Performance seats) with code U22 (4-way lumbar support) Model 205.0/1/2, 253 with code U22 (4-way lumbar support) except code 409 (Left/right front multicontour seat) except code 555 (AMG Performance seats) except code P65 (Seat comfort package) Model 213 with code U22 (4-way lumbar support) except code 432 (Left and right dynamic multicontour seat) except code 555 (AMG Performance seats) except code P65 (Seat comfort package) Model 293 with code U22 (4-way lumbar support) except code 409 (Left/right front multicontour seat) except code P65 (Seat comfort package)	AR68.30-P-4100LW AR91.10-P-1201LWA  AR91.10-P-1201LW
4	Remove seat belt end fitting (7).	Model 205.0/1/2, 213, 253, 293 except code 460 (Canada version) except code 494 (US version) Model 205.0/2, 213, 253, 293 with code 460 (Canada version) Model 205.0/2, 213, 253, 293 with code 494 (US version)	AR91.40-P-1030-02A  AR91.40-P-1030-02LWE
5	Release edge guard (3) in the area of the top B-pillar trim (1) and in the area of the bottom B-pillar trim (2).	<b>i</b> <b>Installation:</b> Ensure that edge guard (3) is seated correctly.	
6	Unclip top B-pillar trim (1) from the retaining tabs (8), move downward out of the guides (9), and remove from the seat belt.	<b>i</b> <b>Installation:</b> Position support (10) of upper B-pillar trim (1) on screw at seat belt guide bracket.	
7	Unclip lower B-pillar trim (2) and remove.		
8	Install in the reverse order		