


Model 213 with transmission 725

Model 238 with transmission 725





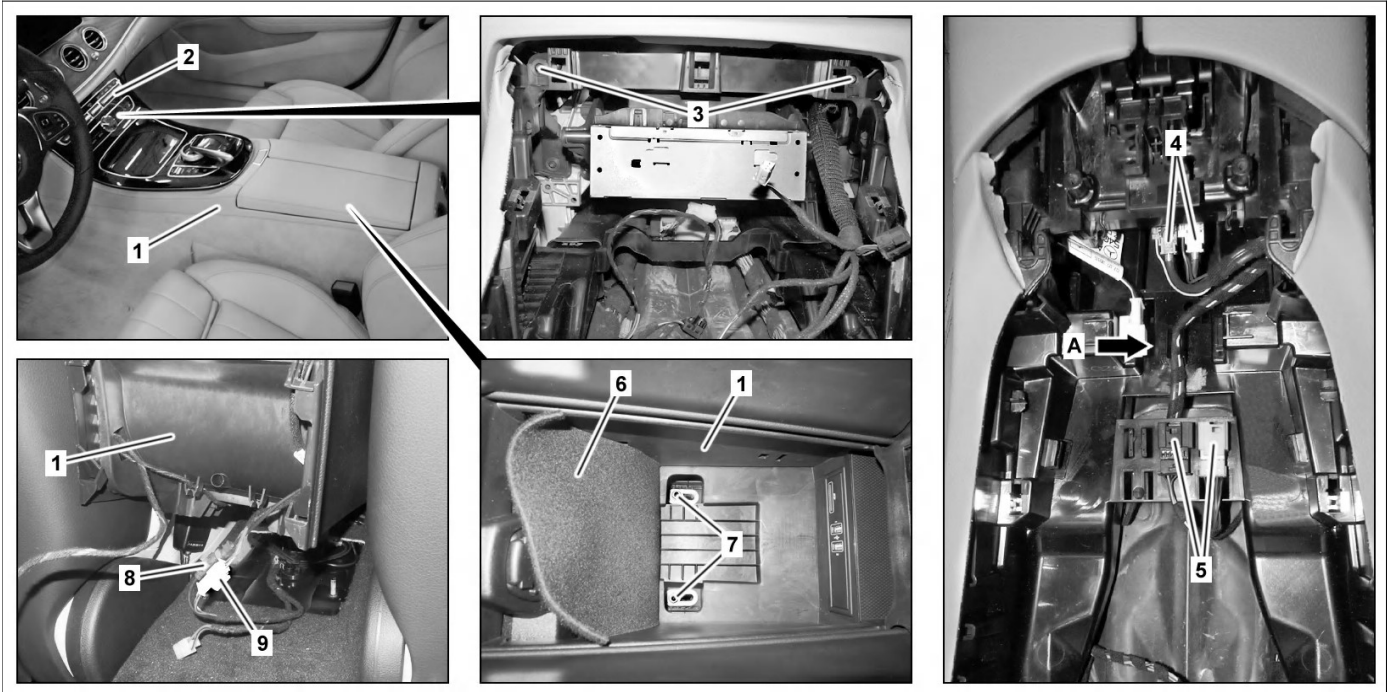



P68.20-5005-09

- 1 Center console  
2 Center console cover  
3 Bolts

- 4 Electrical connectors  
5 Electrical sockets  
6 Cover

- 7 Nuts  
8 Electrical connector  
9 Electrical connector

 	Remove/install		
1	Remove cover of center console (2)	Model 238 with transmission 725 Model 213 with transmission 725	AR68.20-P-2350LWO AR68.20-P-2350LW
2	Remove bolts (3)		
3	Disconnect electrical connectors (4) and expose electrical wiring harness on center console (1)	 The number can vary according to the equipment.  <b>Installation:</b> Secure electrical wiring harness in guide (arrow A).	
4	Unclip electrical sockets (5) from center console (1)	 The number can vary according to the equipment.	
5	Remove rear cover on center console (1)	Model 213, 238 with transmission 725	AR68.20-P-2358LW
6	Remove bracket below rear storage tray on center console (1)	Model 213.1 with transmission 725	AR68.20-P-2359LWV
7	Place cover (6) to one side		
8	Unscrew nuts (7)		
9	Lift center console (1) at rear and disconnect electrical connectors (8, 9)	 The number can vary according to the equipment.	
10	Move center console (1) toward rear out of instrument panel		
11	Install in the reverse order		