


- Model 205.2
with code 890 (EASY-PACK-tailgate)
- Model 213.2
with code 890 (EASY-PACK-tailgate)
- Model 253.1/9
with code 890 (EASY-PACK-tailgate)
- Model 293
with code 890 (EASY-PACK-tailgate)




P72.20-3367-09





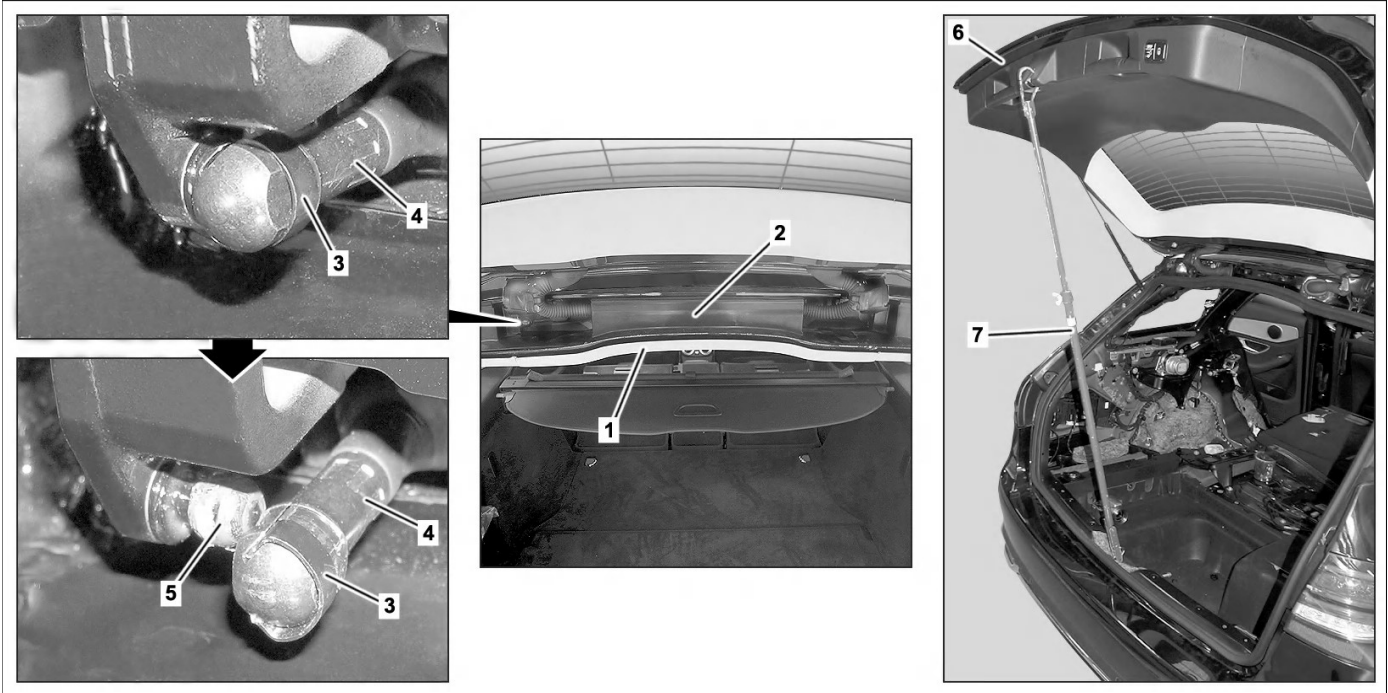


Shown on MODEL 205.2

- | | |
|-------------|-------------|
| 1 Headliner | 5 Ball head |
| 2 Cover | 6 Liftgate |
| 3 Fuse | 7 Support |
| 4 Tappet | |

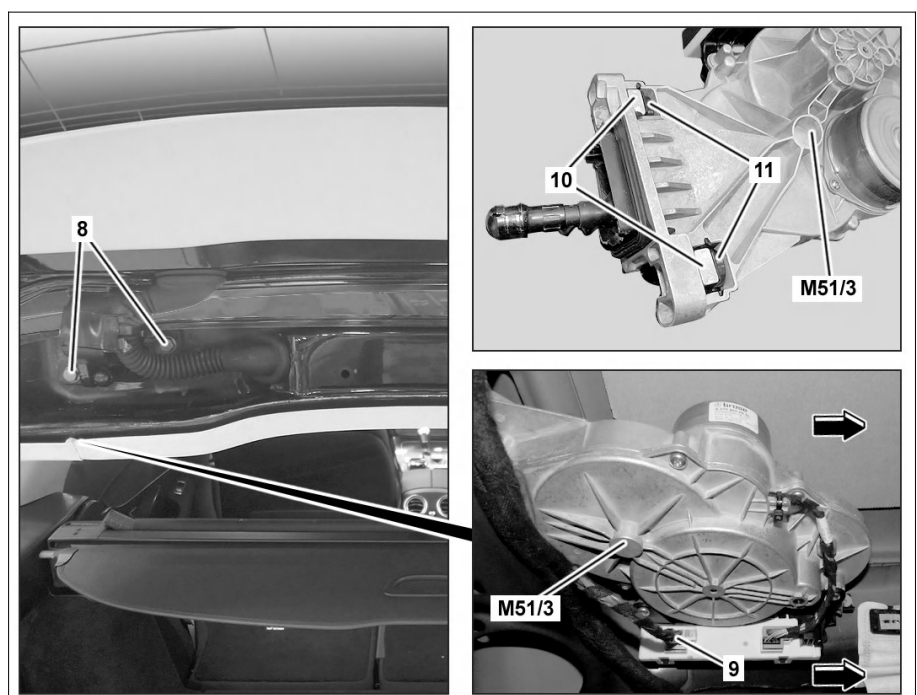Shown on MODEL 205.2

- | |
|---|
| 8 Bolts |
| 9 Electrical connector |
| 10 Square nuts |
| 11 Plastic clips |
| M51/3 Trunk lid/liftgate control drive unit |




 Warning	Risk of injury caused by fingers being jammed or pinched when removing, installing or aligning hoods, doors, trunk lid/rear-end door or sliding roof.	No parts of the body or limbs should be within the operating area when the components are moving.	AS00.00-Z-0011-01A
Topical note	Information on preventing damage to electronic components due to electrostatic discharge		AH54.00-P-0001-01A
	Notes on HANDS-FREE ACCESS		AH80.61-P-0001-01A
	Remove/install		
1	Remove roof lining (1).		AR68.30-P-4300LWS
2	Unclip cover (2) and remove.		
3	Secure liftgate (6) with support (7).	 Support	*170589046300
4	Lift retainer (3) with suitable screwdriver and remove tappet (4) of the trunk lid/liftgate control drive unit (M51/3) from the ball head (5).	 Do not remove locking device (3). Otherwise, the retainer (3) preload can be lost.  Installation: Install plunger (4) on trunk lid/liftgate control drive unit (M51/3) with installed retainer (3) on ball head (5).	
5	Remove screws (8).	 Bolt, drive for automatic liftgate to roof frame	*BA72.20-P-1006-02N
6	Detach electrical connection (9).		
7	Remove trunk lid/liftgate control drive unit (M51/3) in the direction of the arrow.	 Installation: Ensure that square nuts (10) and plastic clips (11) are seated correctly in trunk lid/liftgate control drive unit (M51/3).	
8	Install in the reverse order.		
9	Normalize trunk lid/liftgate control drive unit (M51/3) with vehicle diagnosis system.	When replacing trunk lid/liftgate control drive unit (M51/3). Model 205.2, 213.2, 253.1/9 with code 890 (EASY-PACK-tailgate) Model 293 with code 890 (EASY-PACK-tailgate)	AD00.00-P-2000-04B AD00.00-P-2000-06FR

 Liftgate

Number	Designation		Model 205.2	Model 213.2
BA72.20-P-1006-02N	Bolt, drive for automatic liftgate to roof frame	Nm	32	32

 Liftgate

Number	Designation		Model 253	Model 293
BA72.20-P-1006-02N	Bolt, drive for automatic liftgate to roof frame	Nm	32	32

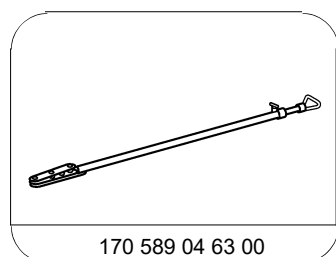

Support