








- Model 205.0/1
with code 414 (Sliding sunroof)
- Model 213.0/1/2
with code 414 (Sliding sunroof)
- Model 253
with code 414 (Sliding sunroof)
- Model 293
with code 414 (Sliding sunroof)

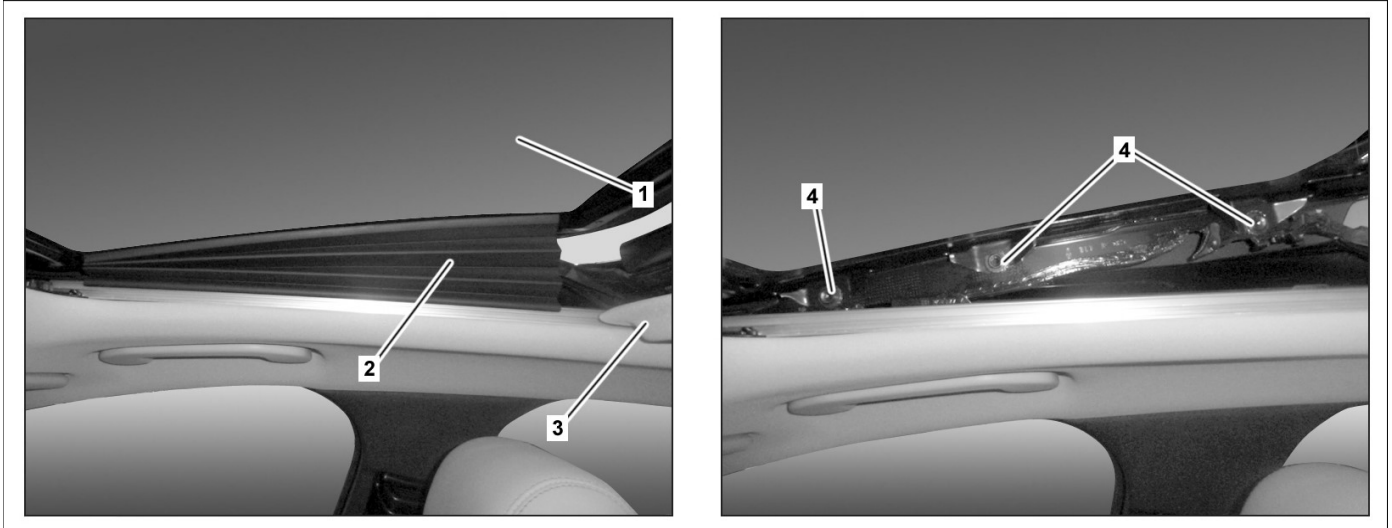

P77.20-2832-08

Shown on right side of vehicle

- 1 Sliding roof cover
- 2 Bellows
- 3 Sliding roof paneling
- 4 Bolts

 Warning	Risk of injury caused by fingers being jammed or pinched when removing, installing or aligning hoods, doors, trunk lid/rear-end door or sliding roof.	No parts of the body or limbs should be within the operating area when the components are moving.	AS00.00-Z-0011-01A
	Notes on safety-relevant components		AH00.00-Z-0019-01A
	Remove/install		
1	Move sliding roof panel (1) to tilt position.		
2	Open sliding roof trim (3).		
3	Remove boot (2) on left and right.	 Extend boot (2) on left and right first, then at bottom and then at top. Otherwise the boot (2) on left and right can be damaged by bending.  Installation: Only install boot (2) on left and right after adjustment.	
4	Remove screws (4) on the left and right.	 Installation: Do not tighten the screws (4) until after adjustment.	
5	Remove sliding roof panel (1).	 Helper required.	
6	Install in the reverse order.		
7	Adjust sliding roof panel (1).	Model 205.0/1 with code 414 (Sliding sunroof) Model 213.0/1/2 with code 414 (Sliding sunroof) Model 253 with code 414 (Sliding sunroof) Model 293 with code 414 (Sliding sunroof)	AR77.20-P-1100LW AR77.20-P-1100CW AR77.20-P-1100EQ