



AR68.30-P-4100LW	Remove/install door sill molding	28.02.2019
------------------	----------------------------------	------------

- Model 205.0/1/2
- Model 213
- Model 253
- Model 293

- 1 Front door sill molding
- 1.1 Bracket
- 2 Retaining clips

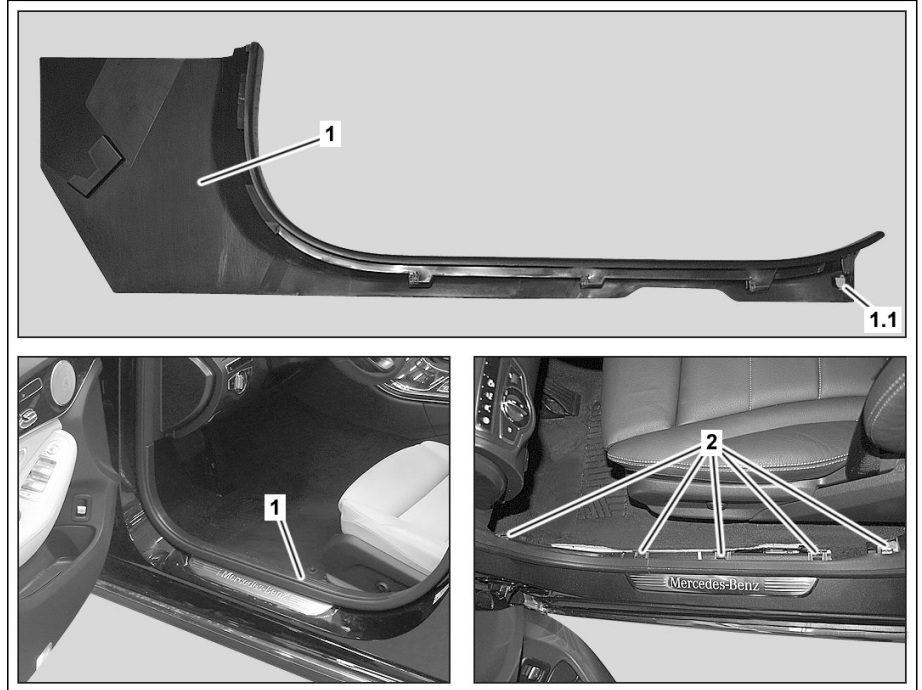

P68.30-3748-06

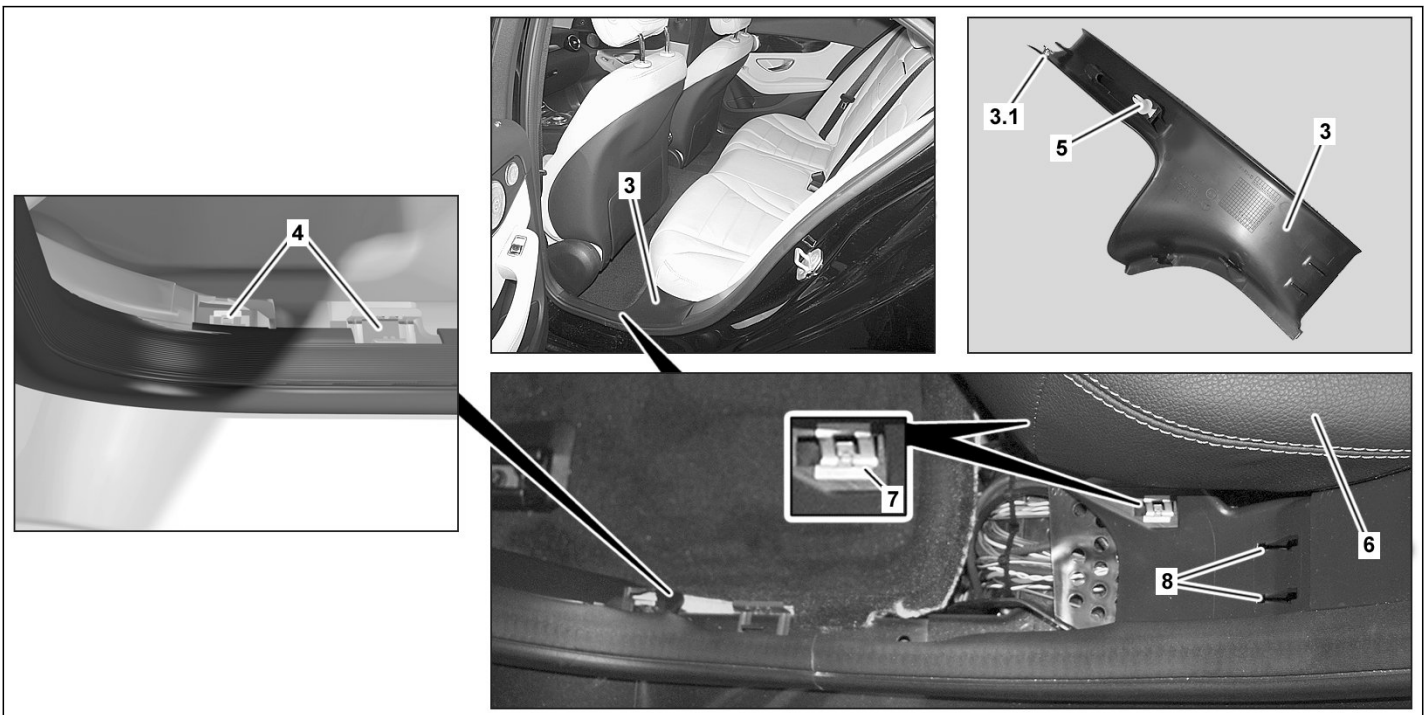


P68.30-3749-09


**Shown on model 205.0**

- |     |                        |   |                         |   |                 |
|-----|------------------------|---|-------------------------|---|-----------------|
| 3   | Rear door sill molding | 5 | Mounting clip           | 7 | Retaining clips |
| 3.1 | Bracket                | 6 | Rear bench seat cushion | 8 | Guides          |
| 4   | Retaining clips        |   |                         |   |                 |

	Remove/install		
1	Unhook bracket (1.1) from front door sill (1) at bottom of B-pillar paneling	Only when removing front door sill (1).	
2	Detach front door sill (1) starting at B-pillar paneling from retaining clips (2) and remove	Only when removing front door sill (1).	
3	Unhook bracket (3.1) from rear door sill (3) at bottom of B-pillar paneling	Only when removing rear door sill (3).	
4	Detach rear door sill (3) from retaining clips (4)	Only when removing rear door sill (3). Mounting wedge	110 589 03 59 00
5	Unclip rear door sill (3) from retaining clip (5)	Only when removing rear door sill (3). <b>Installation:</b> Replace damaged mounting clip (5). Clip remover	452 589 01 63 00
6	Lift rear bench seat cushion (6) at side	Only when removing rear door sill (3).	
7	Detach rear door sill (3) below rear bench seat cushion (6) from retaining clips (7)	Only when removing rear door sill (3). Mounting wedge	110 589 03 59 00
8	Move rear door sill (3) upward out of guides (8) and remove	Only when removing rear door sill (3).	
9	Install in the reverse order		

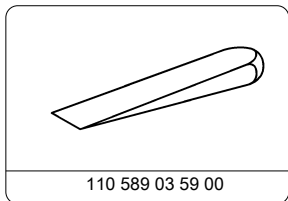

Mounting wedge

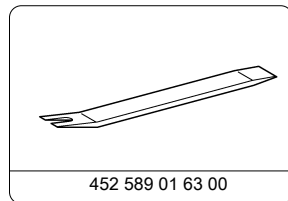

Clip remover