


AP00.20-P-0042GZ	Reset service indicator
------------------	-------------------------

MODEL 164.1/ 8

Shown on model 164.1

- A1p13 Multifunction display
- A1s3 Trip odometer reset button
- S110s1 Scroll forward/back button
- S110s3 System selection button
- S111s1 Buttons + and - for setting specific functions and volume control

Scanned
by
"DUTCH"

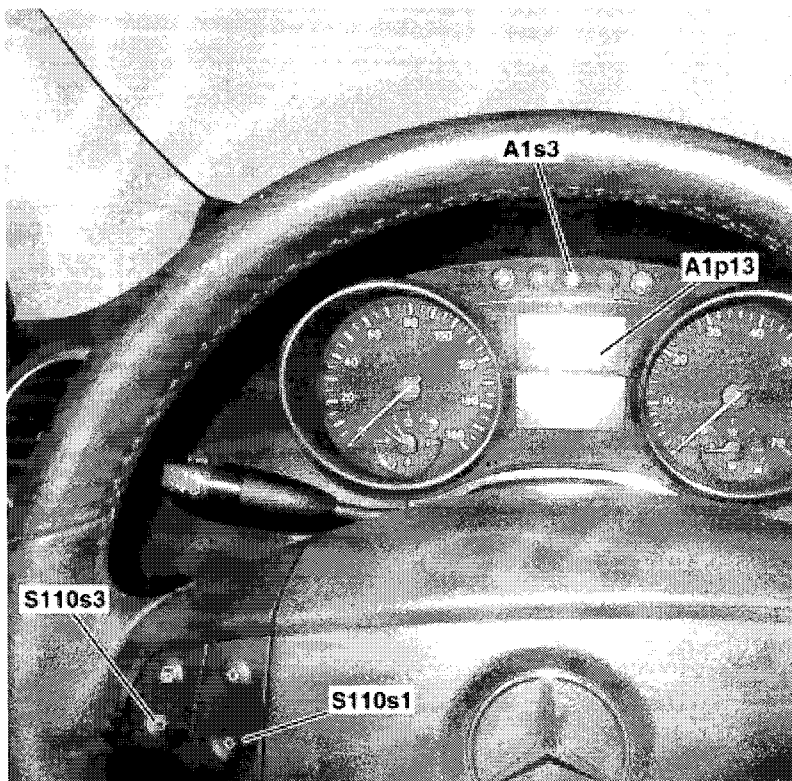

	Adjust	
1	Turn key in electronic ignition switch control unit to position "1"	
2	Press system selection button (S110s3) repeatedly until the basic display (mileage or temperature display) is shown in the multifunction display (A1p13)	
3	Briefly press trip odometer reset button (A1s3) 3 times.	<p>i An acoustic signal can be heard and the voltage is shown in the multifunction display (A1p13).</p>
4	Press lower scroll forward/back button (S110s1)	<p>i The "Service menu" appears in the multifunction display (A1p13).</p>
5	Press buttons + and -, setting of specific functions and volume control (S111s1) repeatedly and select "Confirmation" menu item	
6	Press lower system selection button (S110s3) to confirm.	<p>i "Confirmation" appears in the multifunction display (A1p13) and the menu item "Complete service" is</p>

		highlighted.	
7	Press lower system selection button (S110s3) to confirm.	i "Service confirmed" appears in the multifunction display (A1p13).	
8	Press the upper system selection button (S110s3) repeatedly until the "Service menu" is shown in the multifunction display (A1p13)		
9	Using the + and - buttons, setting of specific functions and volume control (S111s1) select the menu item "Special work"		
10	Press lower system selection button (S110s3) to confirm.		
11	Using the + and - buttons, setting of specific functions and volume control (S111s1), select menu item "Service 3"		
12	Press lower system selection button (S110s3) to confirm.		
13	Select the engine oil grade used by pressing the + and - buttons, setting of specific functions and volume control (S111s1).	i "Standard oil" or "Oil quality 229.5"	
		i If only one oil quality is approved for the engine, oil selection is not possible.	
14	Press lower system selection button (S110s3) to confirm.	i The message "Position confirmed" appears in the multifunction display (A1p13).	
15	Press upper system selection button (S110s3) repeatedly until the basic display (mileage or temperature display) is shown in the multifunction display (A1p13)		
16	Turn key in electronic ignition switch control unit to position "0"		