


Model 166

Model 292

Shown on model 166


- 1 Glove compartment
- 2 Side paneling
- 3 Hose
- 4 AC housing

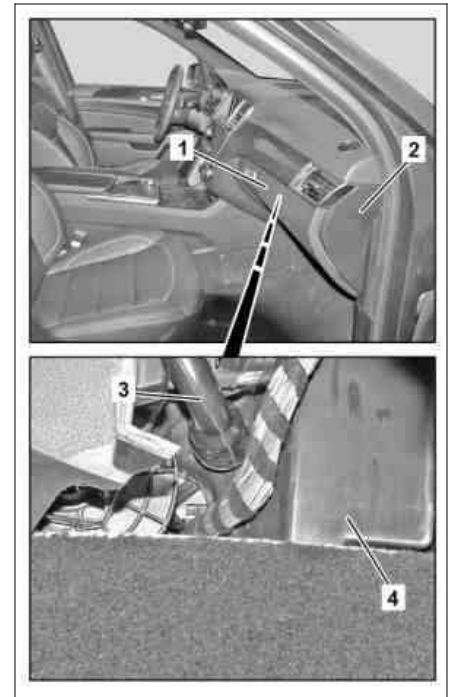




P68.10-4429-03

Shown on MODEL 166 without CODE 814 (DVD changer)

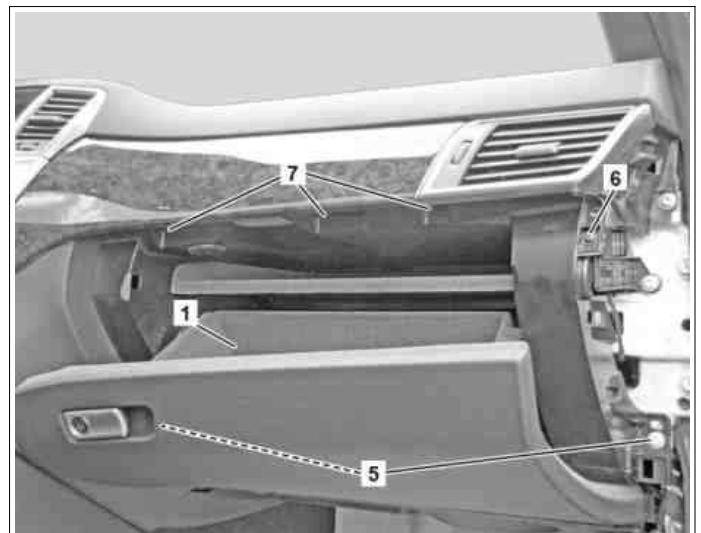
- 1 Glove compartment
- 5 Bolts
- 6 Screw
- 7 Bolts



P68.10-4428-11

 	Remove/install		
1	Remove right cover below instrument panel		AR68.10-P-1520GQ
2	Remove hose (3) from AC housing (4)	i Installation: Ensure that hose (3) is routed correctly.	
3	Remove side paneling (2) from instrument panel	 Long wedge	*115589035900
4	Remove screws (5)		
5	Open glove compartment (1)		
6	Move CD changer to lock position	Model 166 with code 814 (DVD changer) Model 292 with code 814 (DVD changer)	
7	Unscrew bolt (6) at side		
8	Unscrew bolts (7) in glove compartment (1)		
9	Carefully pull out glove compartment (1) and lower until electrical connectors are accessible		

10	Disconnect electrical connectors in glove compartment (1)		
11	Unclip electrical line with suitable tool		
12	Remove glove compartment (1)		
13	Install in the reverse order		
14	Check DVD changer for proper function	Model 166 with code 814 (DVD changer) Model 292 with code 814 (DVD changer)	

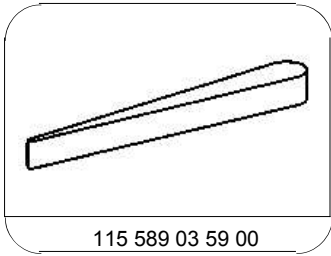

115 589 03 59 00

Long wedge