
AR42.10-P-0040GH Page 1 of 1

AR42.10-P-0040GH	Remove/install mechanical stop lamp switch	3.2.97	ı
------------------	--	--------	---

MODEL 163.154 /157 /172 /174 /175

1 Actuating pin 2 Locking device 24 Brake pedal S9 Stop lamp switch

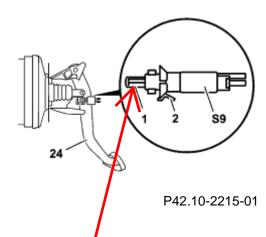

XX	Remove/Install		\mathcal{I}	
1	Remove cover below instrument panel			AR68.10-P-1500GH
2	Unplug electrical connector at stop lamp switch (S9)			
3	Press locking device (2)			
4	Turn and pull out stop lamp switch (S9)	Installation: Pull actuating pin all the way out. Push through brake pedal (24), insert stop lamp switch (and turn until locking device (2) engages. The actuating path is adjuautomatically.	(S9)	
5	Install in the reverse order.			