

| | | |
|------------------|---|---------|
| AR68.20-P-2310GI | Remove/install cover on gearshift lever | 26.2.01 |
|------------------|---|---------|

MODEL 163.154 /174 #A as of 289565,
163.157 /175

- 1 Armrest cover
- 2 Stowage box
- 3 Bolts
- 4 Cover on shift lever
- 5 Plastic screws




P68.20-2545-01



P68.20-2456-01

| | Remove/install | | |
|---|--|--|----------------------------------|
| 1 | Remove armrest lid (1) | | AR68.20-P-2370GH |
| 2 | Remove plastic screws (5) | | |
| 3 | Remove stowage box (2) | Press the pin in the center of the rivet downwards for about 4 mm; then remove the rivet from above. | |
| 4 | Remove selector lever paneling | Long wedge | 115 589 03 59 00 |
| 5 | Unscrew bolts (3) | | |
| 6 | Remove cover (4) from above | Carefully prize open at front (arrows) and at the sides. | |
| | | Long wedge | 115 589 03 59 00 |
| 7 | Detach connector from lower control panel control module | 3 connector. | |

| | | | |
|---|------------------------------|--|--|
| 8 | Install in the reverse order | | |
|---|------------------------------|--|--|

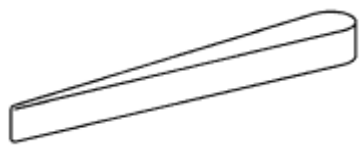

115 589 03 59 00

Assembly wedge