
AR42.10-P-0040GH Remove/install mechanical stop lamp switch	3.2.97
---	--------

## MODEL 163.154 /157 /172 /174 /175

1 Actuating pin 2 Locking device 24 Brake pedal S9 Stop lamp switch

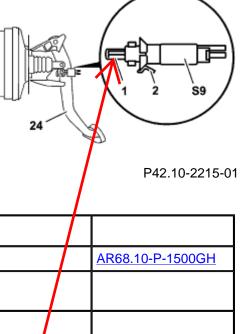

XX	Remove/Install		T	
1	Remove cover below instrument panel			AR68.10-P-1500GH
2	Unplug electrical connector at stop lamp switch (S9)			
3	Press locking device (2)			
4 cloc	Turn and pull out stop lamp switch (S9) <b>kwise</b>	<b>i</b> Installation: Pull actuating pin ( all the way out. Push through brake pedal (24), insert stop lamp switch ( and turn until locking device (2) engages. The actuating path is adju automatically.	<mark>S9)</mark>	
5	Install in the reverse order.			