


AD82.60-P-2000-02A	Connections for radio, testing electrical system, radio (RD)	MB radio in model 163	
--------------------	--	-----------------------	--

- A**
- 1 Speed-sensitive loudness control (except radio model 163)
 - 1 Loudspeaker signal telephone (radio model 163)
 - 2 Control output for automatic antenna (Japan only)
 - 3 Telephone mute circuit
 - 4 Permanent positive (terminal 30)
 - 5 Control output for automatic antenna (except Japan) and control output for left/right audio power amplifier (N40/3) control module
 - 6 Illumination (terminal 58)
 - 7 Switched positive (terminal 15)
 - 8 Ground (terminal 31)

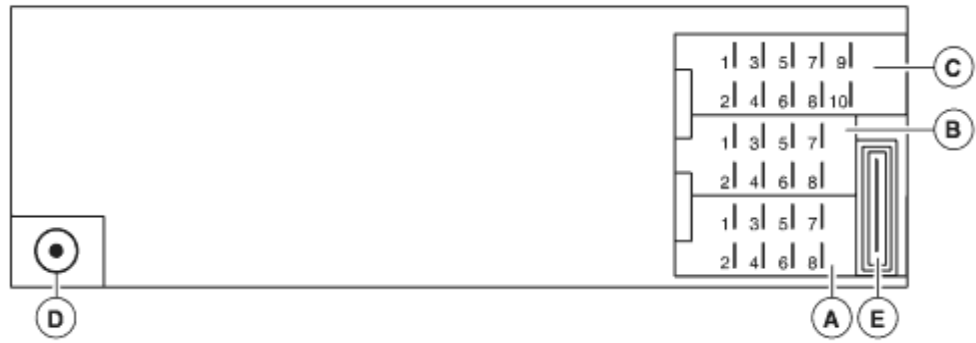

P82.60-0238-04

- B**
- 1 Right rear loudspeaker +
 - 2 Right rear loudspeaker -
 - 3 Right front loudspeaker +
 - 4 Right front loudspeaker -
 - 5 Left front loudspeaker +
 - 6 Left front loudspeaker -
 - 7 Left rear loudspeaker +
 - 8 Left rear loudspeaker -

- C**
- Connection socket for CD changer (except Classic and Spezial with CD magazine compartment), coding (via cable set)

- D**
- Antenna socket

- E**
- Fuse