


AR83.30-P-8100GH	Remove, install in-car temperature sensor for aspirator blower (M9)	15.2.00
------------------	---	---------

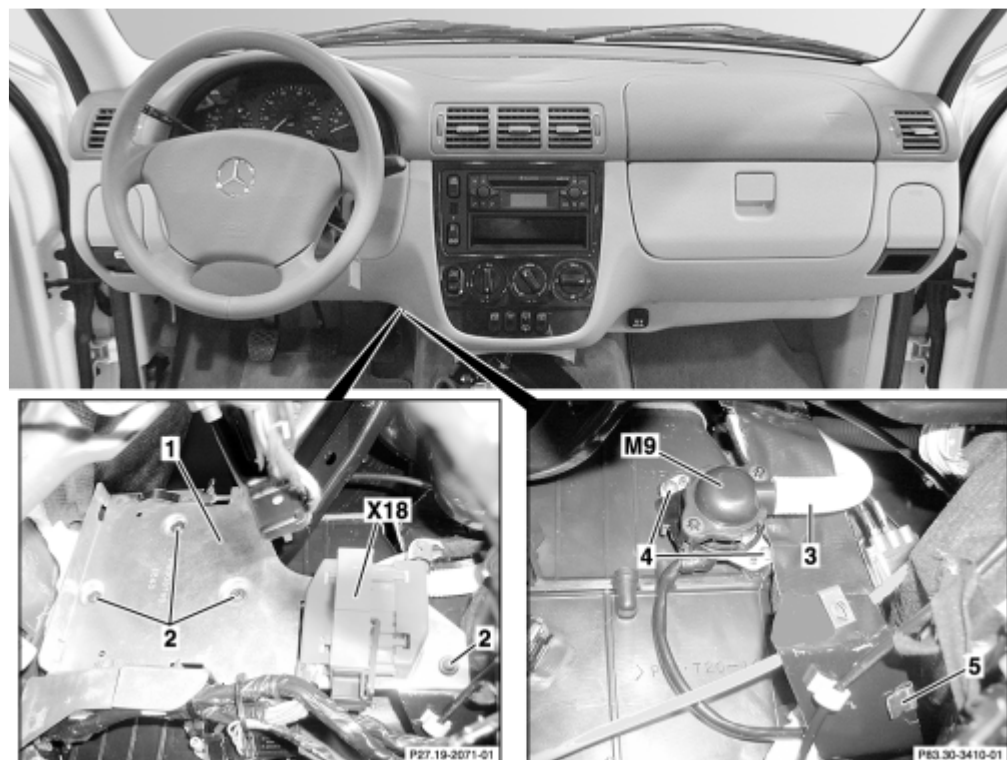


**MODELS** 163.154/172/174 as of 1.9.99 up to 31.8.01

- 1 ETC control module bracket
- 2 Bolt
- 3 Hose
- 4 Bolts
- 5 Retaining clip

M9 In-car temperature sensor aspirator blower  
X18 Interior and taillamp wiring harness connector



P83.30-3412-06

 	Removal, installation		
1	Remove ETC control module		<a href="#">AR27.19-P-1719GH</a>
2	Detach connector for interior/rear lamp wiring harness (X18) at ETC bracket (1)	 Release clamp on back of bracket and slide connector forward.	
3	Disconnect connector (X18)		

4	Unscrew bolts (2)		
5	Lay bracket (1) downward and to the side		
6	Detach hose (3) at aspirator blower (M9)		
7	Detach clip (5) of aspirator blower connector at instrument panel bracket		
8	Disconnect in-car temperature sensor aspirator blower's connector		
9	Unscrew bolts (4)		
10	Remove in-car temperature sensor aspirator blower (M9)		
11	Install in the reverse order		