


AR42.10-P-0040GH	Remove/install mechanical stop lamp switch	3.2.97
------------------	--	--------


MODEL 163.154 /157 /172 /174 /175

- 1 Actuating pin
 2 Locking device
 24 Brake pedal
 S9 Stop lamp switch

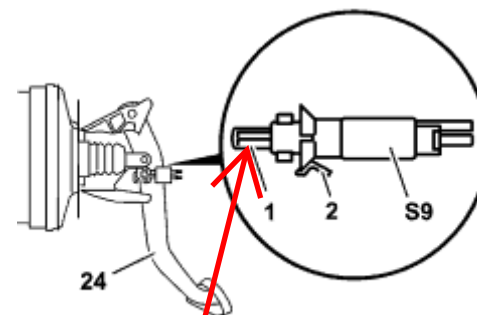

001 545 95 09

P42.10-2215-01

	Remove/Install		
1	Remove cover below instrument panel		AR68.10-P-1500GH
2	Unplug electrical connector at stop lamp switch (S9)		
3	Press locking device (2)		
4	Turn and pull out stop lamp switch (S9) clockwise to remove	i Installation: Pull actuating pin (1) all the way out. Push through brake pedal (24), insert stop lamp switch (S9) and turn until locking device (2) engages. The actuating path is adjusted automatically.	
5	Install in the reverse order.		

**Push brake pedal down by hand
 install switch and pull up on brake pedal**