

AR68.20-P-2310GI	Remove/install cover on gearshift lever	26.2.01
------------------	---	---------

MODEL 163.154 /174 #A as of 289565,
163.157 /175

- 1 Armrest cover
- 2 Stowage box
- 3 Bolts
- 4 Cover on shift lever
- 5 Plastic screws




P68.20-2545-01



P68.20-2456-01

	Remove/install		
1	Remove armrest lid (1)		AR68.20-P-2370GH
2	Remove plastic screws (5)		
3	Remove stowage box (2)	Press the pin in the center of the rivet downwards for about 4 mm; then remove the rivet from above.	
4	Remove selector lever paneling	Long wedge	115 589 03 59 00
5	Unscrew bolts (3)		
6	Remove cover (4) from above	Carefully prize open at front (arrows) and at the sides.	
		Long wedge	115 589 03 59 00
7	Detach connector from lower control panel control module	3 connector.	

8	Install in the reverse order		
---	------------------------------	--	--

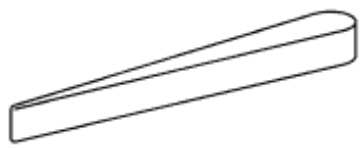

115 589 03 59 00

Assembly wedge