



MODEL 163.113 /128 /136 /154 /157 /172 /174 /175

Shown on model 163 without Parktronic system (PTS), code 220a

- 1 Cover lens  
 2 Connector  
 E15/3 Rear interior lamp

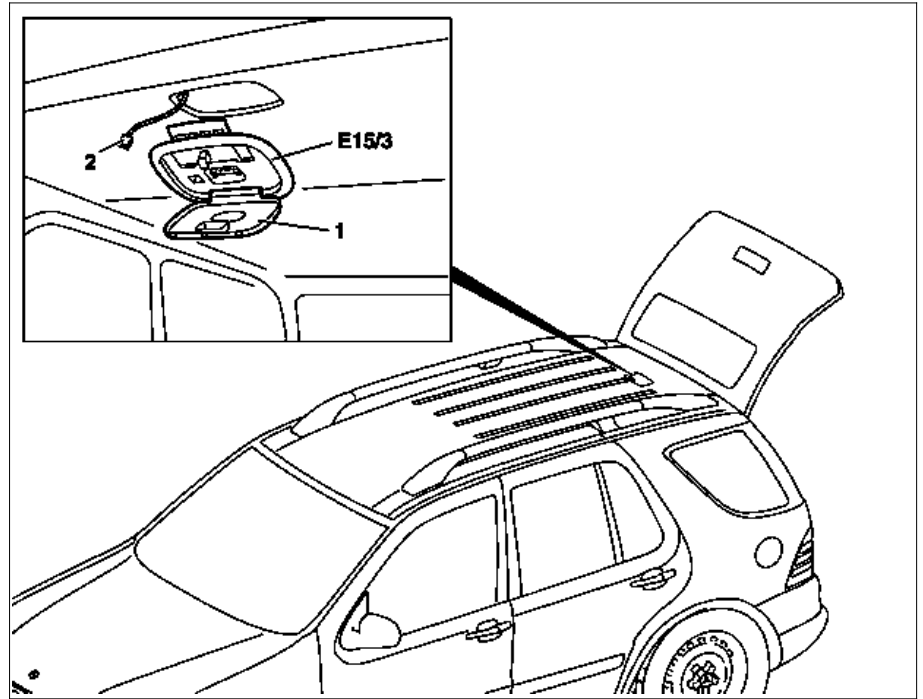

P82.20-0399-06

☒ ☒	Remove/Install		
1	Prize off glass cover (1) of the rear interior lamp (E15/3) and fold up until it reaches the limit stop		
2.1	Disconnect connector from Parktronic system warning display	<b>i</b> Only with Parktronic system (PTS), code 220a.	
3	Remove rear interior lamp (E15/3) from inside roof lining	<b>i</b> For removal pull dome lamp on rear housing edge downward and simultaneously forward.	
4	Remove connector (2) from rear interior lamp (E15/3)		
5	Install in the reverse order	<b>i</b> <b>Installation:</b> If dome lamp is replaced in models 163.113 /128 /136 /154 /172 /174 /175 without Parktronic system (PTS), code 220a up to vehicle identification number A346574: ↓ Changing dome lamp in the rear	AR82.20-P-0113-01GH BT82.20-P-0001-03GH
	Changing dome lamp in the rear		