


AR68.10-P-1400GI	Remove/install glove compartment	22.4.99
------------------	----------------------------------	---------


MODEL 163.154 /172 #A as of 145273,
 163.154 /172 #X as of 708319,
 163.157 /174 /175

- 1 Glove compartment lid
- 2 Screws
- 3 Glove compartment
- 4 Instrument panel
- 5 Spreading rivets
- E13/1 Glove compartment lamp

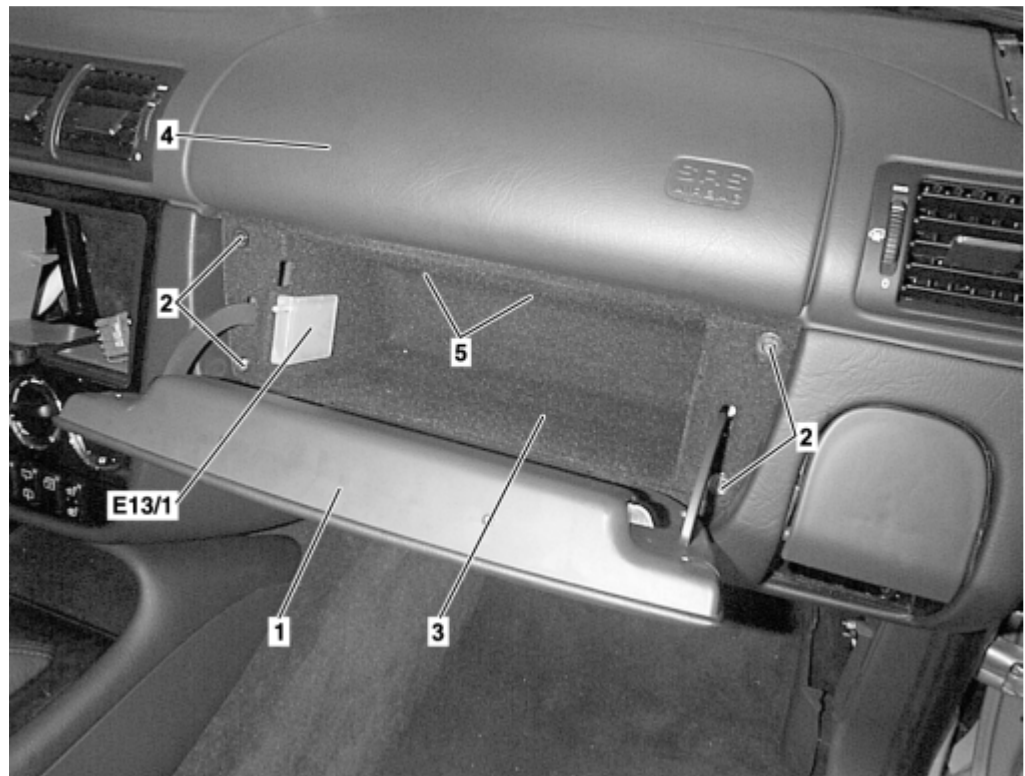

P68.10-2330-06

	Remove/Install		
1	Open glove compartment lid (1)		
2	Unclip glove compartment lamp (E13/1) and disconnect connector		
3	Unscrew bolt (2)	Torx bit set	000 589 01 10 00
4	Remove upper spreading rivets (5) from glove compartment (3)	Press pressure pin approx. 4 mm upward and remove spreading rivet downward.	
5	Pull glove compartment (3) out of instrument panel (4)		
6	Install in the reverse order	Align upper edge of glove compartment lid (1) in relation to instrument panel (4).	

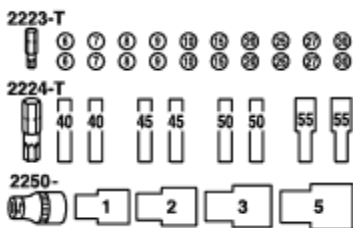

000 589 01 10 00

Torx bit set