


AR82.20-P-1100GZ	Remove/install front overhead control panel	22.11.05
------------------	---	----------

MODEL 164





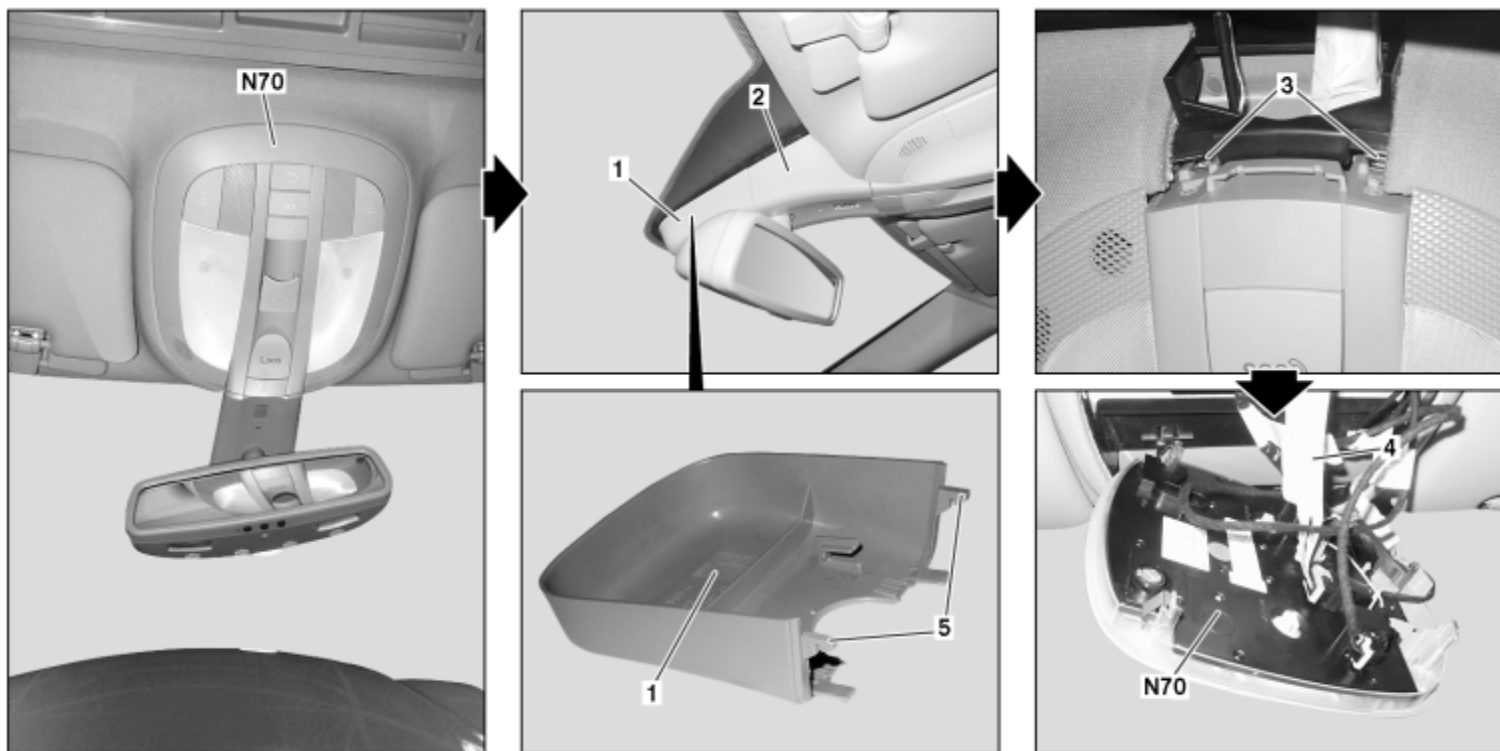


P82.20-2667-09

- 1 Front section, covering, rain/light sensor
- 2 Rear section, covering, rain/light sensor
- 3 Clamps
- 4 Ribbon cable

5 Catch lugs

N70 Overhead control panel control unit

	Remove/install		
	Information on preventing damage to electronic components due to	All models	AH54.00-P-0001-01A

	electrostatic discharge		
1	Switch off ignition and remove the transmitter key from the EIS [EZS] control unit	 On vehicles with Keyless Go, code 889: Press Keyless Go start/stop button repeatedly until ignition is switched off. Remove transmitter key from vehicle and store it in a location beyond its transmission range (at least 2 m).	
2	Unclip front section, covering, rain/light sensor (1) toward the front	 Carefully unclip tabs (5).	
3	Unclip rear section, covering, rain/light sensor (2) downward	 Carefully detach rear section of rain/light sensor covering from line.	
4	First unclip overhead control panel control unit (N70) at the front clips (3), then at the rear clips (3) and carefully remove downward	 Treat ribbon cable (4) carefully to prevent damage.	
		 Mounting wedge	110 589 03 59 00
5	Disconnect electrical connectors from overhead control panel control unit (N70)		
6	Install in the reverse order		
7	Carry out function check		



110 589 03 59 00

Mounting wedge