


MODEL 164 up to model year 2010

Shown on vehicle with code (249)
Automatically dimming inside rearview
mirror and outside mirror (driver)

- 1 Mirror glass
- 2 Retaining spring
- 3 Electrical connectors for mirror heater
- 4 Mirror dimming electrical connector

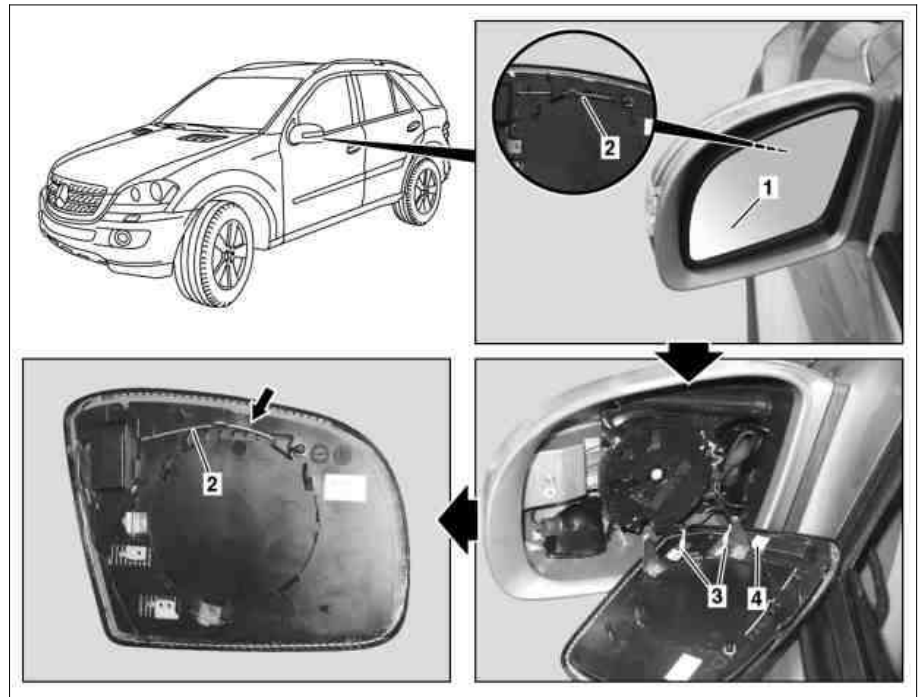

P88.70-2362-06

☒ ☒	Remove/install		
⚠ Danger!	Risk of injury Skin, eye and respiratory system irritation may occur through contact or inhalation of substances contained in the mirror lens	Wear protective gloves and safety glasses.	AS60.00-Z-0008-01R
1	Switch off ignition and remove the transmitter key from the EIS [EZS] control unit	i On vehicles with code (889) Keyless Go: Press keyless go start/stop button repeatedly until ignition is switched off. Remove transmitter key from vehicle and store it in a location beyond its transmission range (at least 2 m).	
2	Tilt out mirror lens (1) upward		
3	Press retaining spring (2) upward with suitable screwdriver and press mirror lens (1) off of mirror adjustment drive	i Installation: Clip mirror lens (1) into mirror adjustment drive from bottom upward. Observe retaining spring (2), fasteners on mirror lens as well as fasteners on mirror adjustment drive.	
4	Disconnect electrical connectors (3) from mirror heater		
5	Disconnect electrical connector from mirror dimming (4)	i On vehicles with code (249) Automatically dimming inside rearview mirror and outside mirror (driver)	
6	Install in the reverse order		
7	Clean mirror lens		
8	Carry out function check		