


## MODEL 251

with CODE (491) USA version

with CODE (536) SIRIUS satellite radio

with CODE (808) Model year 2008

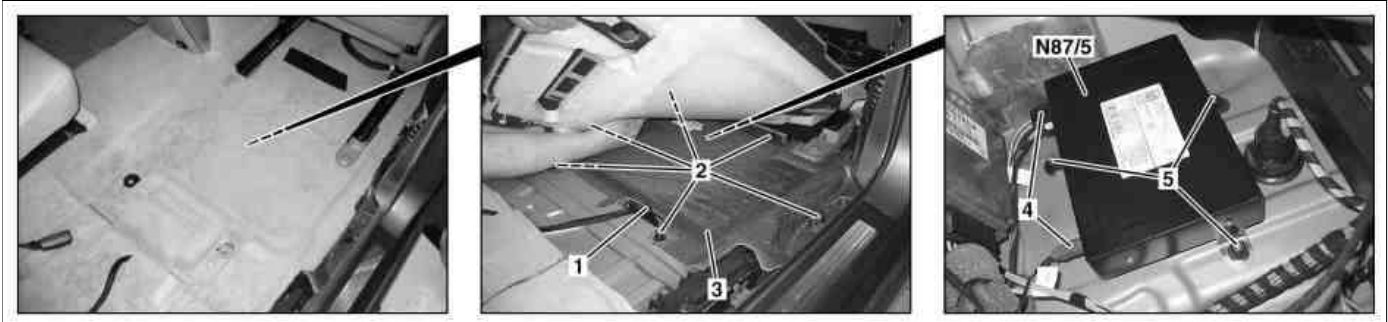

P82.60-5938-07

1 Bracket










2 Nuts

3 Intermediate bottom

4 Electrical connectors

5 Nuts

N87/5 SDAR control unit

 	Remove/install		
	Notes on avoiding damage to electronic components due to electrostatic discharge	All models	AH54.00-P-0001-01A
1	Turn key in ignition switch to position "0".	 On vehicles with Keyless-Go, code 889: Press keyless go start/stop button repeatedly until ignition is switched off	
2	Remove rear seat	 2nd seat row, right.	AR91.12-P-1000RT
3	Remove door sill molding	 Only right rear.	AR68.30-P-4100RT
4	Remove paneling on B-pillar	 Lower section only. Only on vehicles with center rear individual seat, code 225.	AR68.30-P-4700RT
5	Unclip anchoring lug cover		
6	Unscrew bolt beneath		*BA68.50-P-1001-03G
7	Remove anchoring lug	 <b>Installation:</b> Ensure that guide lugs are installed correctly.	
8	Unclip rear seat rail covers from front seat		
9	Lift center floor cover		
10	Unclip brackets (1)		
11	Remove nuts (2)		
12	Remove intermediate bottom (3)		
13	Separate electrical connectors (4)		
14	Remove nuts (5)		
15	Remove SDAR control unit (N87/5)		
16	Install in the reverse order		

 Cargo retainers

Number	Designation	Model 251
BA68.50-P-1001-03G	Bolt, cargo retainers to body	Nm 24