




AR91.12-P-1000GY	Removing and installing rear seat	9.1.06
------------------	-----------------------------------	--------

MODEL 164.8
40 % rear seat

- 1 Electrical connector
- 2 Rear seat
- 3 Bolts
- 4 Fabric trim
- 5 Cover
- 6 Bolts

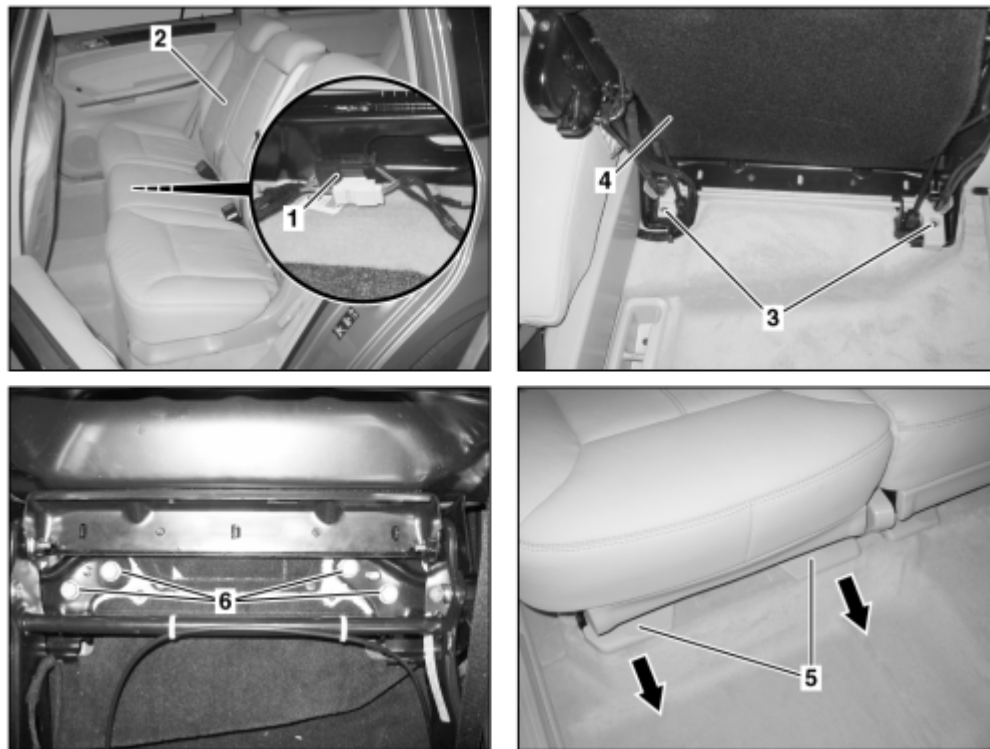

P91.12-2940-06

 	Remove/install		
1	Fold over 40 % rear seat		
2	Unscrew left bolt and right bolt on covering (5)		
3	Unclip covering (5) to front (arrows)		

4	Remove gas-operated strut on seat frame of 40 % rear seat		AR91.12-P-6005GY
5	Switch off ignition and remove the transmitter key from the EIS [EZS] control unit	i On vehicles with Keyless Go, code 889: Press Keyless Go start/stop button repeatedly until ignition is switched off. Remove transmitter key from vehicle and store it in a location beyond its transmission range (at least 2 m).	
6	Disconnect electrical connector (1)		
7	Remove bolts (3)		
8	Remove fabric trim (4)		
9	Remove bolts (6)	Nm	BA91.12-P-1002-03F
		Nm	BA91.12-P-1003-03F
10	Remove 40% rear seat		
11	Install in the reverse order		

Nm Rear seats

Number	Designation		Model 164.8
BA91.12-P-1002-03F	Bolt, rear seat console to front of vehicle floor	Nm	50
BA91.12-P-1003-03F	Bolt, rear seat console to rear of vehicle floor	Nm	90