



AR82.30-P-6800GZ	Remove/install wiper motor	22.7.04
------------------	----------------------------	---------

MODEL 164

1 Wiper linkage

2 Bolts

M6/1 Wiper motor

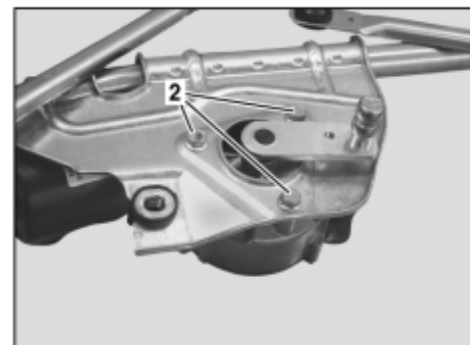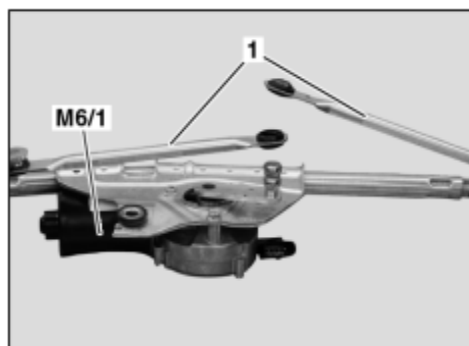


P82.30-2425-04

	Remove		
Danger!	Risk of injury in the form of trapping or crushing, or even severing of limbs, if caught in windshield wiper mechanism	Always remove ignition key when working on windshield wiper mechanism.	AS82.30-Z-0001-01A
1	Remove wiper system		AR82.30-P-6400GZ
2	Pry wiper linkage (1) off wiper motor (M6/1)	Long wedge	115 589 03 59 00
3	Remove bolts (2)		BA82.30-P-1001-01J
4	Remove wiper motor (M6/1)		
	Install		
5	Move wiper motor to parking position		AR82.30-P-6800-01GZ
6	Install wiper motor (M6/1)		
7	Tighten bolts (2)		BA82.30-P-1001-01J
8	Mount wiper linkage (1) on wiper motor (M6/1)		

9	Install wiper system	AR82.30-P-6400GZ
---	----------------------	----------------------------------

Nm Windshield wiper

Number	Designation		Nm	Model 164.1/8
BA82.30-P-1001-01J	Bolt on wiper motor		10	

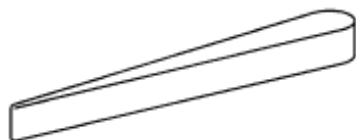

115 589 03 59 00

Long wedge