


P82.20-2667-09

- 1 Front section, covering, rain/light sensor
- 2 Rear section, covering, rain/light sensor
- 3 Clamps
- 4 Ribbon cable

- 5 Catch lugs
- N70 Overhead control panel control unit

☒ ☒	Remove/install		
⚠	Information on preventing damage to electronic components due to electrostatic discharge	All models	AH54.00-P-0001-01A
1	Switch off ignition and remove the transmitter key from the EIS [EZS] control unit	<ul style="list-style-type: none"> ⓘ On vehicles with Keyless Go, code 889: Press Keyless Go start/stop button repeatedly until ignition is switched off. Remove transmitter key from vehicle and store it in a location beyond its transmission range (at least 2 m). 	
2	Unclip front section, covering, rain/light sensor (1) toward the front	<ul style="list-style-type: none"> ⓘ Carefully unclip tabs (5). 	
3	Unclip rear section, covering, rain/light sensor (2) downward	<ul style="list-style-type: none"> ⓘ Carefully detach rear section of rain/light sensor covering from line. 	
4	First unclip overhead control panel control unit (N70) at the front clips (3), then at the rear clips (3) and carefully remove downward	<ul style="list-style-type: none"> ⚠ Treat ribbon cable (4) carefully to prevent damage. ☑ Mounting wedge 	*110589035900
5	Disconnect electrical connectors from overhead control panel control unit (N70)		
6	Install in the reverse order		
7	Carry out function check		

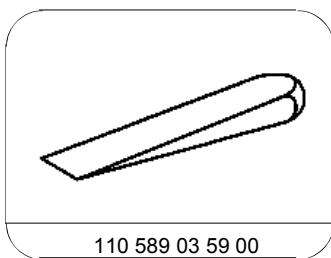

110 589 03 59 00

Mounting wedge