
MODEL 251, 164.8

Shown on model 251.1


1 Side paneling



P68.30-3160-03

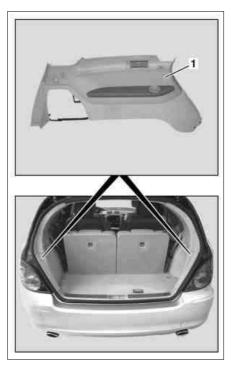



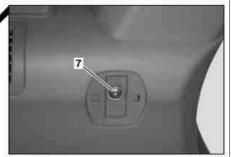

P68.30-3161-07

Shown on model 251.1 with rear air conditioning, code 582

- 2 Cover3 Bolt
- Shown on model 251.1

- 4 Bolt
- 5 Luggage hook

6 Cover 7 Bolt





P68.30-3162-04

X	Remove/install		
1.1	Remove load compartment cover	i Only on vehicles with luggage compartment cover, code 723.	
2	Open cover (2) and remove		
3	Remove screw (3)		
4	Unscrew bolt (4), remove luggage hook (5).		
5	Remove door sill molding in load compartment	Model 164.8	AR68.30-P-4100GZA

		Model 251	AR68.30-P-4100RTA
6.1	Unscrew seat belt bolt on body in second seat row.	i Only model 164.8.	
		Nm	*BA91.40-P-1001-01H
7	Fold over seats in second and third seat row.		
8	Remove door sill molding	i Only on rear door.	
		Model 164.8	AR68.30-P-4100GZ
		Model 251	AR68.30-P-4100RT
9	Unclip cover (6), unscrew bolt (7)	i At front and rear on side paneling (1).	
			*115589035900
10	Unclip side paneling (1) from clips (arrows A and B)	i Model 164.8: Only two clips (arrows A) on front end of side paneling (1).	
		Mounting wedge	*110589035900
11.1	Disconnect connector from 12 V socket	i If present.	
12.1	Disconnect connector on load compartment illumination	i If present.	
13.1	Disconnect connector on folding mechanism switch in 3rd seat row	i Model 164.8, if present	
14	Remove side paneling (1)		
15	Install in the reverse order		

$\overline{\text{Nm}}$ Seat belts/emergency tensioning retractors

Number	Designation		Models 164.1/8
BA91.40-P-1001-01H	Bolt to seat belt fitting	Nm	35

