


Model 118, 177, 247

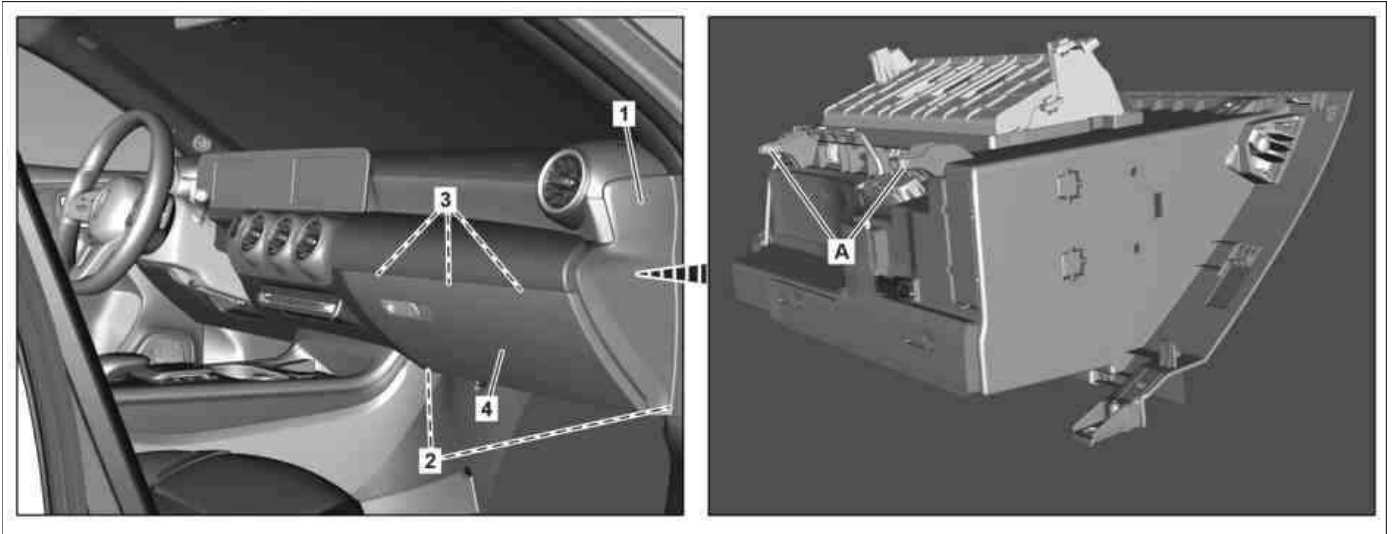

P68.10-5791-08

1 Cover
2 Bolts

3 Bolts
4 Glove compartment

	Information on preventing damage to electronic components due to electrostatic discharge		AH54.00-P-0001-01A
☒ ☒	Remove/install		
1	Switch off ignition and store transmitter key outside of transmission range (min. 2 m)		
2	Remove bottom paneling for instrument panel on passenger side		AR68.10-P-1502MFA
3	Remove edge guard in working area		
4	Unclip cover (1)		
5	Unscrew bolts (2)		
6	Remove screws (3) and glove compartment housing (4) until the electrical connectors are accessible	⚠ Do not crush or kink or subject electric lines to tension. This will result in damage to the electric lines and can impair their function.	
7	Release and disconnect electrical connections		
8	Remove glove box (4)	i Installation: Ensure that the guides (A) retract into the instrument panel support.	
9	Install in the reverse order		