


Model 166, 292

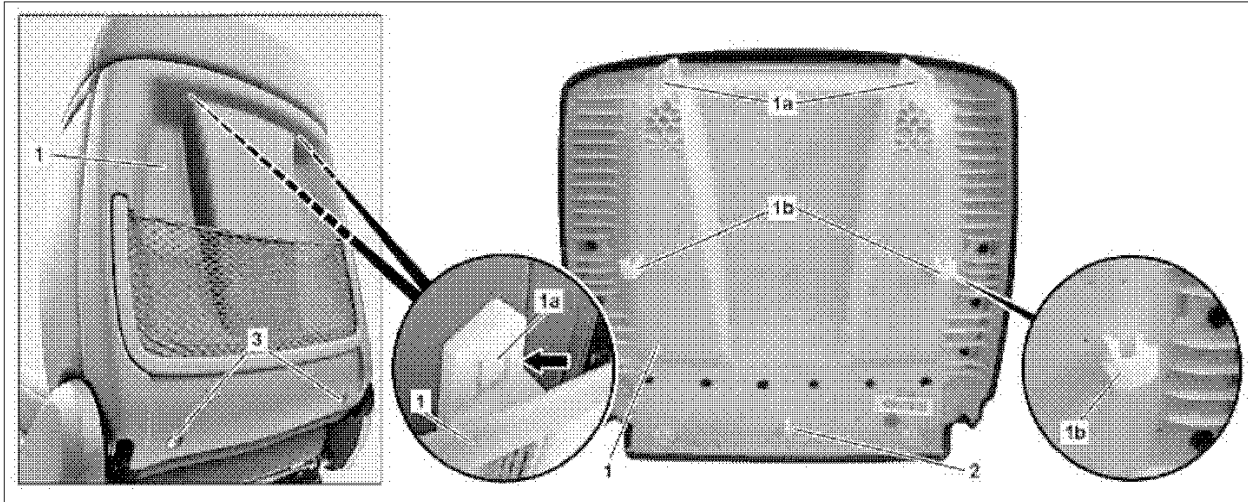

P91.10-3690-08

1 Seat-back lining
 1a Catch hook
 1b Catch hook

2 Guide
 3 Bolts

Danger !	Risk of injury . Moving parts can pinch, crush or, in extreme cases even sever extremities.	No parts of the body or limbs should be within the operating range of the mechanism when moving components.	AS00.00-Z-0009-01A
	Remove/install		
1	Move front seat and backrest all the way forward		
2	Remove bolts (3)		
3	Pull seat-back lining (1) at bottom toward rear out of guide (2) and release catch hooks (1b) from backrest at front	Note the catch hooks (1b) when removing the seat-back lining (1). They can be damaged otherwise.	
4	Press seat-back lining (1) at top in direction of travel (arrow), then strongly pull down and remove seat-back lining (1)	Note the catch hooks (1a) when removing the seat-back lining (1). The catch hooks (1a) may bend or break off. Installation: Remove bent or broken catch hooks (1a). The seat-back lining (1) can be used again.	
5	Install in the reverse order		